


LGH-F1200RVX2-E

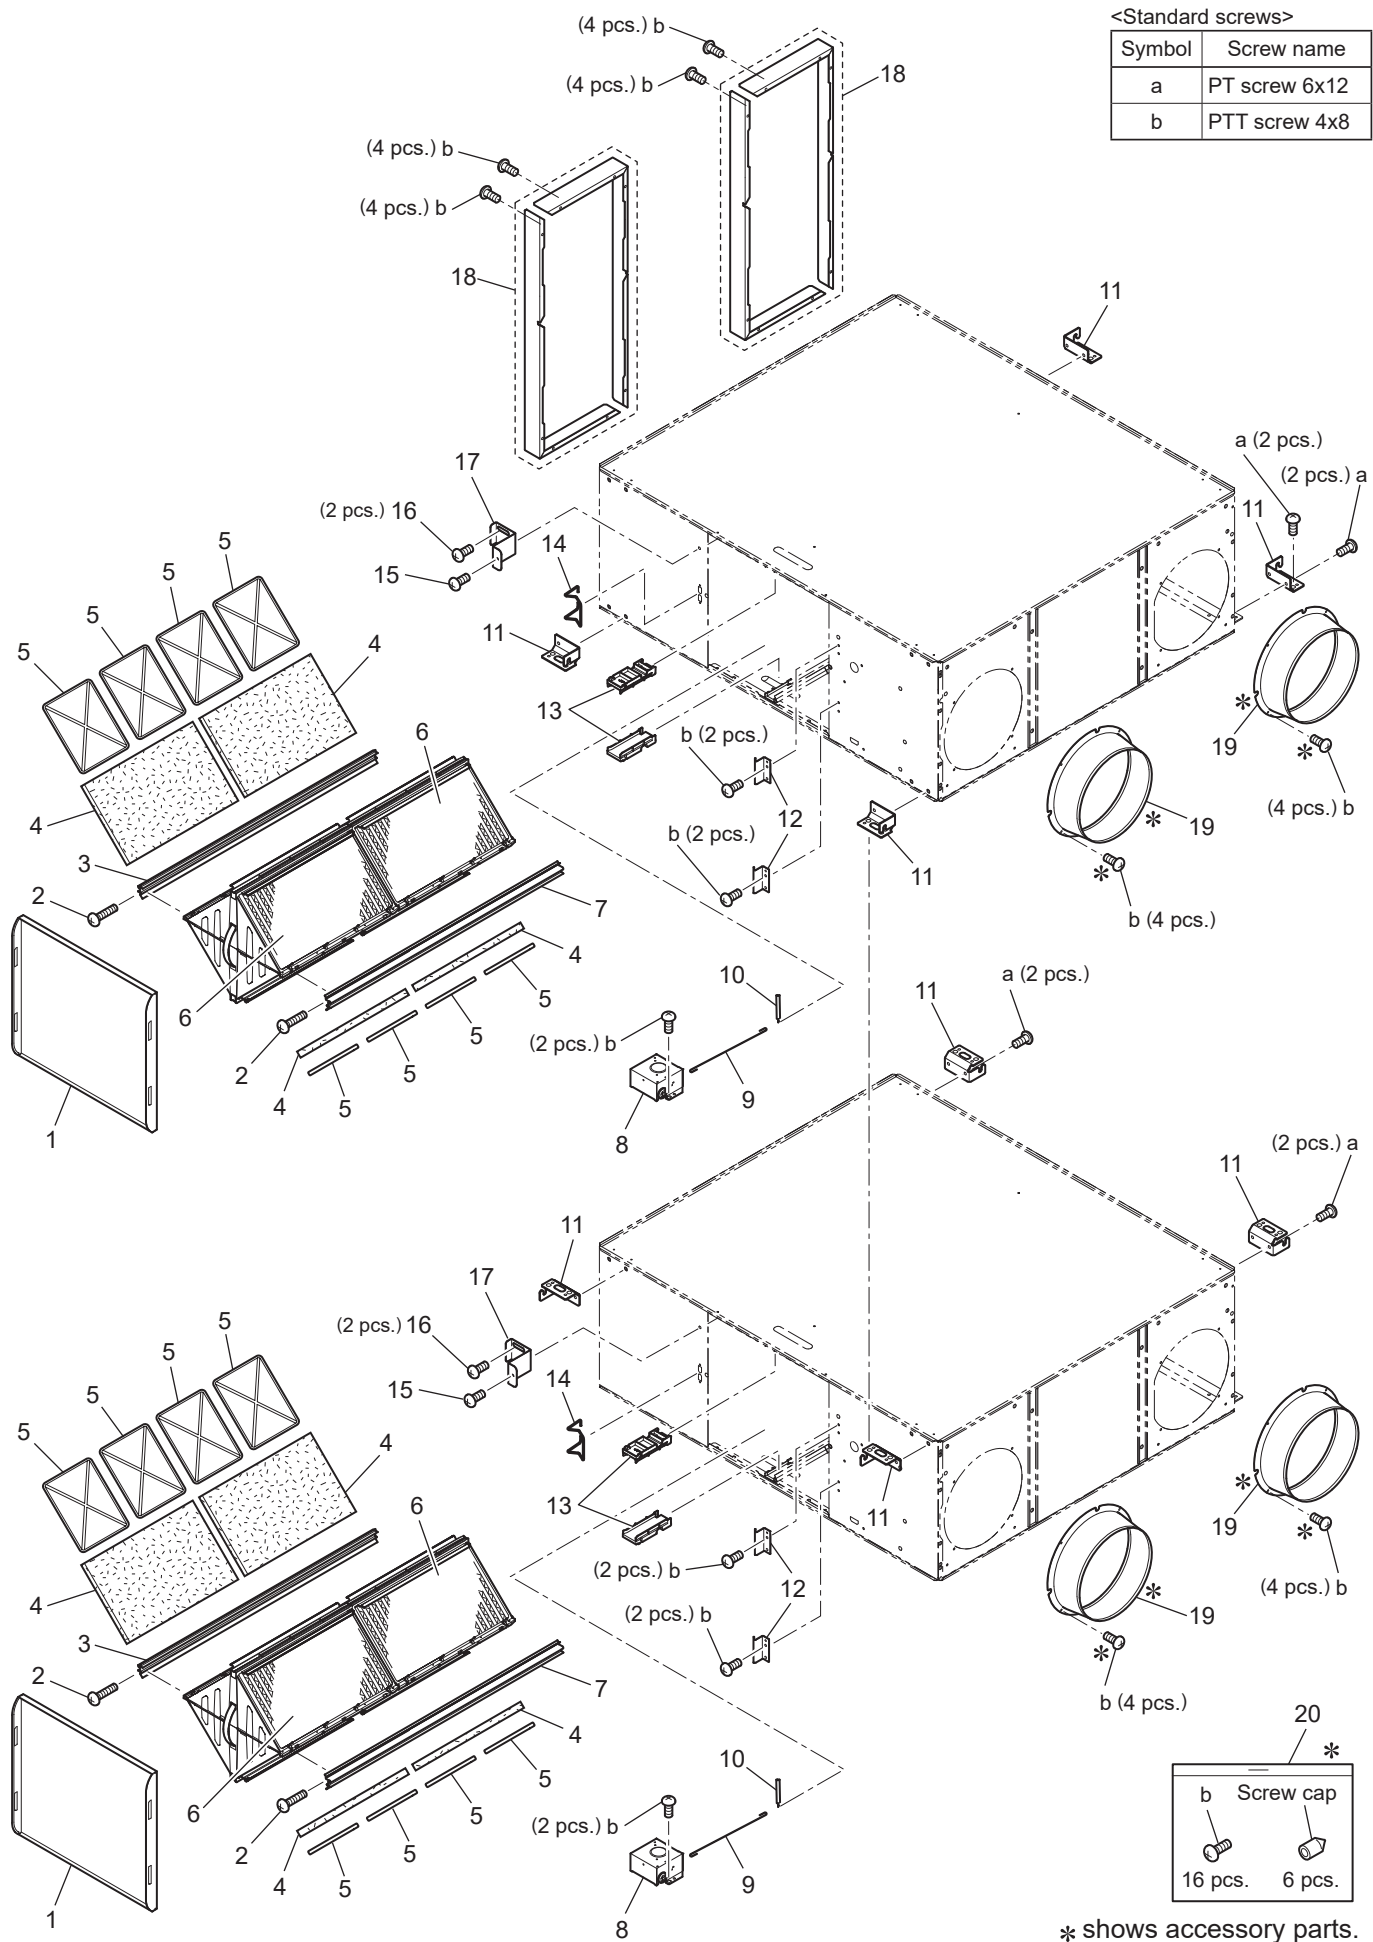


* shows accessory parts.


LGH-F1200RVX2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 013 711	2		
2	Special screw M4	W00 000 101	4		
3	Core guide L	W50 013 385	2		
4	Filter	W50 023 720	8	⚠	
5	Filter stopper	W50 016 711	16		
6	Lossnay core	W50 004 721	4	⚠	With the filter stoppers
7	Core guide R	W50 013 392	2		
8	GM assembly	W50 019 262	2	⚠	AC220・240V
9	Rod	W50 004 150	2		
10	Pull spring	W50 013 157	2		
11	Hanger	W50 001 382	8		
12	Fix piece	W50 013 722	4		
13	Lead support	W50 013 706	4		
14	Hinge	W50 004 344	2		
15	Special screw 4x8	W00 000 089	5		
16	Special screw 4x8	W00 000 098	4		
17	Fix piece	W50 004 731	2		
18	Flange (A/B)	W50 013 707	2		
19	Flange	W50 003 610	4		
20	Screws in bag	W50 013 052	1		

Air exhaust fan assembly

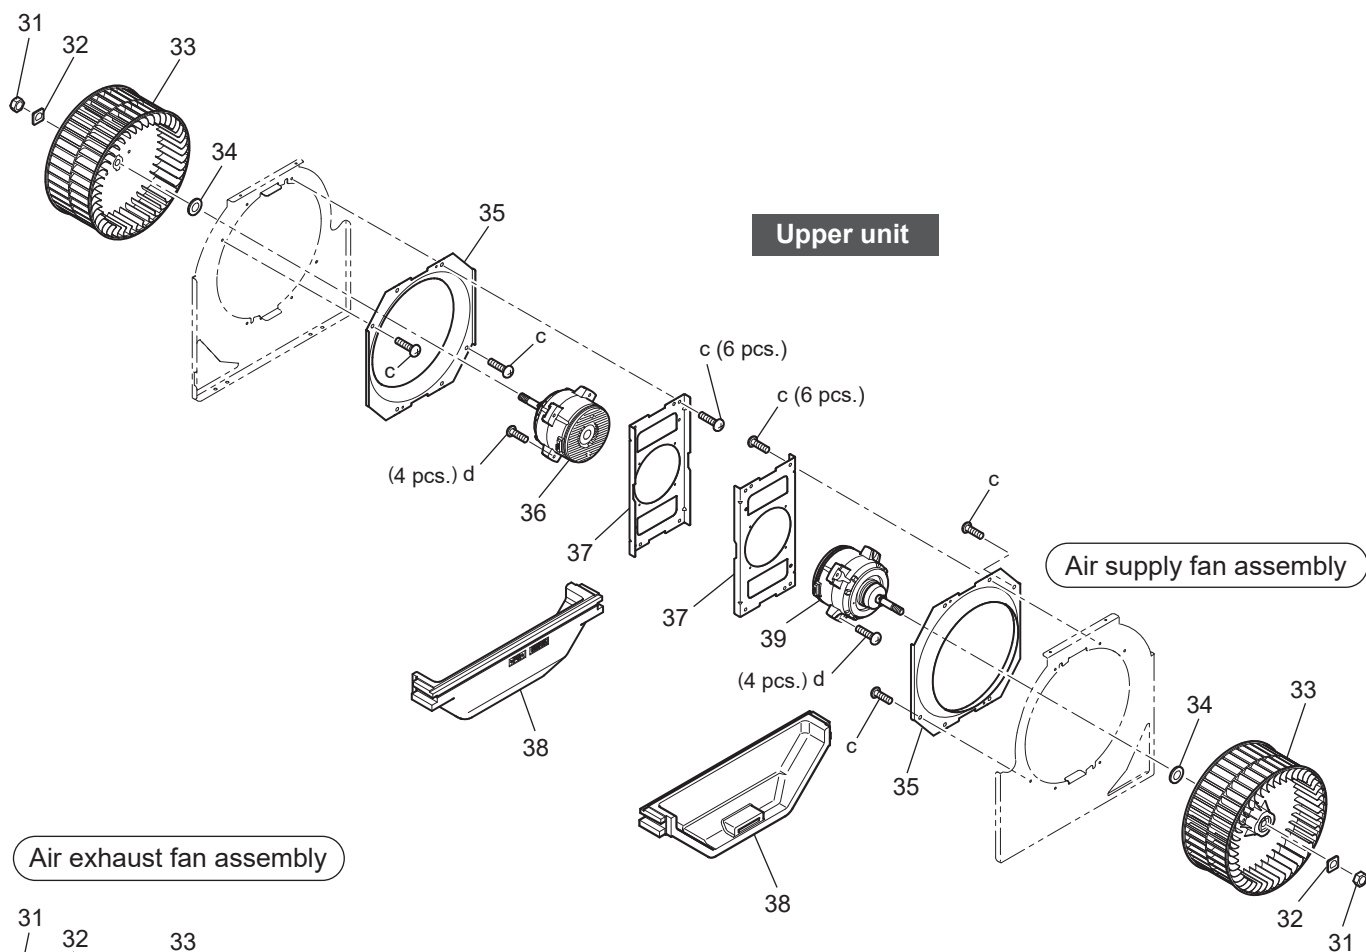

Air exhaust fan assembly

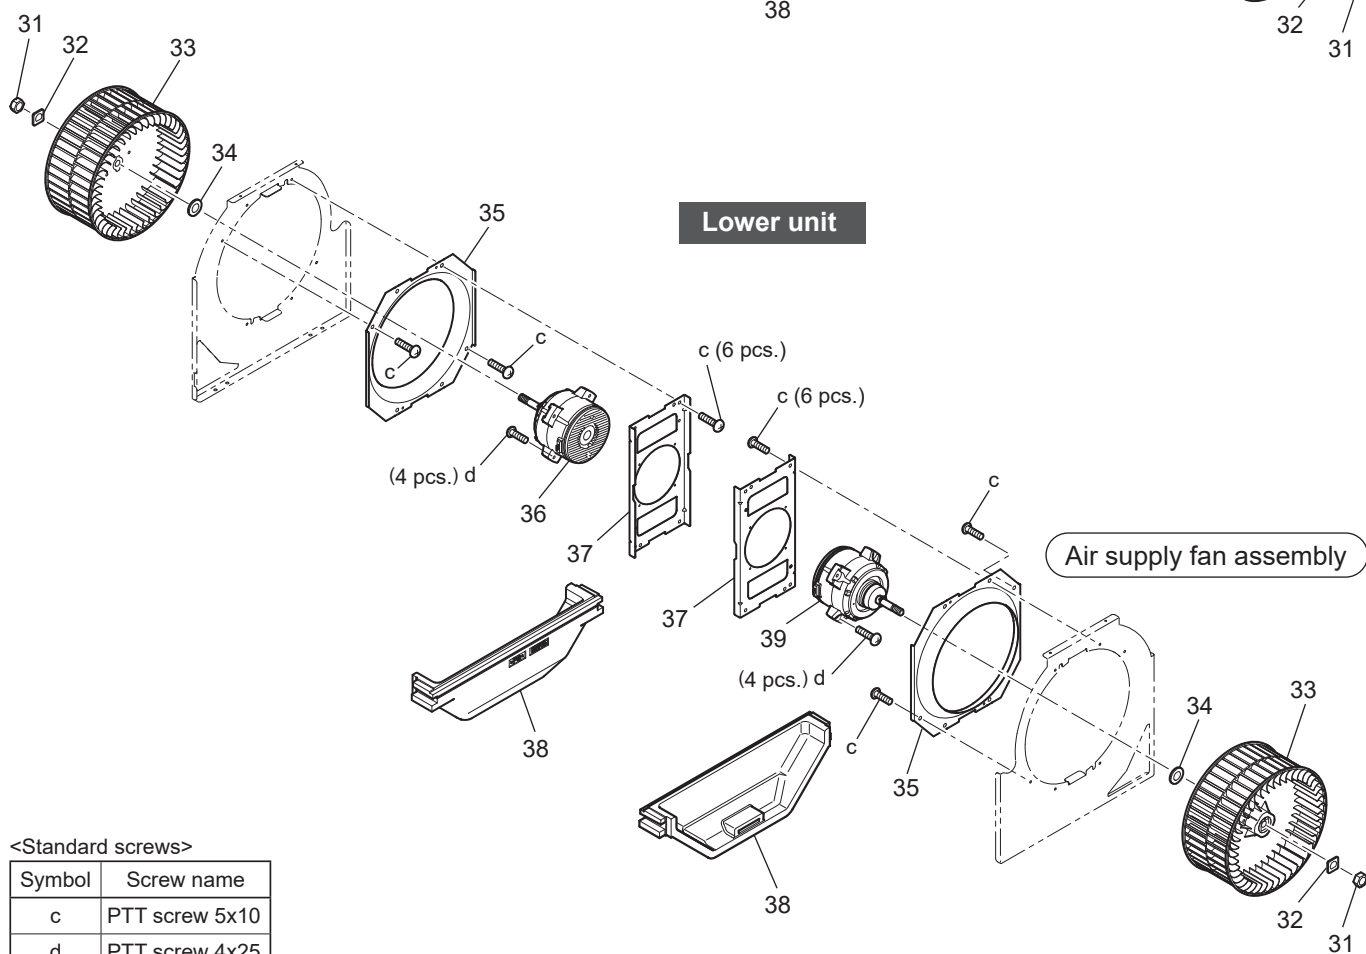


<Standard screws>

Symbol	Screw name
c	PTT screw 5x10
d	PTT screw 4x25

LGH-F1200RVX2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	Special nut (M12)	W00 000 117	4		Left-handed
32	Tab washer	W50 004 730	4		
33	Centrifugal fan	W50 004 482	4	⚠	Dia. 9 5/8 inch (245 mm)
34	Washer (12)	W00 000 123	4		Outer dia. 15/16 inch (24 mm)
35	Inlet ring	W50 004 725	4		
36	DC motor (EA)	W50 023 458	2	⚠	
37	Motor fix plate	W50 004 736	4		
38	Separator	W50 013 487	4		
39	DC motor (SA)	W50 023 457	2	⚠	


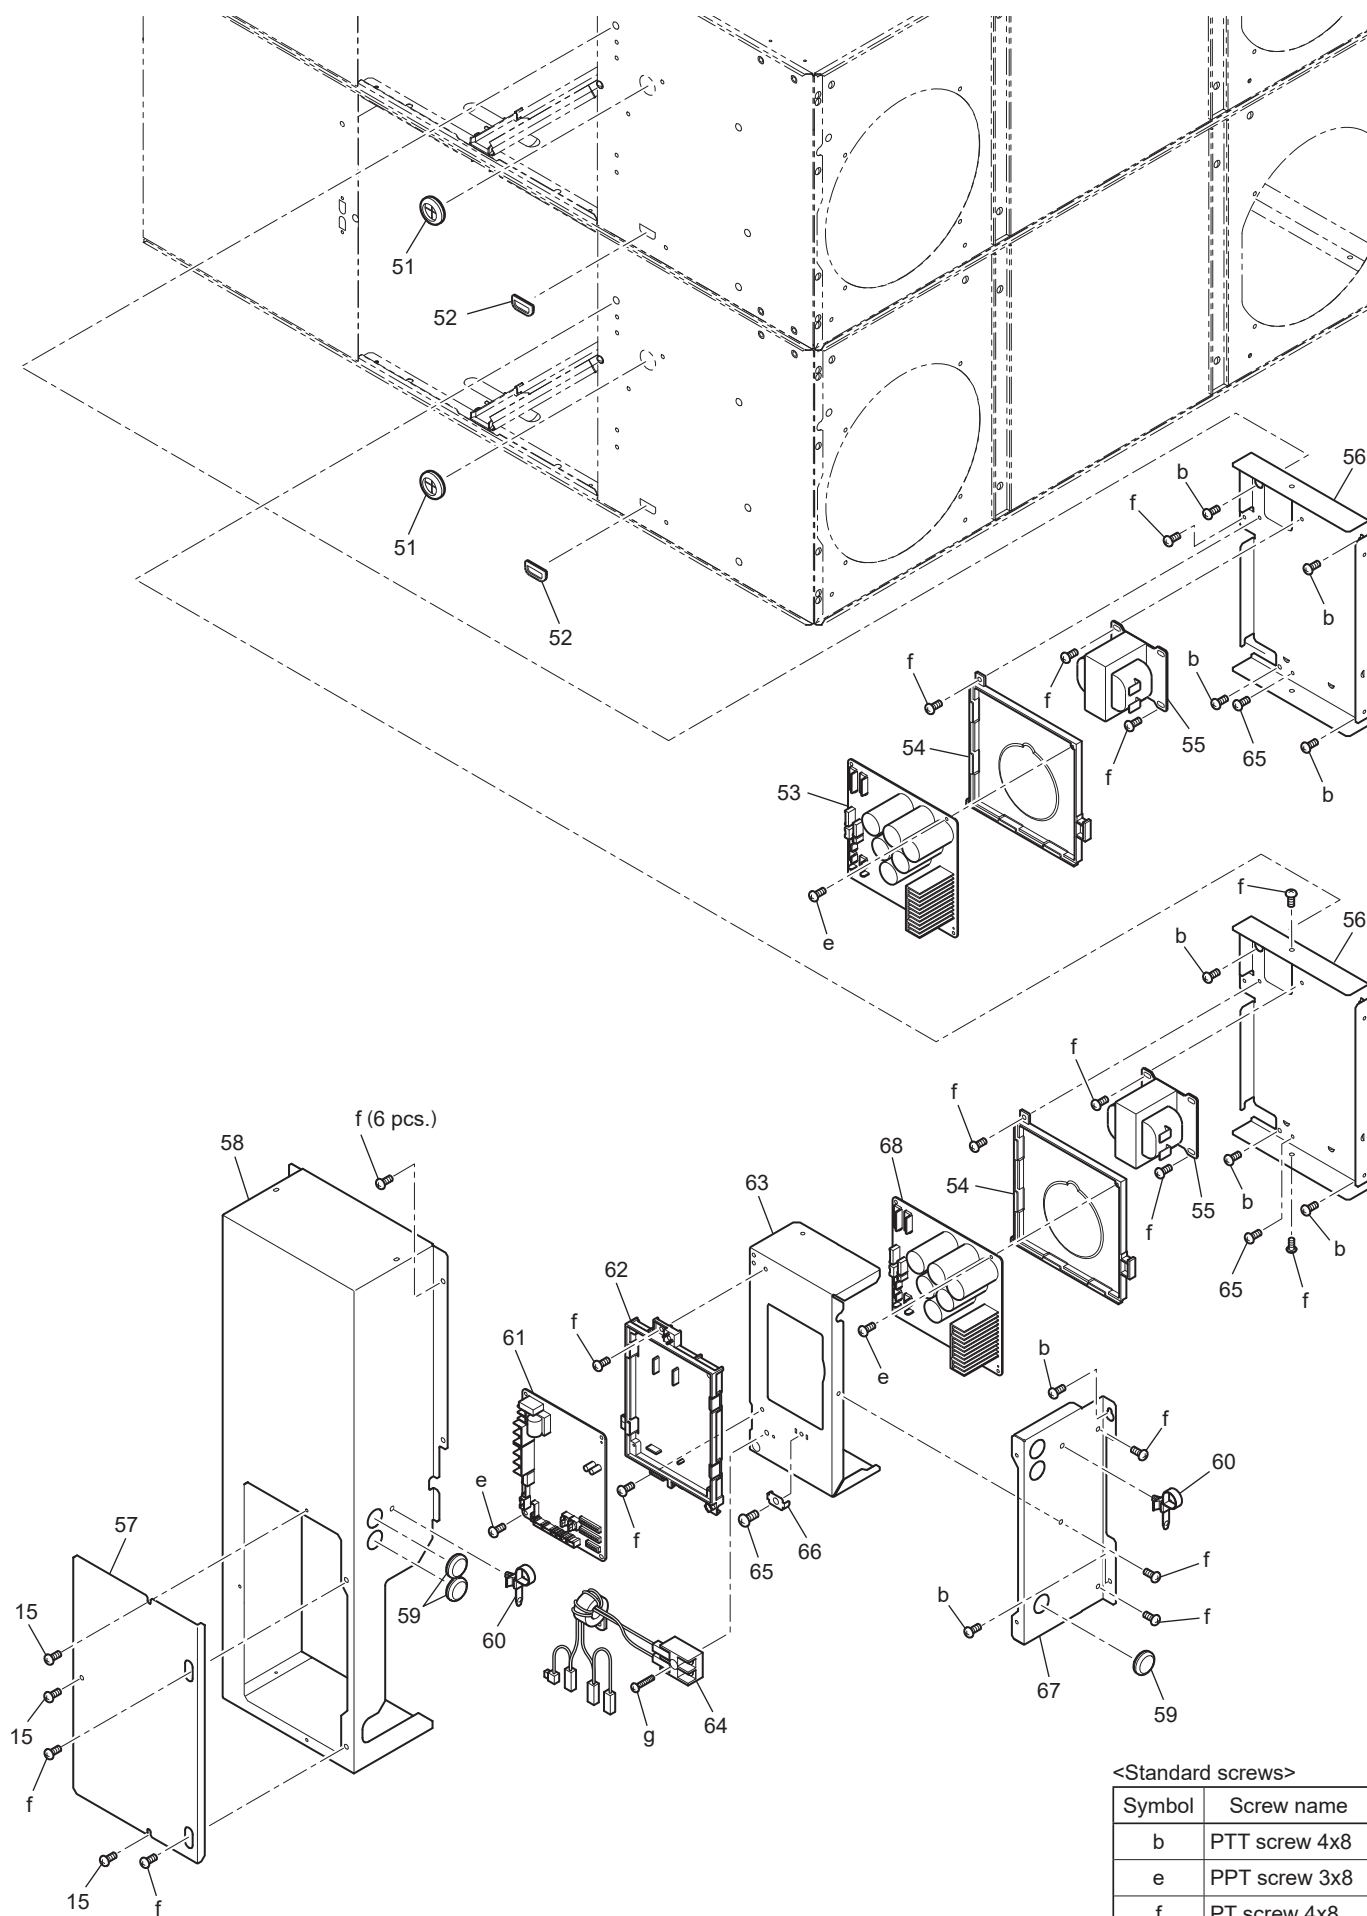


<Standard screws>

Symbol	Screw name
b	PTT screw 4x8
e	PPT screw 3x8
f	PT screw 4x8
g	PPT screw 4x20

LGH-F1200RVX2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
51	Cord bush	W00 000 277	2		
52	Bush	W00 000 278	2		
53	Circuit board	W50 023 172	1	⚠	Power, Upper
54	PCB case	W50 021 380	2		
55	Reactor	W50 004 180	2	⚠	AC6.5A
56	Control base	W50 019 704	2		
57	Control cover	W50 019 709	1		
58	Control box cover	W50 019 708	1		
59	Cord bush	W00 000 270	3		
60	Cord band	W00 000 258	2		
61	Circuit board	W50 021 171	1	⚠	Control
62	PCB fix plate	W50 021 706	1		
63	Sub control base	W50 021 715	1		
64	Terminal block	W50 023 214	1	⚠	2P, With the lead wires
65	PT screw 4x8 BS	W00 000 011	3		
66	Earth fix plate	W82 001 706	1		
67	Side plate	W50 019 706	1		
68	Circuit board	W50 023 171	1	⚠	Power, Lower

 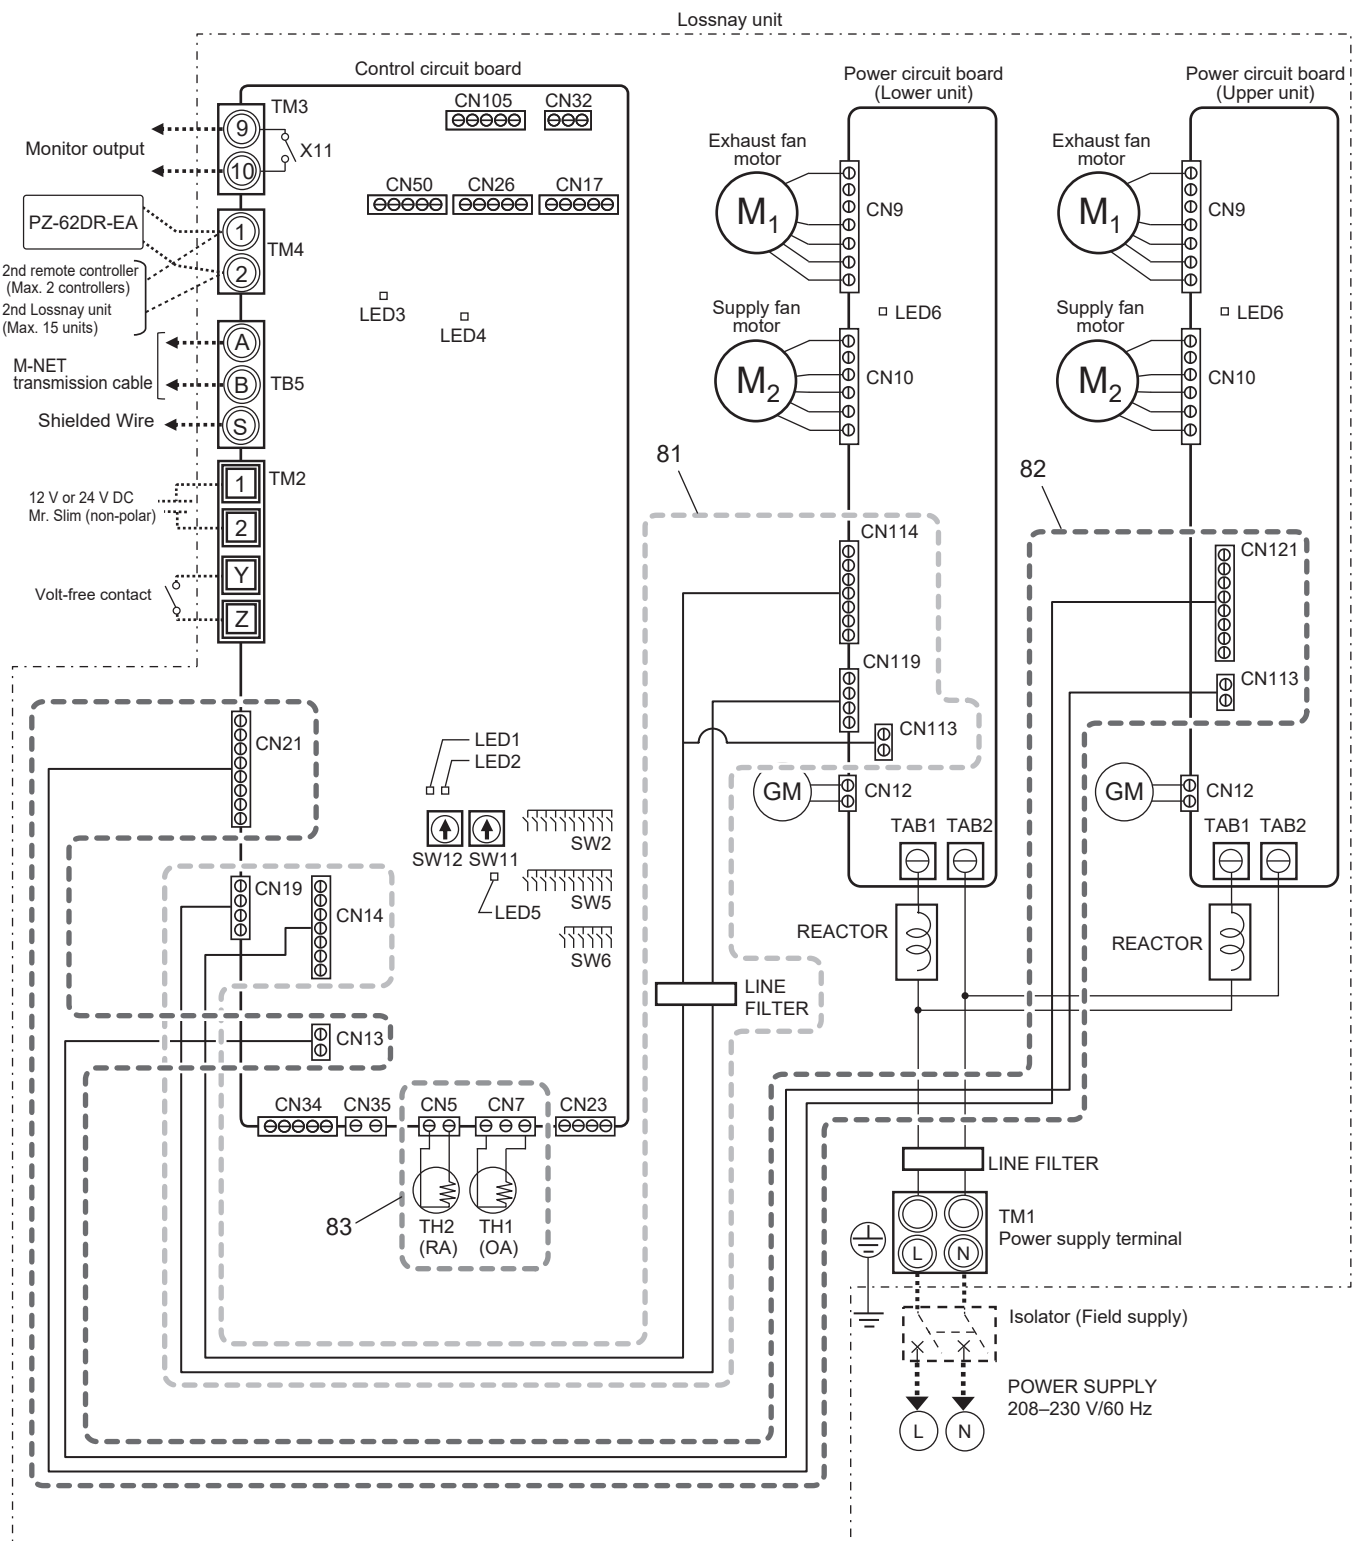

LGH-F1200RVX2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Lead wire	W50 023 213	1	△	
82	Lead wire	W50 021 214	1	△	
83	Thermistor	W50 023 168	1	△	OA・RA set
84	Lead wire	W50 004 231	1	△	3 15/16 inch (100 mm)