

LOSSNAY ENERGY RECOVERY VENTILATOR PARTS CATALOG

MODELS

TLGHF0300RVX02A



TLGHF0380RVX02A

TLGHF0470RVX02A

TLGHF0600RVX02A

TLGHF0940RVX02A

TLGHF1200RVX02A

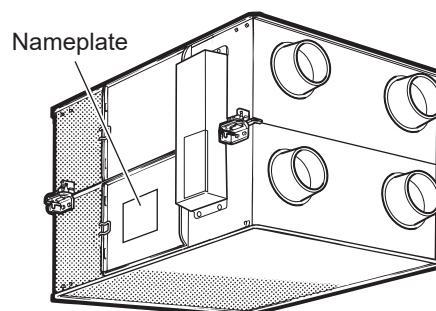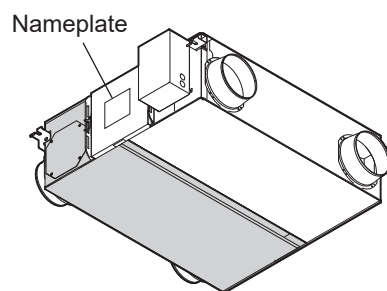

Warning:

Repair work must be performed by the manufacturer, its service agent or a similarly qualified person in order to avoid hazards.

Contents

Parts catalog	3-52
TLGHF0300RVX02A	5-12
TLGHF0380RVX02A	13-20
TLGHF0470RVX02A	21-28
TLGHF0600RVX02A	29-36
TLGHF0940RVX02A	37-44
TLGHF1200RVX02A	45-52

HANDBOOK (U308H)

Parts catalog

Please note the following when using the parts catalog.

1. When ordering parts, the part number, part name, and the number of parts are required.
2. It may take time for you to receive the parts. Make an inquiry about a rush order.
3. Specifications may be subject to change without notice.
4. Parts marked with ⚠ and  are critical for safety.
5. To maintain safety and performance, use the parts specified in the parts catalog.
6. When replacing the parts to which the nameplate is attached, remove the nameplate and attach it to the new parts.

Description of screw abbreviations



Abbreviation	Description
PC screw	Cross recess flat head machine screw
PRC screw	Cross recess oval head machine screw
PP screw	Cross recess pan head machine screw
SW · PP screw	Cross recess pan head screw with spring washer
PPT screw	Cross recess tapping screw
PCT screw	Cross recess flat head tapping screw
PTT screw	Cross recess truss head tapping screw
PT screw	Cross recess truss head machine screw
SET screw	Slotted head stop screw
SQ · SET screw	Square head stop screw
P · SET screw	Pan head stop screw
PMT screw	Primer truss head screw
HS · SET screw	Hexagon head stop screw
P · R · W screw	Cross recess round wood screw
P · C · W screw	Cross recess flat head wood screw
P · R · C · W screw	Cross recess round and flat wood screw
R · W screw	Slotted round wood screw
PW · PP screw	Cross recess pan head screw with small washer
SW-PW · PP screw	Cross recess pan head machine screw with spring washer and flat washer

Changing of control PCB service part No. for TLGHFRVX02A series.

Because software of this model has been updated and added new function from July 2024 mass-production, control PCB service parts No. will change.

Please confirm the compatibility of service parts No. against product serial No. shown in the below table.

Service part No. of control PCB		Product Serial No.	
		less than 24070001	24070001 or more
Previous	W50021171	OK	NG*
New	W50025171	OK	OK

New functions added from July 2024 mass-production.

- Leader follower control
- Constant pressure control
- Making mixed Lossnay group with various series (FRVX02 and FRVXT02)
- Expansion of temperature setting to start pre-heater output
(Please see manuals for details of each function)

*Even product Serial No. is 24070001 or more, if these new function is not used in the site, previous control PCB part (W50021171) can be used.




LOSSNAY

TLGHF0940RVX02A LGH-F940RVX2-E

MODEL TLGHF0940RVX02A

208-230V~ Single Phase 60Hz 8.10A 1450W

Minimum ampacity required for the supply circuit conductor 10.13 A

Maximum ampere rating of supply circuit fuse 15 A

Supply Air Motor 1.32 A 0.37 HP Thermally protected

Exhaust Air Motor 1.37 A 0.42 HP Thermally protected

Other Load 0.10 A

WARNING

Danger of electric shock, always disconnect power source before servicing

Motor Thermally Protected

User Copper Conductors Only

Not For Outdoor Use

Please refer to installation manual for further information.

AVERTISSEMENT

Danger de choc électrique, toujours déconnectez la source du pouvoir avant d'entretenir

Le moteur a protégé de façon thermique

Utilisez seulement des conducteurs du cuivre

Pas pour usage de plein air

Veuillez faire référence à installation manuelle pour l'information supplémentaire.

Serial No. D


MITSUBISHI ELECTRIC CORPORATION

<H> C

Wiring Diagram

NOTE


1. TM1, TM2, TM3, TM4 and TB5 shown in dotted lines are field work. Refer to installation manual for details.
2. Make sure to connect the ground wire.
3. Cut off power supply more than 5 minutes prior to access the electrical parts.
4. Make sure to cut M-NET power supply during Lossnay wiring, otherwise it causes malfunction.
5. Do not pull out motor connector during power supply on. It causes motor failure.

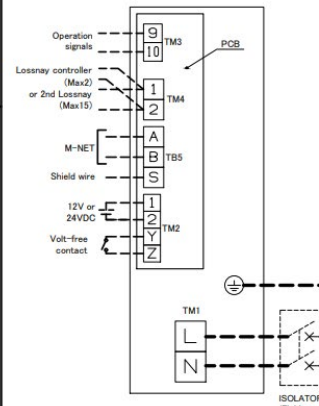

368P137B4

Serial No. can be found on the name label.
Please check it before starting to replace control pcb.

Structural parts

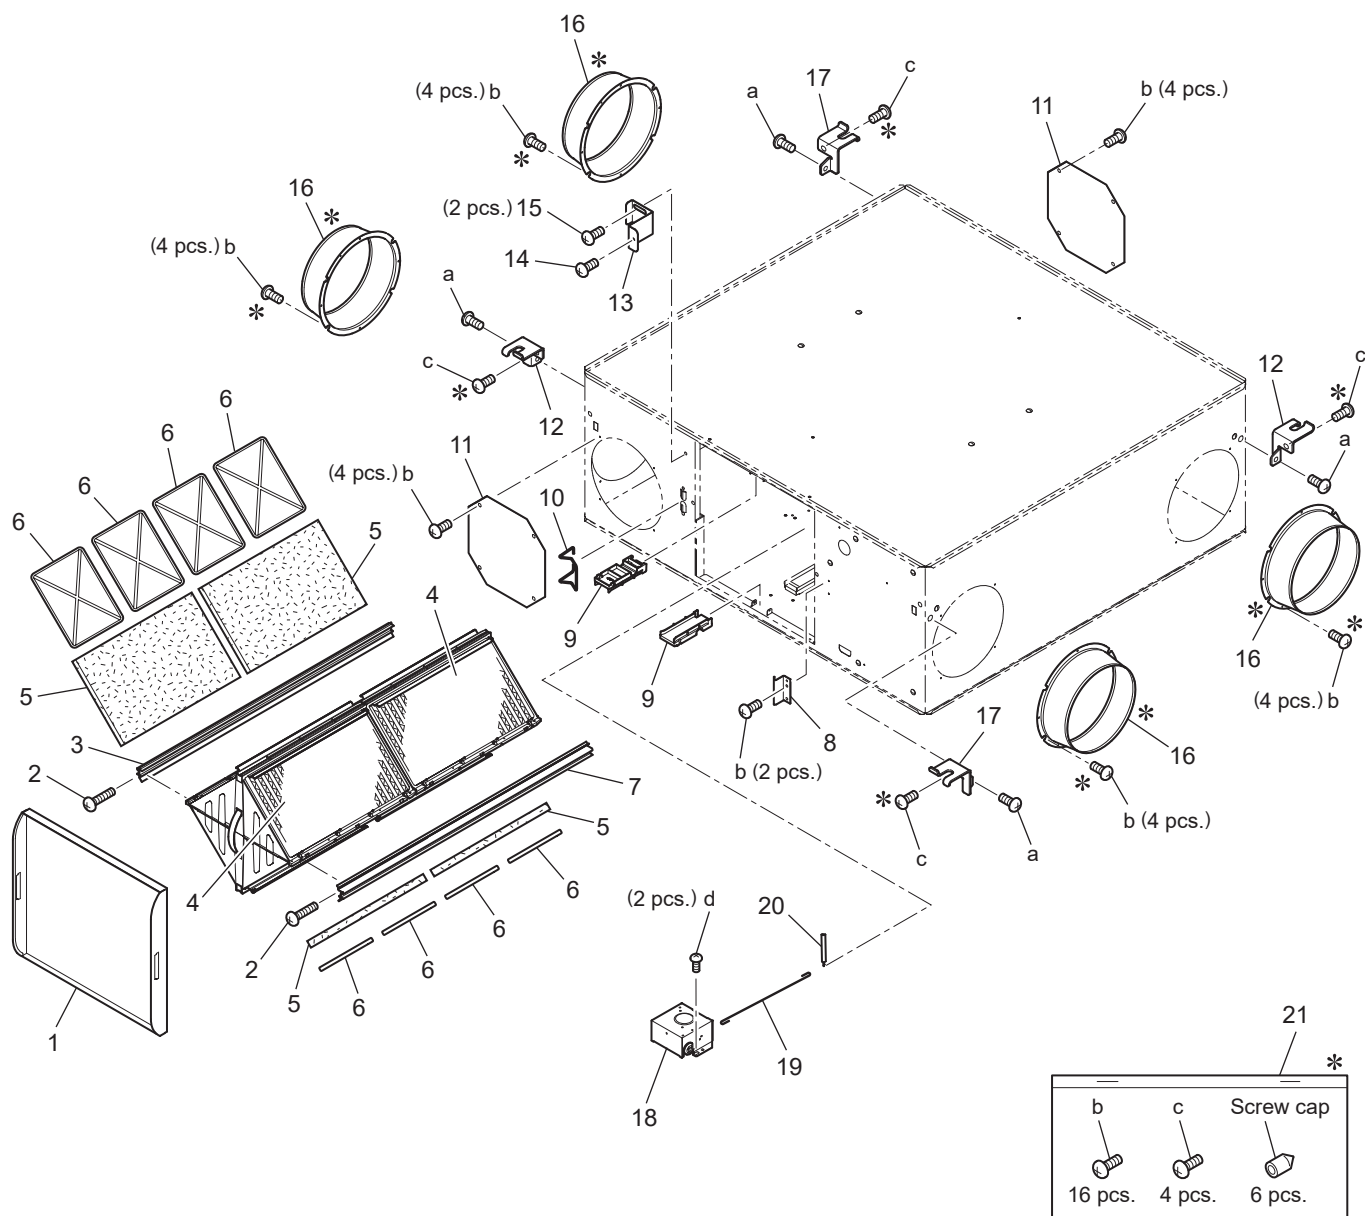

<Standard screws>

Symbol	Screw name
a	PT screw 6x12
b	PTT screw 4x8
c	PT screw 5x10
d	PTT screw 4x6

* shows accessory parts.


Structural parts

TLGHF0300RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 013 709	1		
2	Special screw M4	W00 000 101	2		
3	Core guide L	W50 013 382	1		
4	Lossnay core	W50 004 719	2	⚠	With the filter stoppers
5	Filter	W50 023 717	4	⚠	
6	Filter stopper	W50 016 710	8		
7	Core guide R	W50 013 389	1		
8	Fix piece	W50 013 722	1		
9	Lead support	W50 013 705	2		
10	Hinge	W50 004 344	1		
11	Cover	W50 003 707	2		
12	Hanger L	W36 002 380	2		
13	Fix piece	W50 004 731	1		
14	Special screw 4x8	W00 000 089	4		
15	Special screw 4x8	W00 000 098	2		
16	Flange	W50 004 609	4		
17	Hanger R	W50 004 380	2		
18	GM assembly	W50 019 260	1	⚠	AC220·240V
19	Rod	W50 013 151	1		
20	Pull spring	W50 013 156	1		
21	Screws in bag	W50 013 051	1		

Fan parts

Air exhaust fan assembly

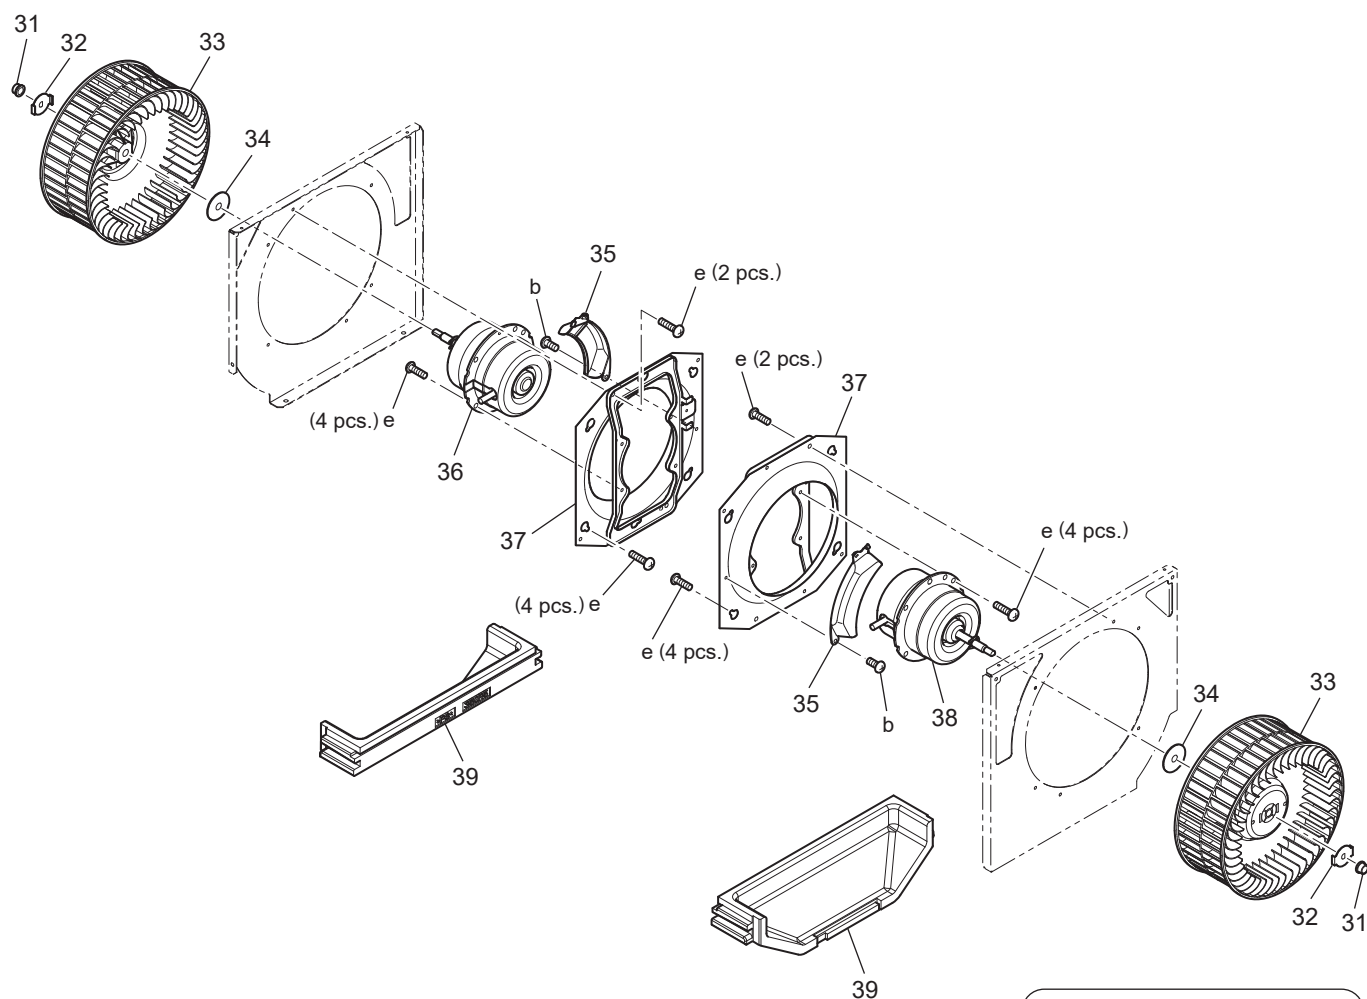

Air supply fan assembly

<Standard screws>

Symbol	Screw name
a	PTT screw 4x8
e	PTT screw 5x10

Fan parts


TLGHF0300RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	Special nut (M8)	W00 000 121	2		Left-handed
32	Tab washer	W00 000 134	2		
33	Centrifugal fan	W50 013 481	2	⚠	Dia. 8 3/4 inch (220 mm)
34	Special washer (10)	W50 003 478	2		Outer dia. 1 37/64 inch (40 mm)
35	Air guide	W50 013 508	2		
36	DC motor (EA)	W50 023 454	1	⚠	With the ferrite core
37	Motor fix plate	W50 013 723	2		
38	DC motor (SA)	W50 023 453	1	⚠	With the ferrite core
39	Separator	W50 013 486	2		

Control parts

<Standard screws>

Symbol	Screw name
b	PTT screw 4x8
f	PPT screw 3x8
g	PT screw 4x8
h	PPT screw 4x20

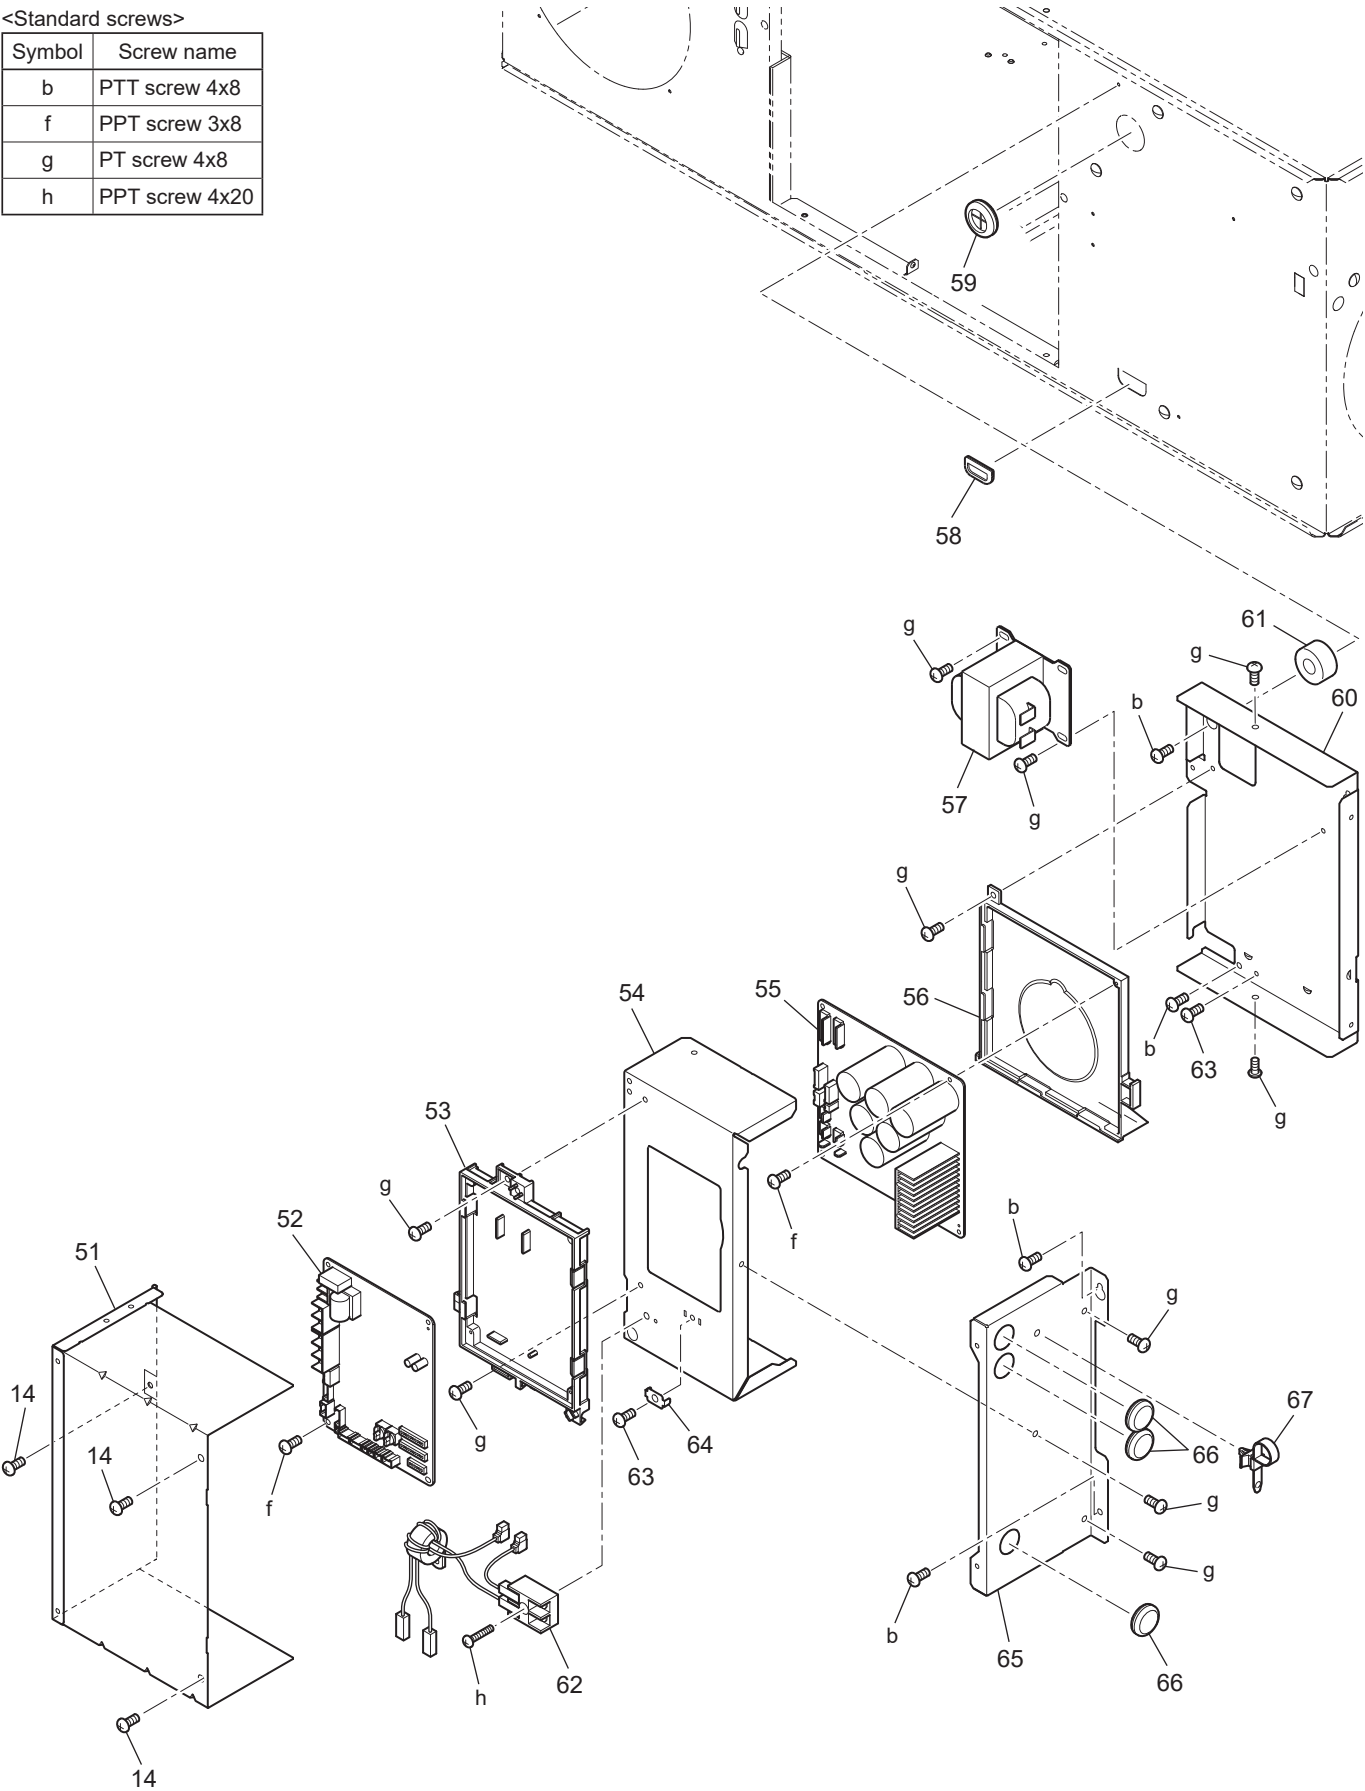


Control parts

TLGHF0300RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
51	Control box cover	W50 019 707	1		
52	Circuit board	W50 025 171	1	⚠	Control
53	PCB fix plate	W50 021 706	1		
54	Sub control base	W50 021 715	1		
55	Circuit board	W50 021 172	1	⚠	Power
56	PCB case	W50 021 380	1		
57	Reactor	W50 028 180	1	⚠	White · AC10A
58	Bush	W00 000 278	1		
59	Cord bush	W00 000 277	1		
60	Control base	W50 019 704	1		
61	Ferrite core	W50 023 179	1	⚠	
62	Terminal block	W50 021 213	1	⚠	2P, With the lead wires
63	PT screw 4x8 BS	W00 000 011	2		
64	Earth fix plate	W82 001 706	1		
65	Side plate	W50 019 706	1		
66	Cord bush	W00 000 270	3		
67	Cord band	W00 000 258	1		

Wiring parts

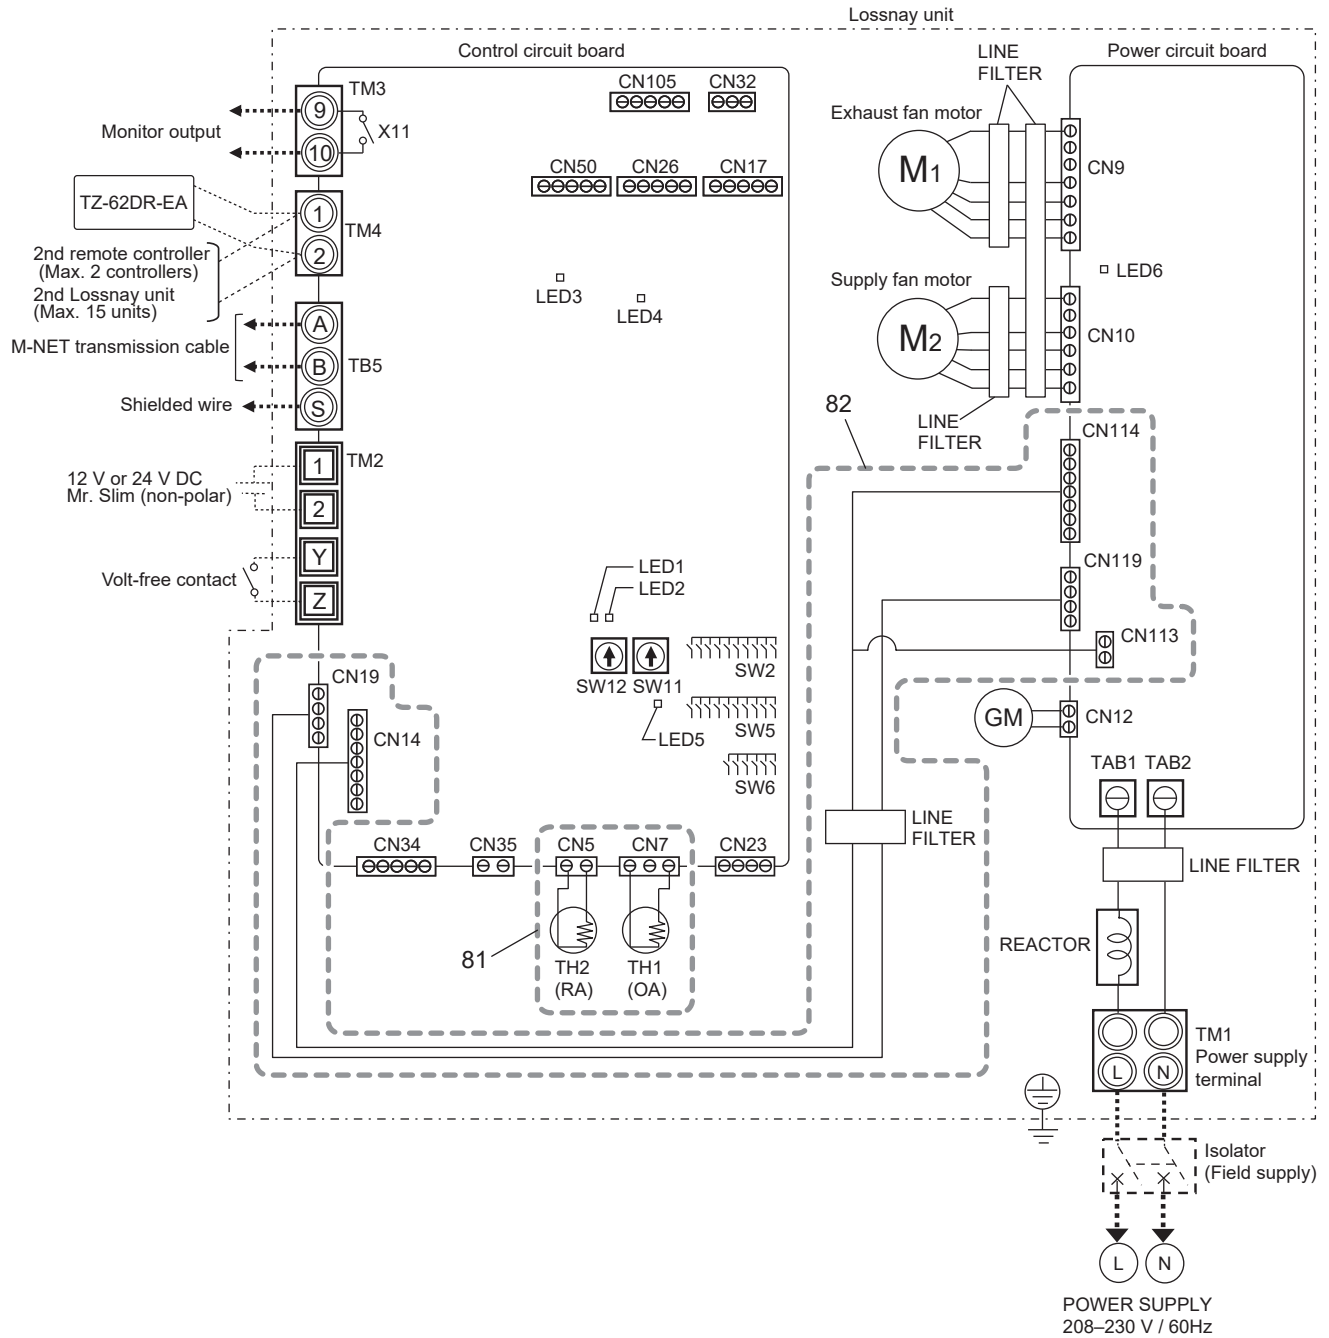


Wiring parts

TLGHF0300RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Thermistor	W50 023 167	1	△	OA・RA set
82	Lead wire	W50 021 214	1	△	
83	Lead wire	W50 004 231	1	△	3 15/16 inch (100 mm)

Structural parts

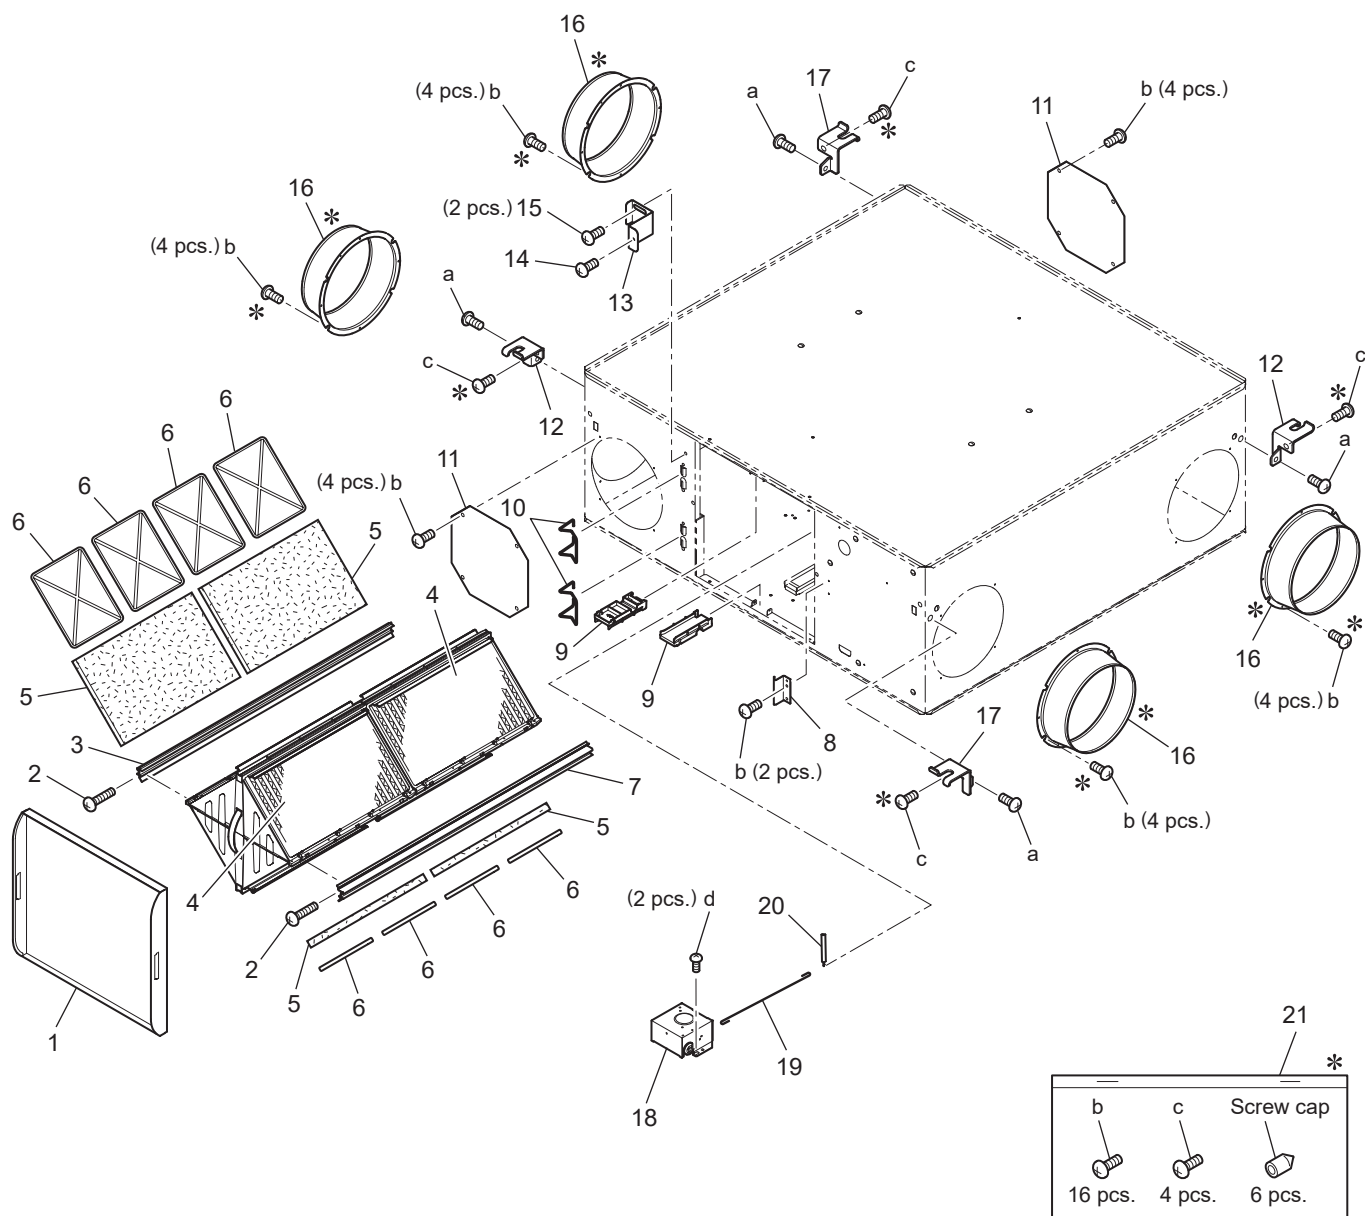

<Standard screws>

Symbol	Screw name
a	PT screw 6x12
b	PTT screw 4x8
c	PT screw 5x10
d	PTT screw 4x6

* shows accessory parts.


Structural parts

TLGHF0380RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 013 710	1		
2	Special screw M4	W00 000 101	2		
3	Core guide L	W50 013 383	1		
4	Lossnay core	W50 023 710	2	⚠	With the filter stoppers
5	Filter	W50 023 718	4	⚠	
6	Filter stopper	W50 023 711	8		
7	Core guide R	W50 013 390	1		
8	Fix piece	W50 013 722	1		
9	Lead support	W50 013 705	2		
10	Hinge	W50 004 344	2		
11	Cover	W50 003 707	2		
12	Hanger L	W36 002 380	2		
13	Fix piece	W50 004 731	1		
14	Special screw 4x8	W00 000 089	4		
15	Special screw 4x8	W00 000 098	2		
16	Flange	W50 004 609	4		
17	Hanger R	W50 004 380	2		
18	GM assembly	W50 023 260	1	⚠	AC220·240V
19	Rod	W50 013 150	1		
20	Pull spring	W50 013 157	1		
21	Screws in bag	W50 013 051	1		

Fan parts

Air exhaust fan assembly

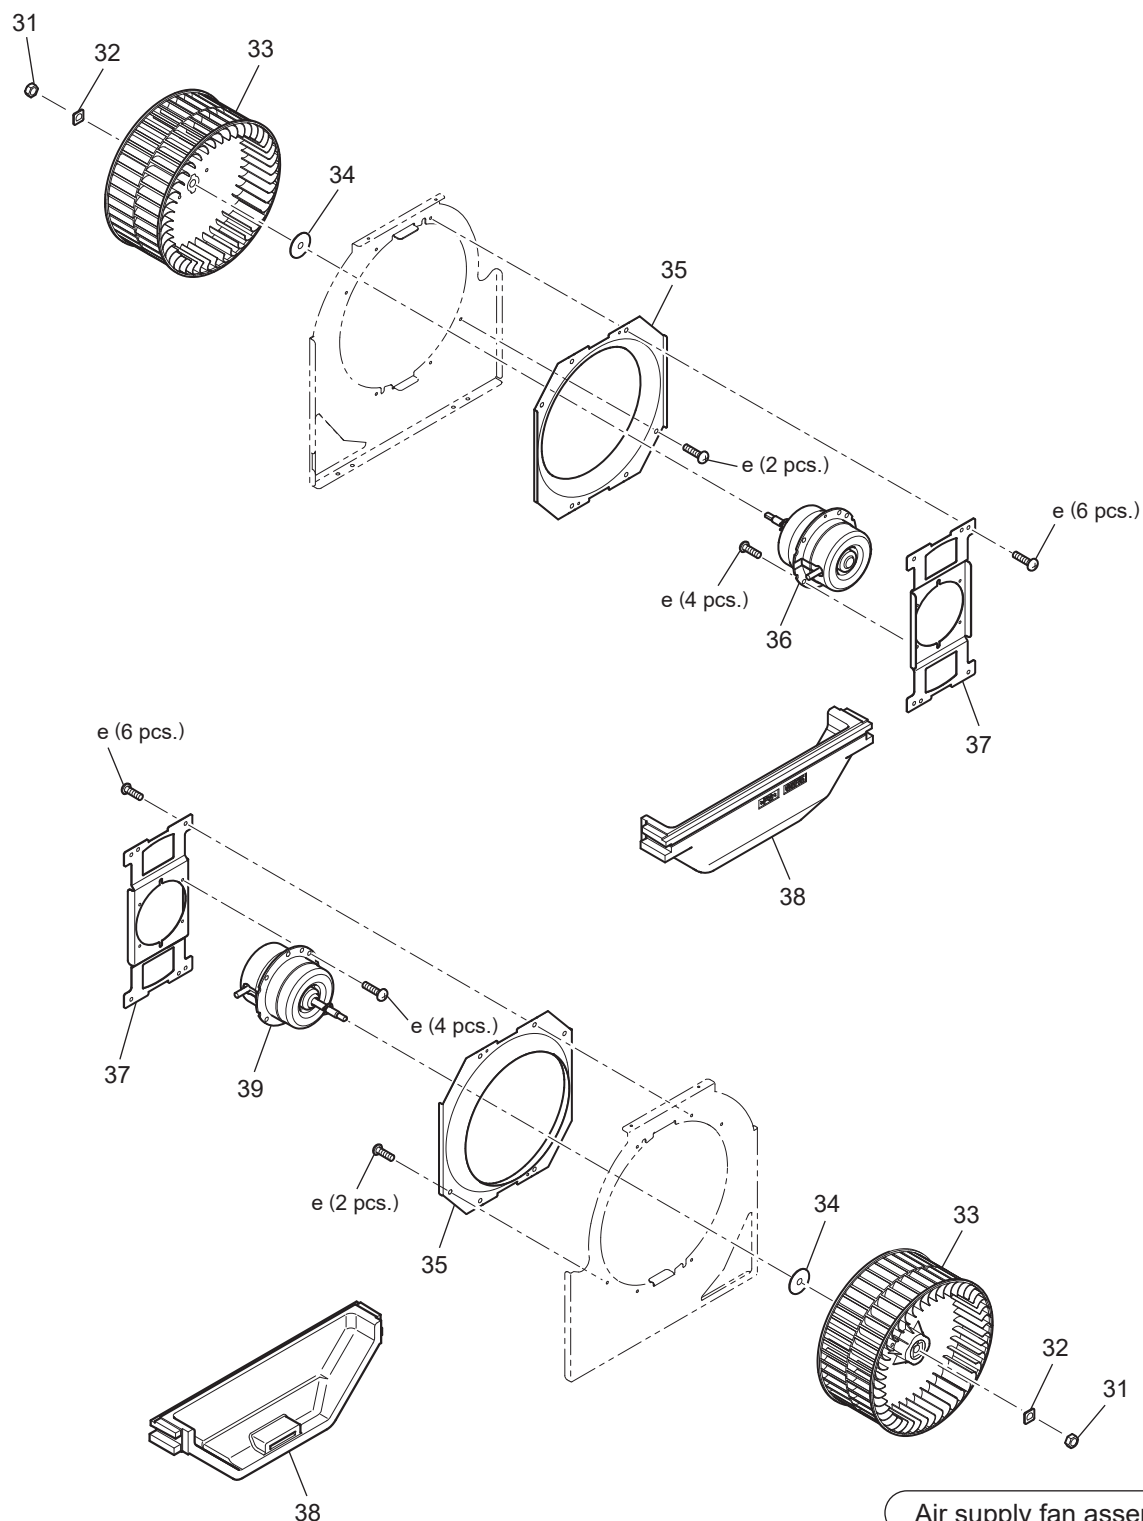

Air supply fan assembly

<Standard screws>

Symbol	Screw name
e	PTT screw 5x10

Fan parts


TLGHF0380RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	Special nut (M10)	W00 000 195	2		Left-handed
32	Tab washer	W50 013 712	2		
33	Centrifugal fan	W50 013 482	2	⚠	Dia. 9 5/8 inch (245 mm)
34	Special washer (10)	W50 003 478	2		Outer dia. 1 37/64 inch (40 mm)
35	Inlet ring	W50 004 725	2		
36	DC motor (EA)	W50 023 456	1	⚠	With the ferrite core
37	Motor fix plate	W50 013 724	2		
38	Separator	W50 003 488	2		
39	DC motor (SA)	W50 023 455	1	⚠	With the ferrite core

Control parts

<Standard screws>

Symbol	Screw name
b	PTT screw 4x8
f	PPT screw 3x8
g	PT screw 4x8
h	PPT screw 4x20

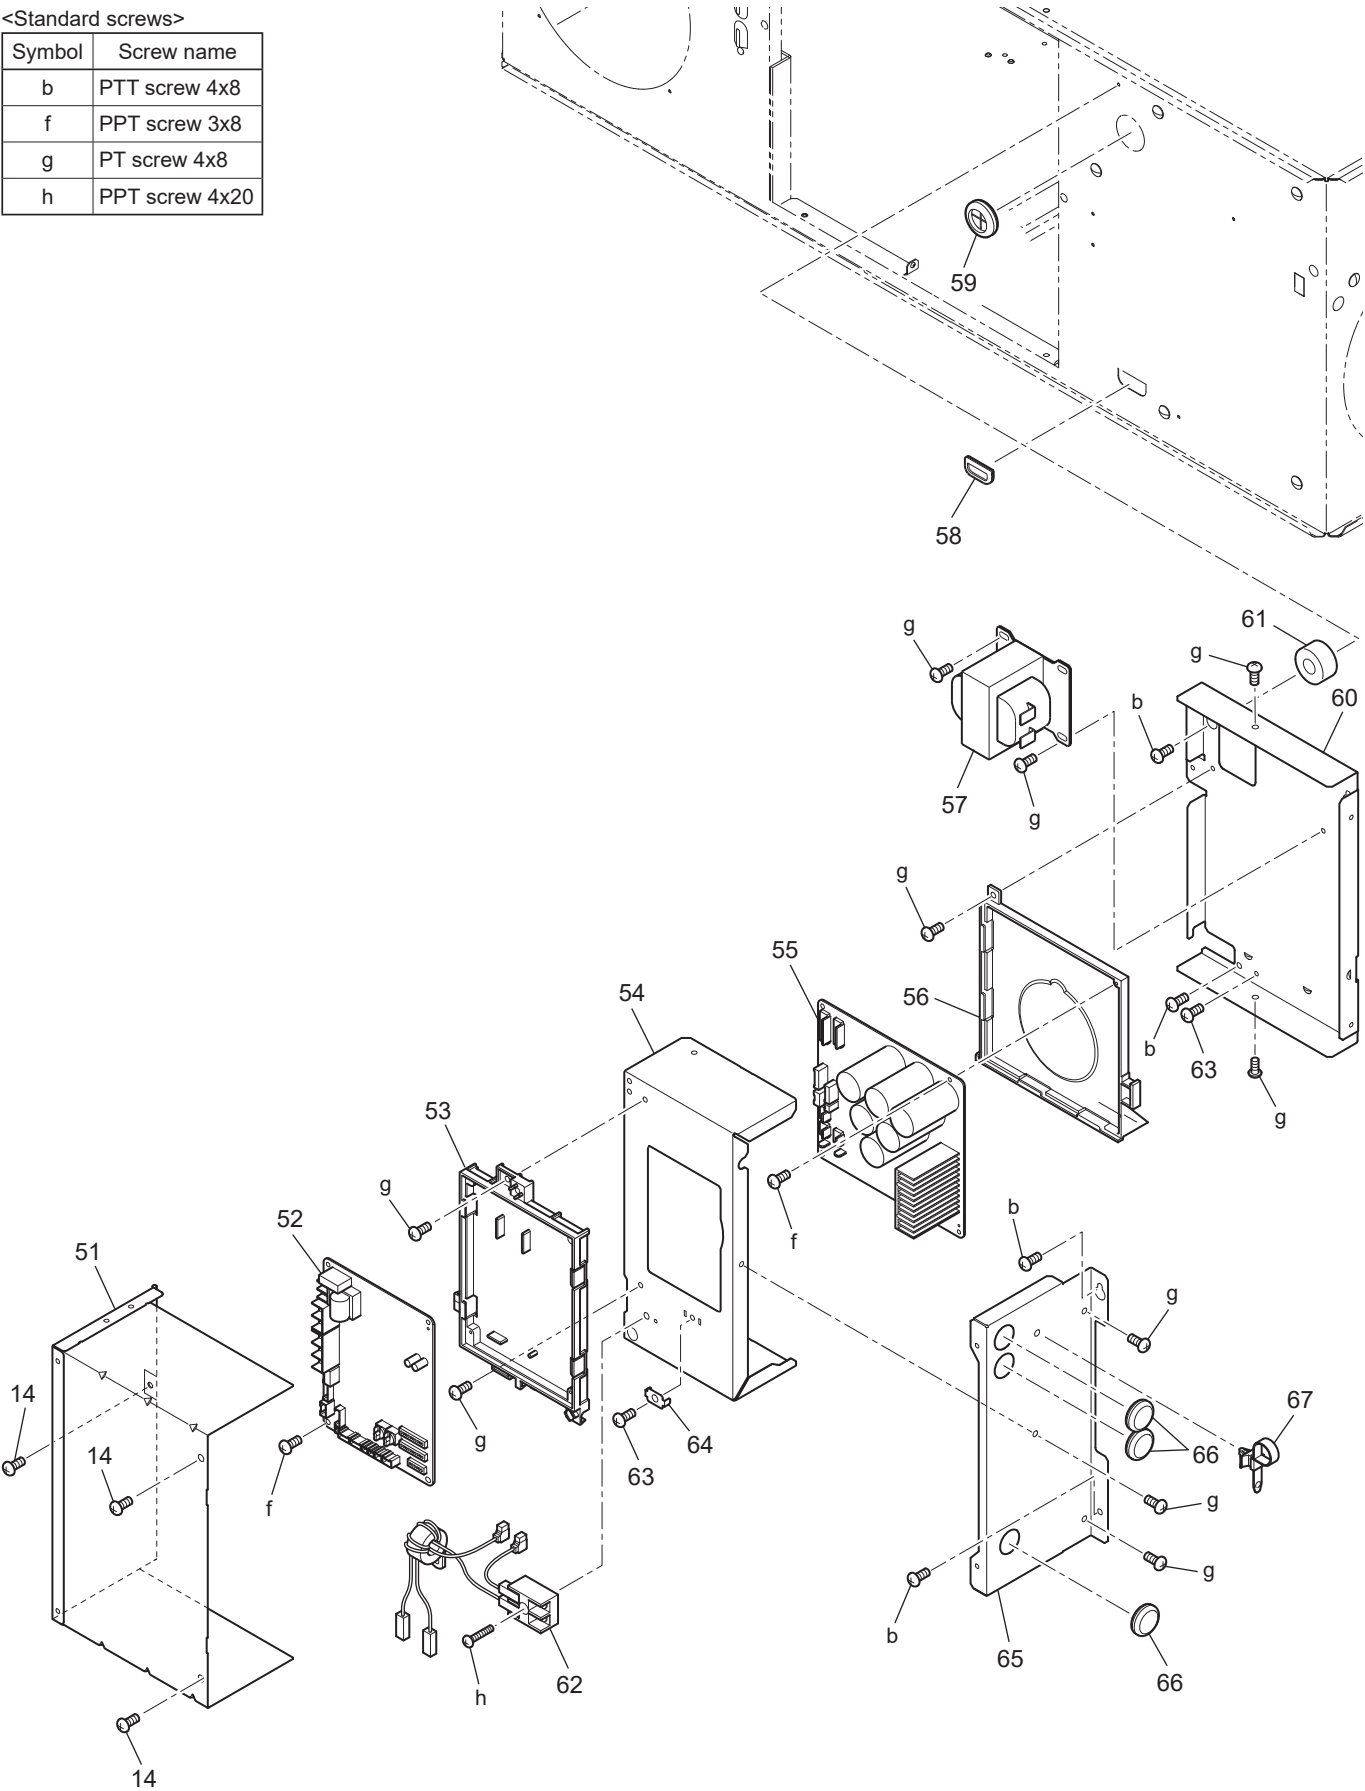


Control parts

TLGHF0380RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
51	Control box cover	W50 019 707	1		
52	Circuit board	W50 025 171	1	⚠	Control
53	PCB fix plate	W50 021 706	1		
54	Sub control base	W50 021 715	1		
55	Circuit board	W50 021 172	1	⚠	Power
56	PCB case	W50 021 380	1		
57	Reactor	W50 028 180	1	⚠	White · AC10A
58	Bush	W00 000 278	1		
59	Cord bush	W00 000 277	1		
60	Control base	W50 019 704	1		
61	Ferrite core	W50 023 179	1	⚠	
62	Terminal block	W50 021 213	1	⚠	2P, With the lead wires
63	PT screw 4x8 BS	W00 000 011	2		
64	Earth fix plate	W82 001 706	1		
65	Side plate	W50 019 706	1		
66	Cord bush	W00 000 270	3		
67	Cord band	W00 000 258	1		

Wiring parts

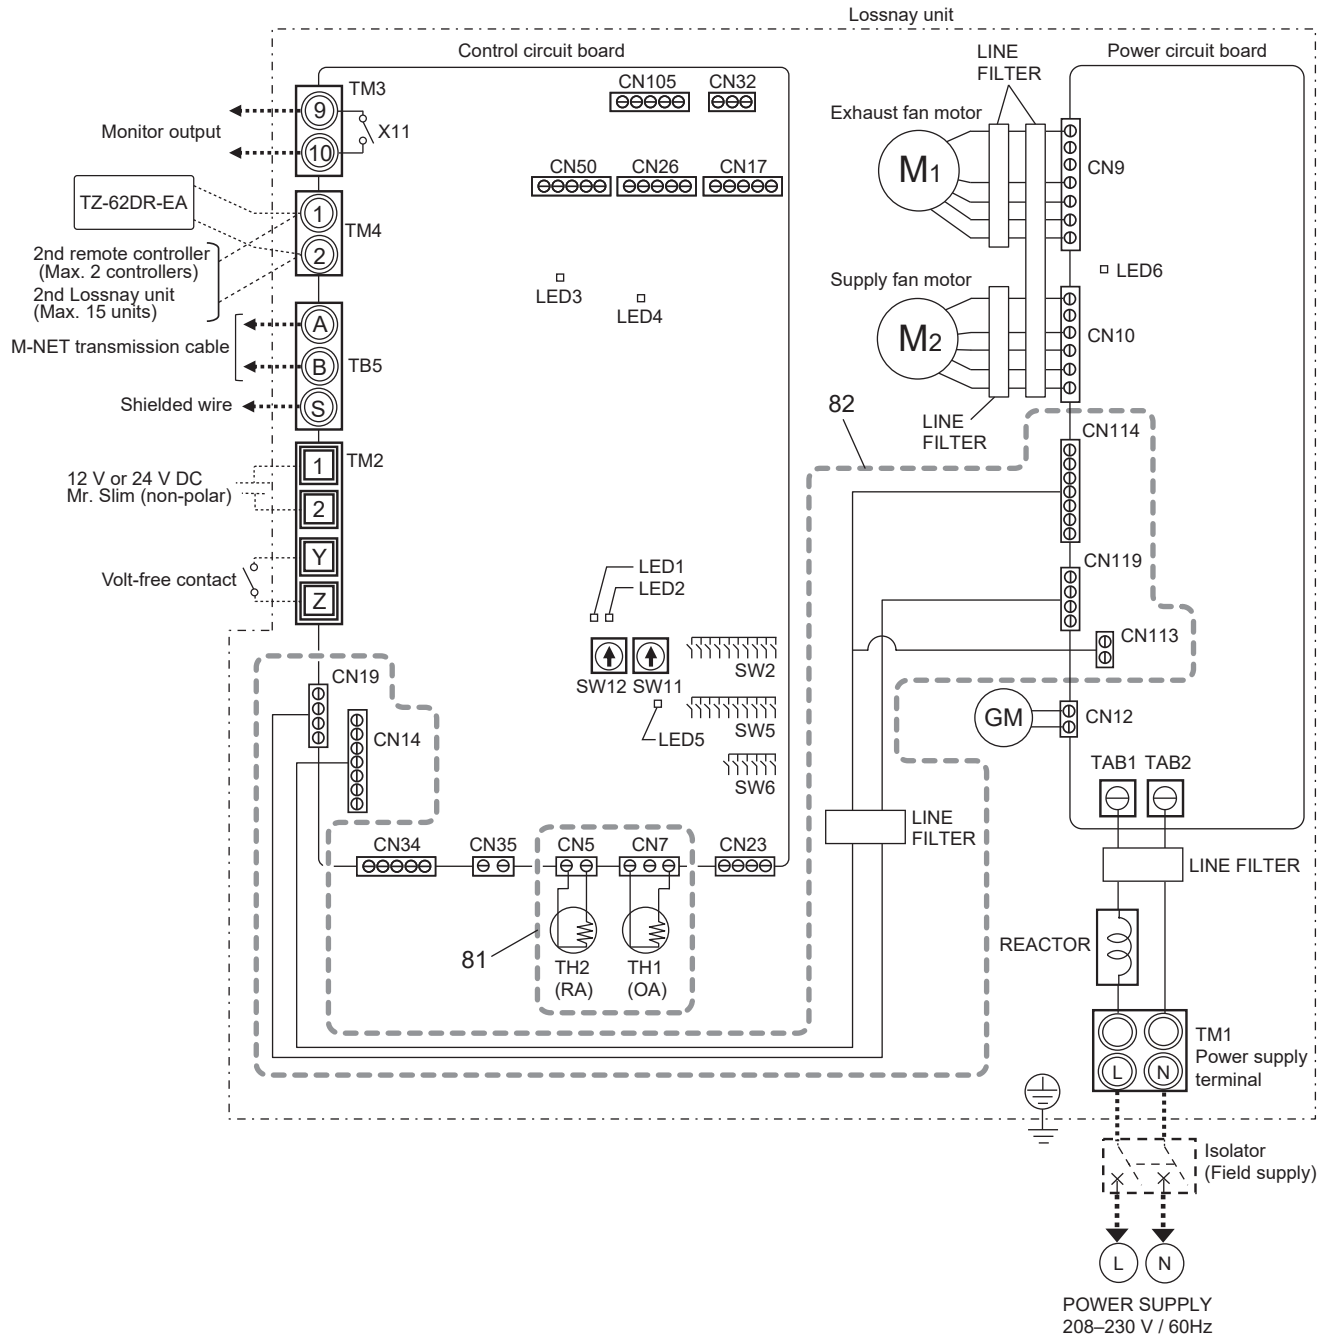


Wiring parts

TLGHF0380RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Thermistor	W50 023 167	1	△	OA・RA set
82	Lead wire	W50 021 214	1	△	
83	Lead wire	W50 004 231	1	△	3 15/16 inch (100 mm)

Structural parts

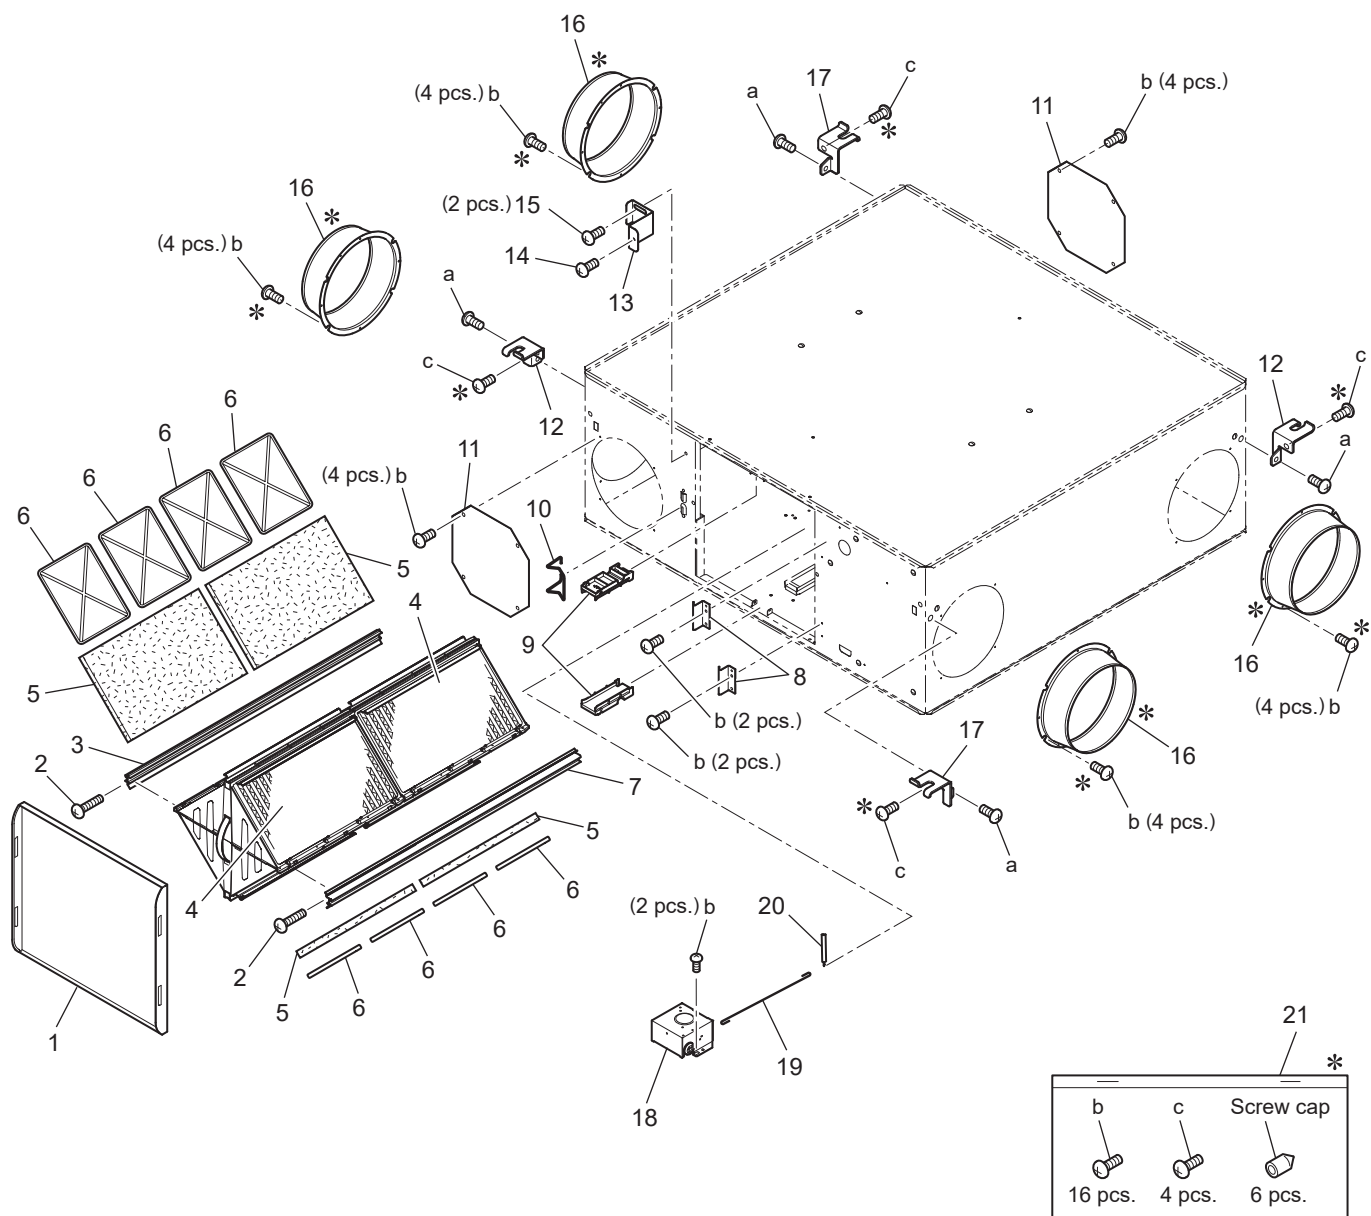

<Standard screws>

Symbol	Screw name
a	PT screw 6x12
b	PTT screw 4x8
c	PT screw 5x10

* shows accessory parts.


Structural parts

TLGHF0470RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 013 711	1		
2	Special screw M4	W00 000 101	2		
3	Core guide L	W50 013 384	1		
4	Lossnay core	W50 004 720	2	⚠	With the filter stoppers
5	Filter	W50 023 719	4	⚠	
6	Filter stopper	W50 016 711	8		
7	Core guide R	W50 013 391	1		
8	Fix piece	W50 013 722	2		
9	Lead support	W50 013 706	2		
10	Hinge	W50 004 344	1		
11	Cover	W50 003 708	2		
12	Hanger L	W36 002 380	2		
13	Fix piece	W50 004 731	1		
14	Special screw 4x8	W00 000 089	4		
15	Special screw 4x8	W00 000 098	2		
16	Flange	W50 003 610	4		
17	Hanger R	W50 004 380	2		
18	GM assembly	W50 023 260	1	⚠	AC220·240V
19	Rod	W50 004 150	1		
20	Pull spring	W50 013 157	1		
21	Screws in bag	W50 013 051	1		

Fan parts

Air exhaust fan assembly

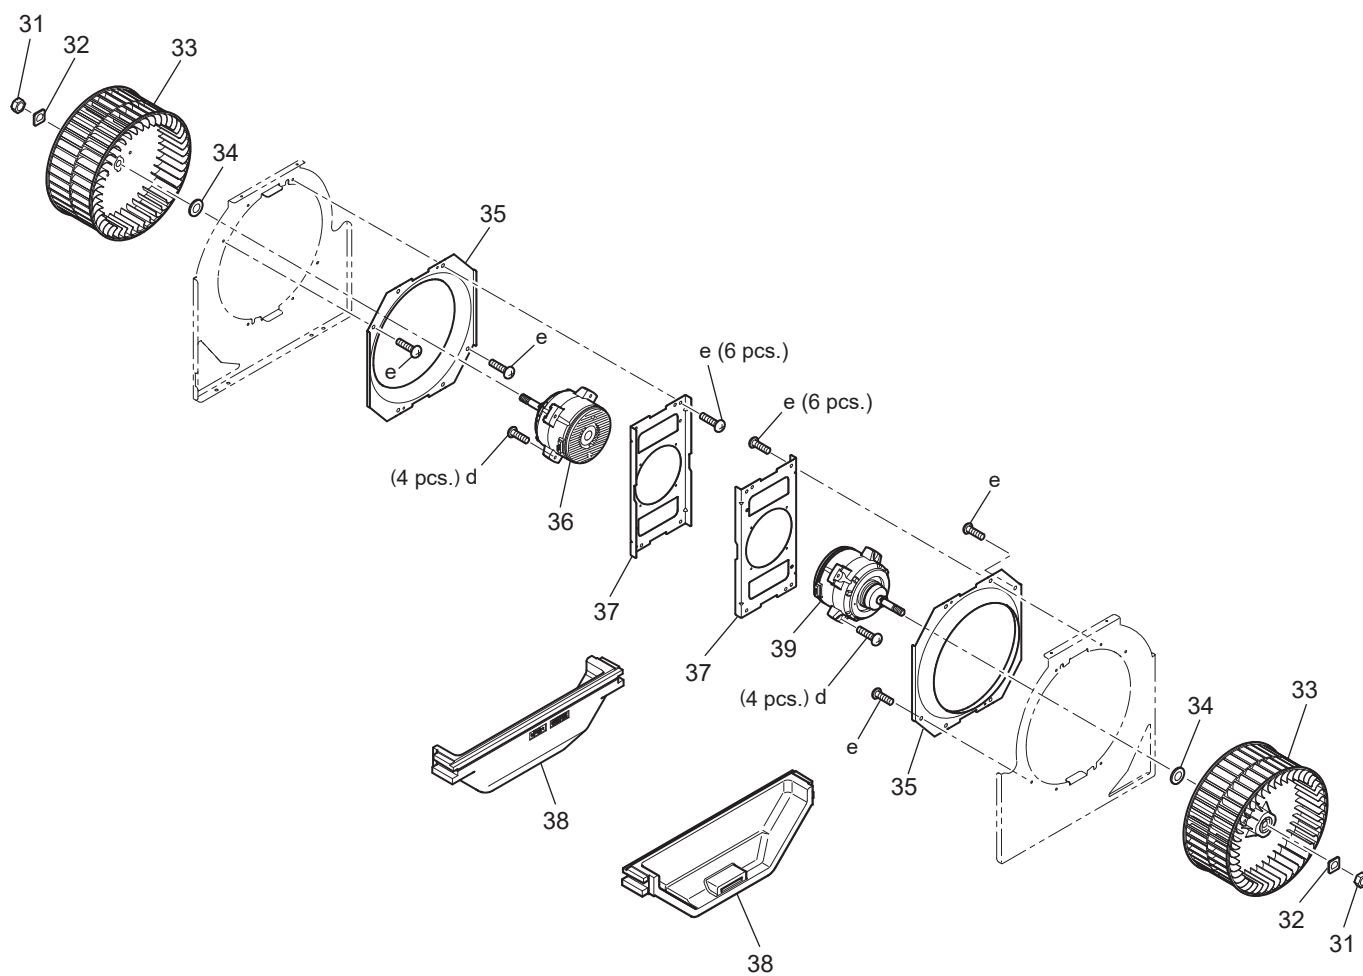

Air supply fan assembly

<Standard screws>

Symbol	Screw name
d	PTT screw 4x25
e	PTT screw 5x10

Fan parts


TLGHF0470RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	Special nut (M12)	W00 000 117	2		Left-handed
32	Tab washer	W50 004 730	2		
33	Centrifugal fan	W50 004 482	2	⚠	Dia. 9 5/8 inch (245 mm)
34	Washer (12)	W00 000 123	2		Outer dia. 15/16 inch (24 mm)
35	Inlet ring	W50 004 725	2		
36	DC motor (EA)	W50 023 458	1	⚠	
37	Motor fix plate	W50 004 736	2		
38	Separator	W50 013 487	2		
39	DC motor (SA)	W50 023 457	1	⚠	

Control parts

<Standard screws>

Symbol	Screw name
b	PTT screw 4x8
f	PPT screw 3x8
g	PT screw 4x8
h	PPT screw 4x20

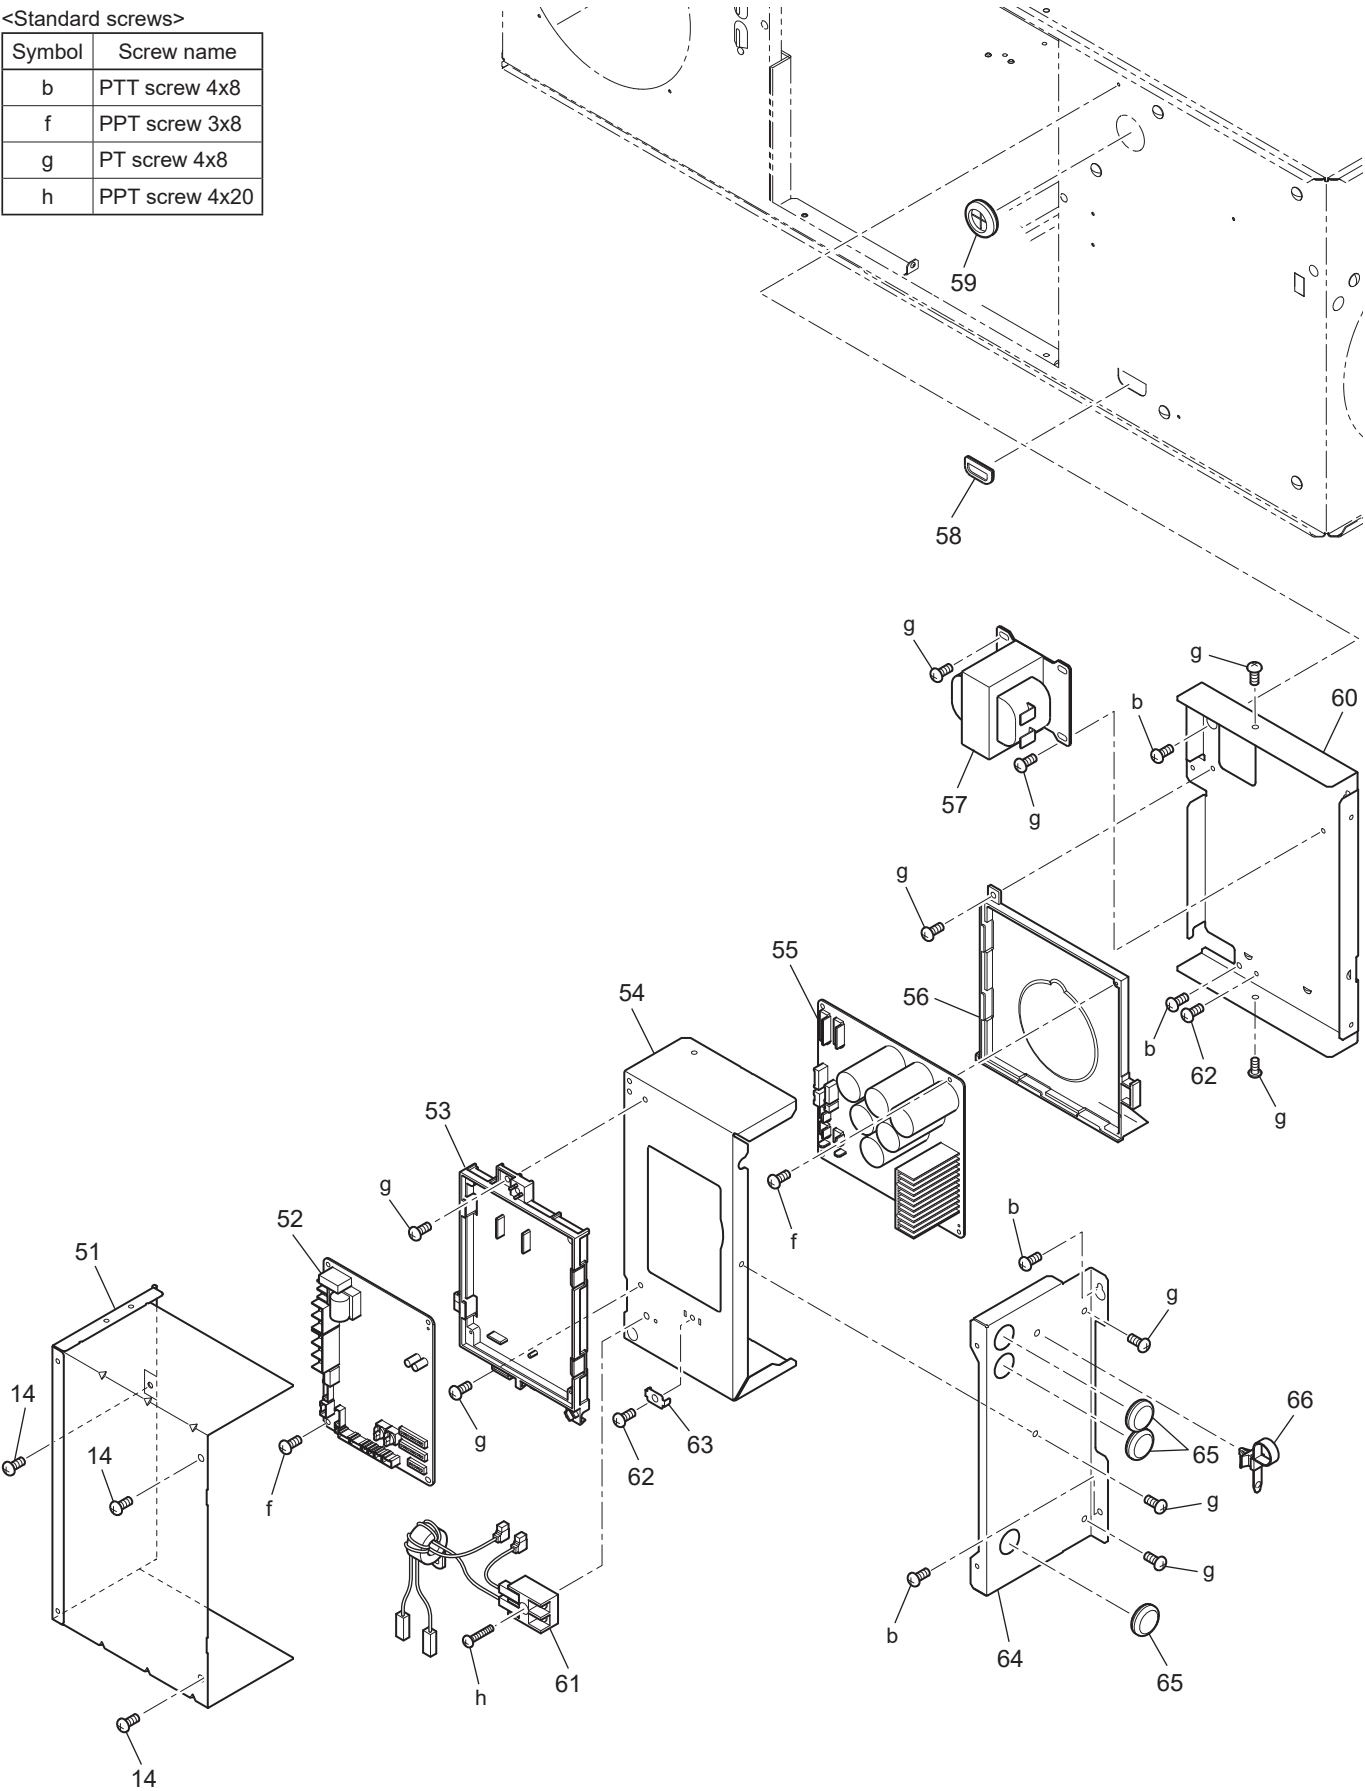


Control parts

TLGHF0470RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
51	Control box cover	W50 019 707	1		
52	Circuit board	W50 025 171	1	⚠	Control
53	PCB fix plate	W50 021 706	1		
54	Sub control base	W50 021 715	1		
55	Circuit board	W50 023 171	1	⚠	Power
56	PCB case	W50 021 380	1		
57	Reactor	W50 028 181	1	⚠	White · AC6.5A
58	Bush	W00 000 278	1		
59	Cord bush	W00 000 277	1		
60	Control base	W50 019 704	1		
61	Terminal block	W50 021 213	1	⚠	2P, With the lead wires
62	PT screw 4x8 BS	W00 000 011	2		
63	Earth fix plate	W82 001 706	1		
64	Side plate	W50 019 706	1		
65	Cord bush	W00 000 270	3		
66	Cord band	W00 000 258	1		

Wiring parts

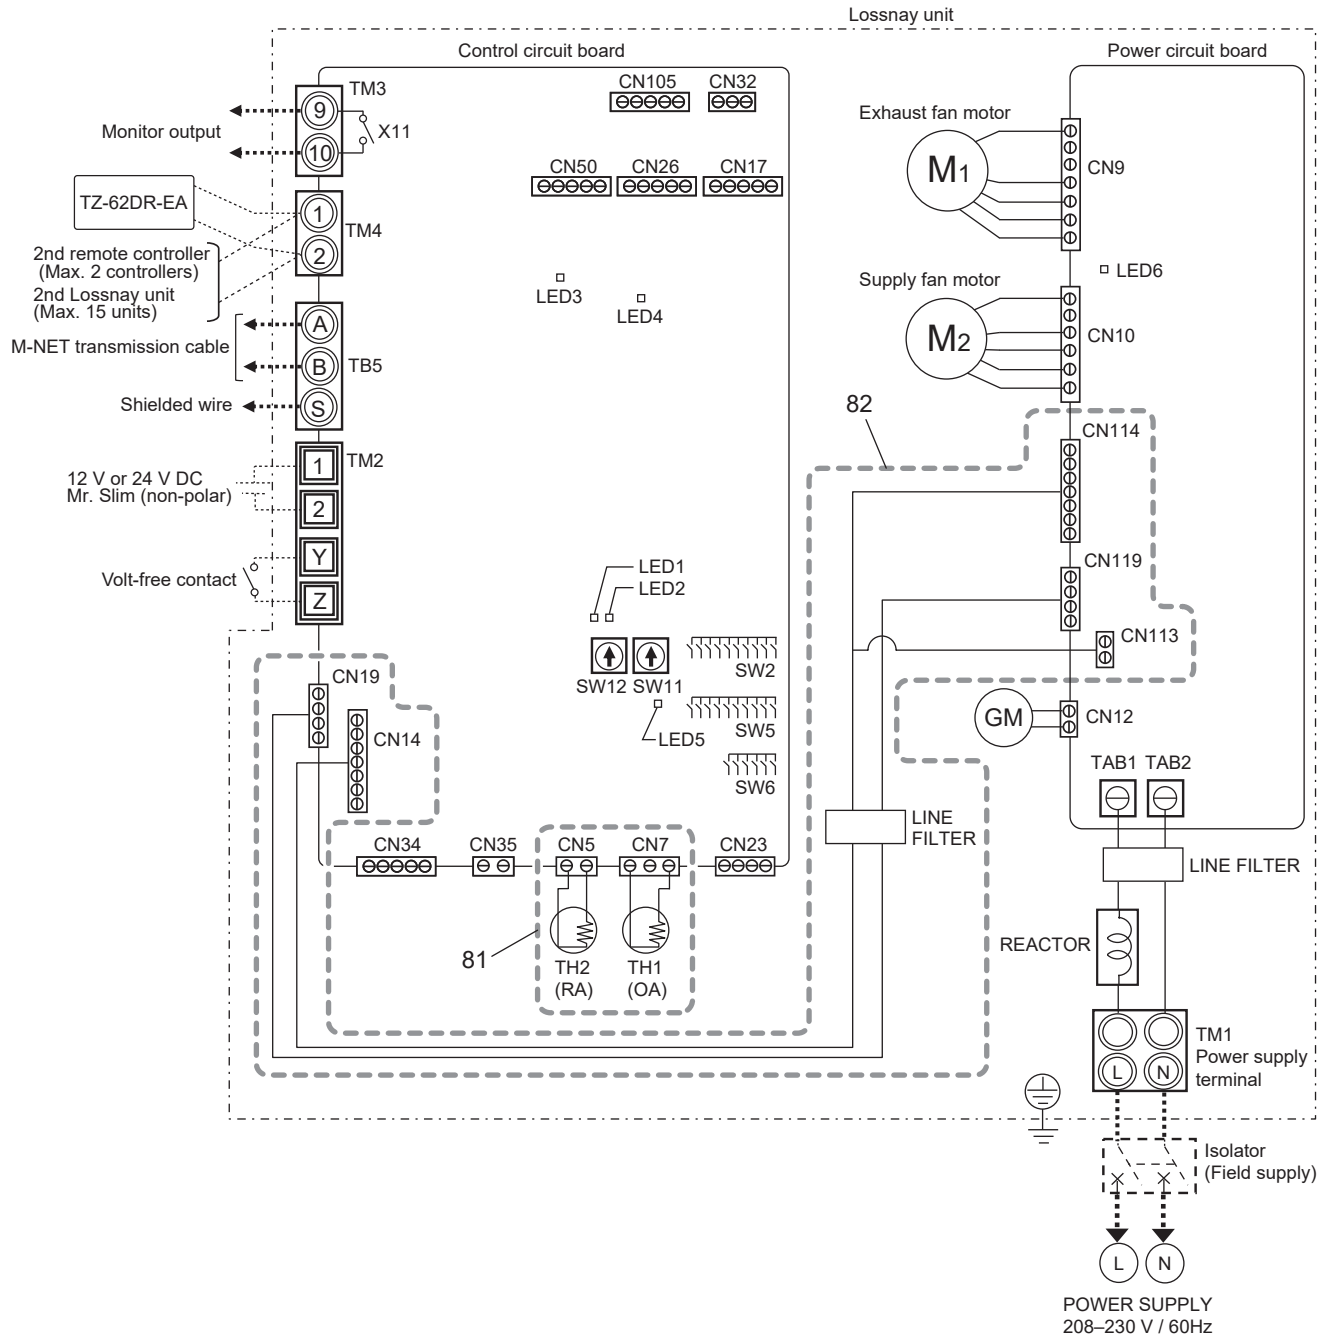


Wiring parts

TLGHF0470RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Thermistor	W50 023 167	1	△	OA・RA set
82	Lead wire	W50 021 214	1	△	
83	Lead wire	W50 004 231	1	△	3 15/16 inch (100 mm)

Structural parts

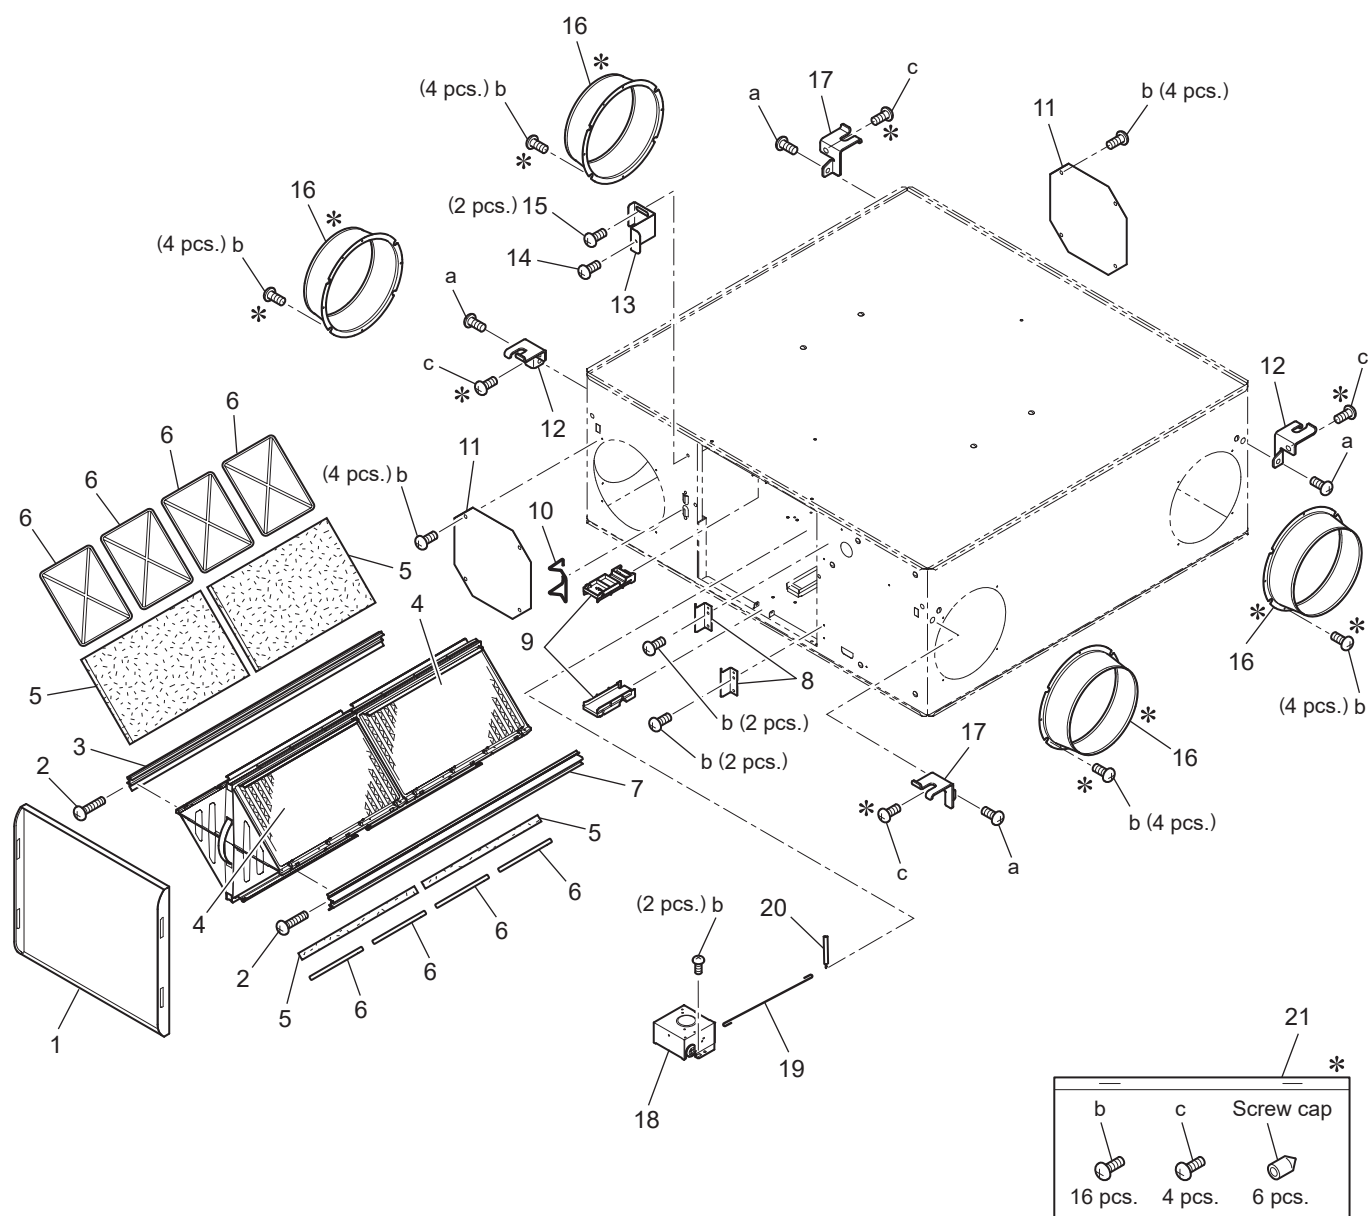

<Standard screws>

Symbol	Screw name
a	PT screw 6x12
b	PTT screw 4x8
c	PT screw 5x10


* shows accessory parts.

Structural parts

TLGHF0600RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 013 711	1		
2	Special screw M4	W00 000 101	2		
3	Core guide L	W50 013 385	1		
4	Lossnay core	W50 004 721	2	⚠	With the filter stoppers
5	Filter	W50 023 720	4	⚠	
6	Filter stopper	W50 016 711	8		
7	Core guide R	W50 013 392	1		
8	Fix piece	W50 013 722	2		
9	Lead support	W50 013 706	2		
10	Hinge	W50 004 344	1		
11	Cover	W50 003 708	2		
12	Hanger L	W36 002 380	2		
13	Fix piece	W50 004 731	1		
14	Special screw 4x8	W00 000 089	4		
15	Special screw 4x8	W00 000 098	2		
16	Flange	W50 003 610	4		
17	Hanger R	W50 004 380	2		
18	GM assembly	W50 019 262	1	⚠	AC220・240V
19	Rod	W50 004 150	1		
20	Pull spring	W50 013 157	1		
21	Screws in bag	W50 013 051	1		

Fan parts

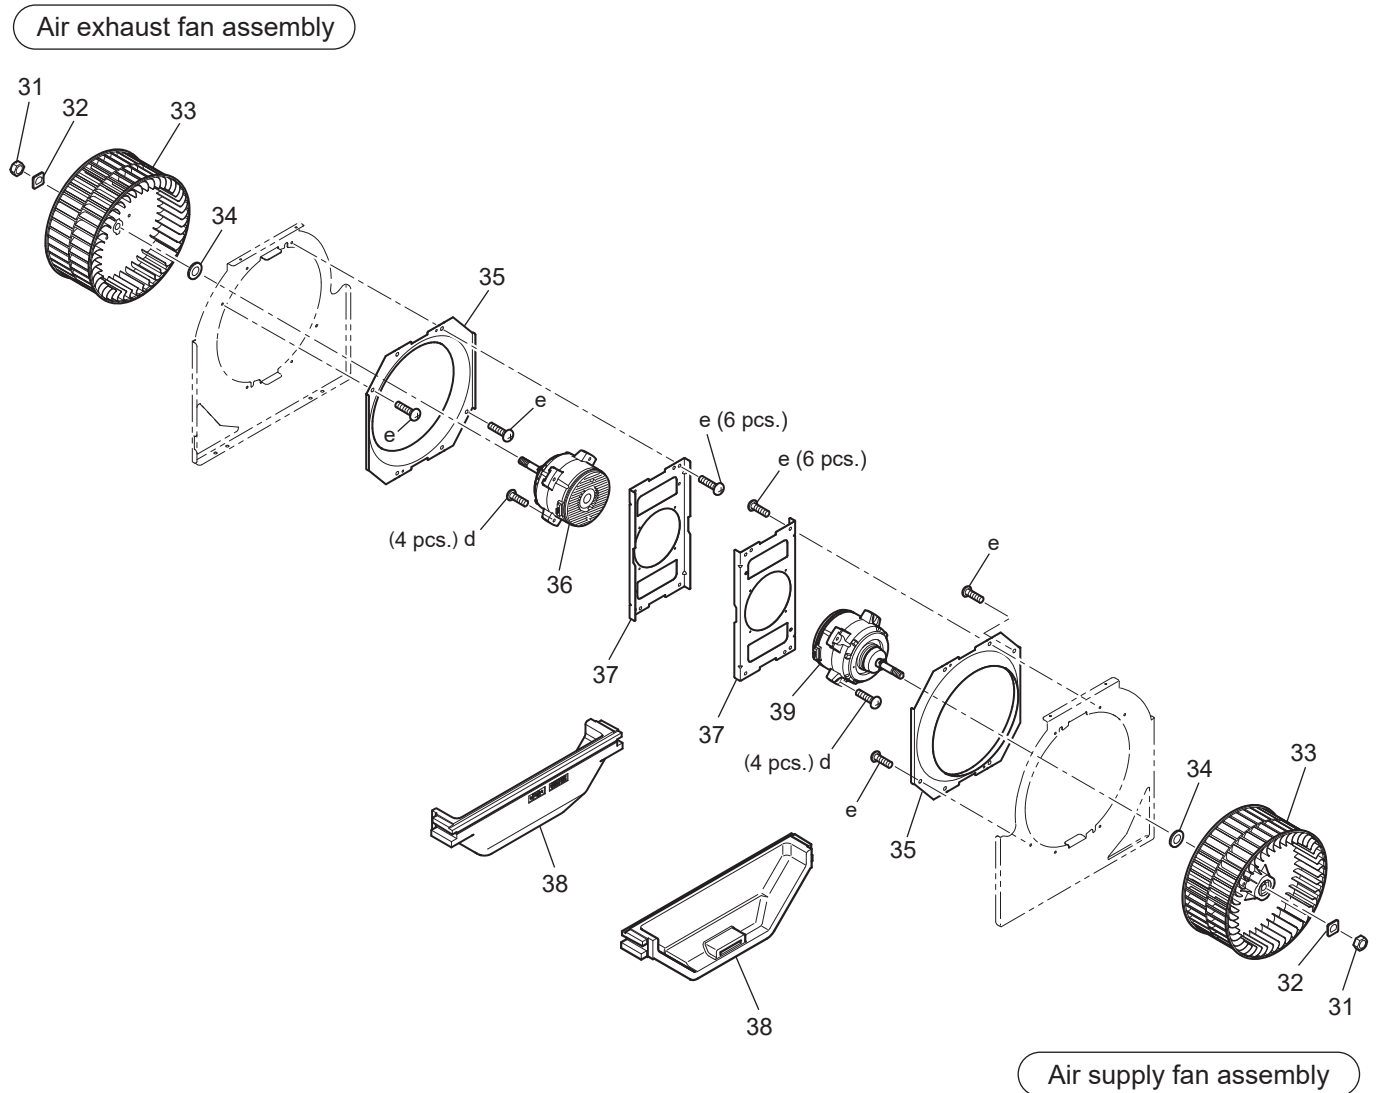

<Standard screws>

Symbol	Screw name
d	PTT screw 4x25
e	PTT screw 5x10

Fan parts


TLGHF0600RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	Special nut (M12)	W00 000 117	2		Left-handed
32	Tab washer	W50 004 730	2		
33	Centrifugal fan	W50 004 482	2	⚠	Dia. 9 5/8 inch (245 mm)
34	Washer (12)	W00 000 123	2		Outer dia. 15/16 inch (24 mm)
35	Inlet ring	W50 004 725	2		
36	DC motor (EA)	W50 023 458	1	⚠	
37	Motor fix plate	W50 004 736	2		
38	Separator	W50 013 487	2		
39	DC motor (SA)	W50 023 457	1	⚠	

Control parts

<Standard screws>

Symbol	Screw name
b	PTT screw 4x8
f	PPT screw 3x8
g	PT screw 4x8
h	PPT screw 4x20

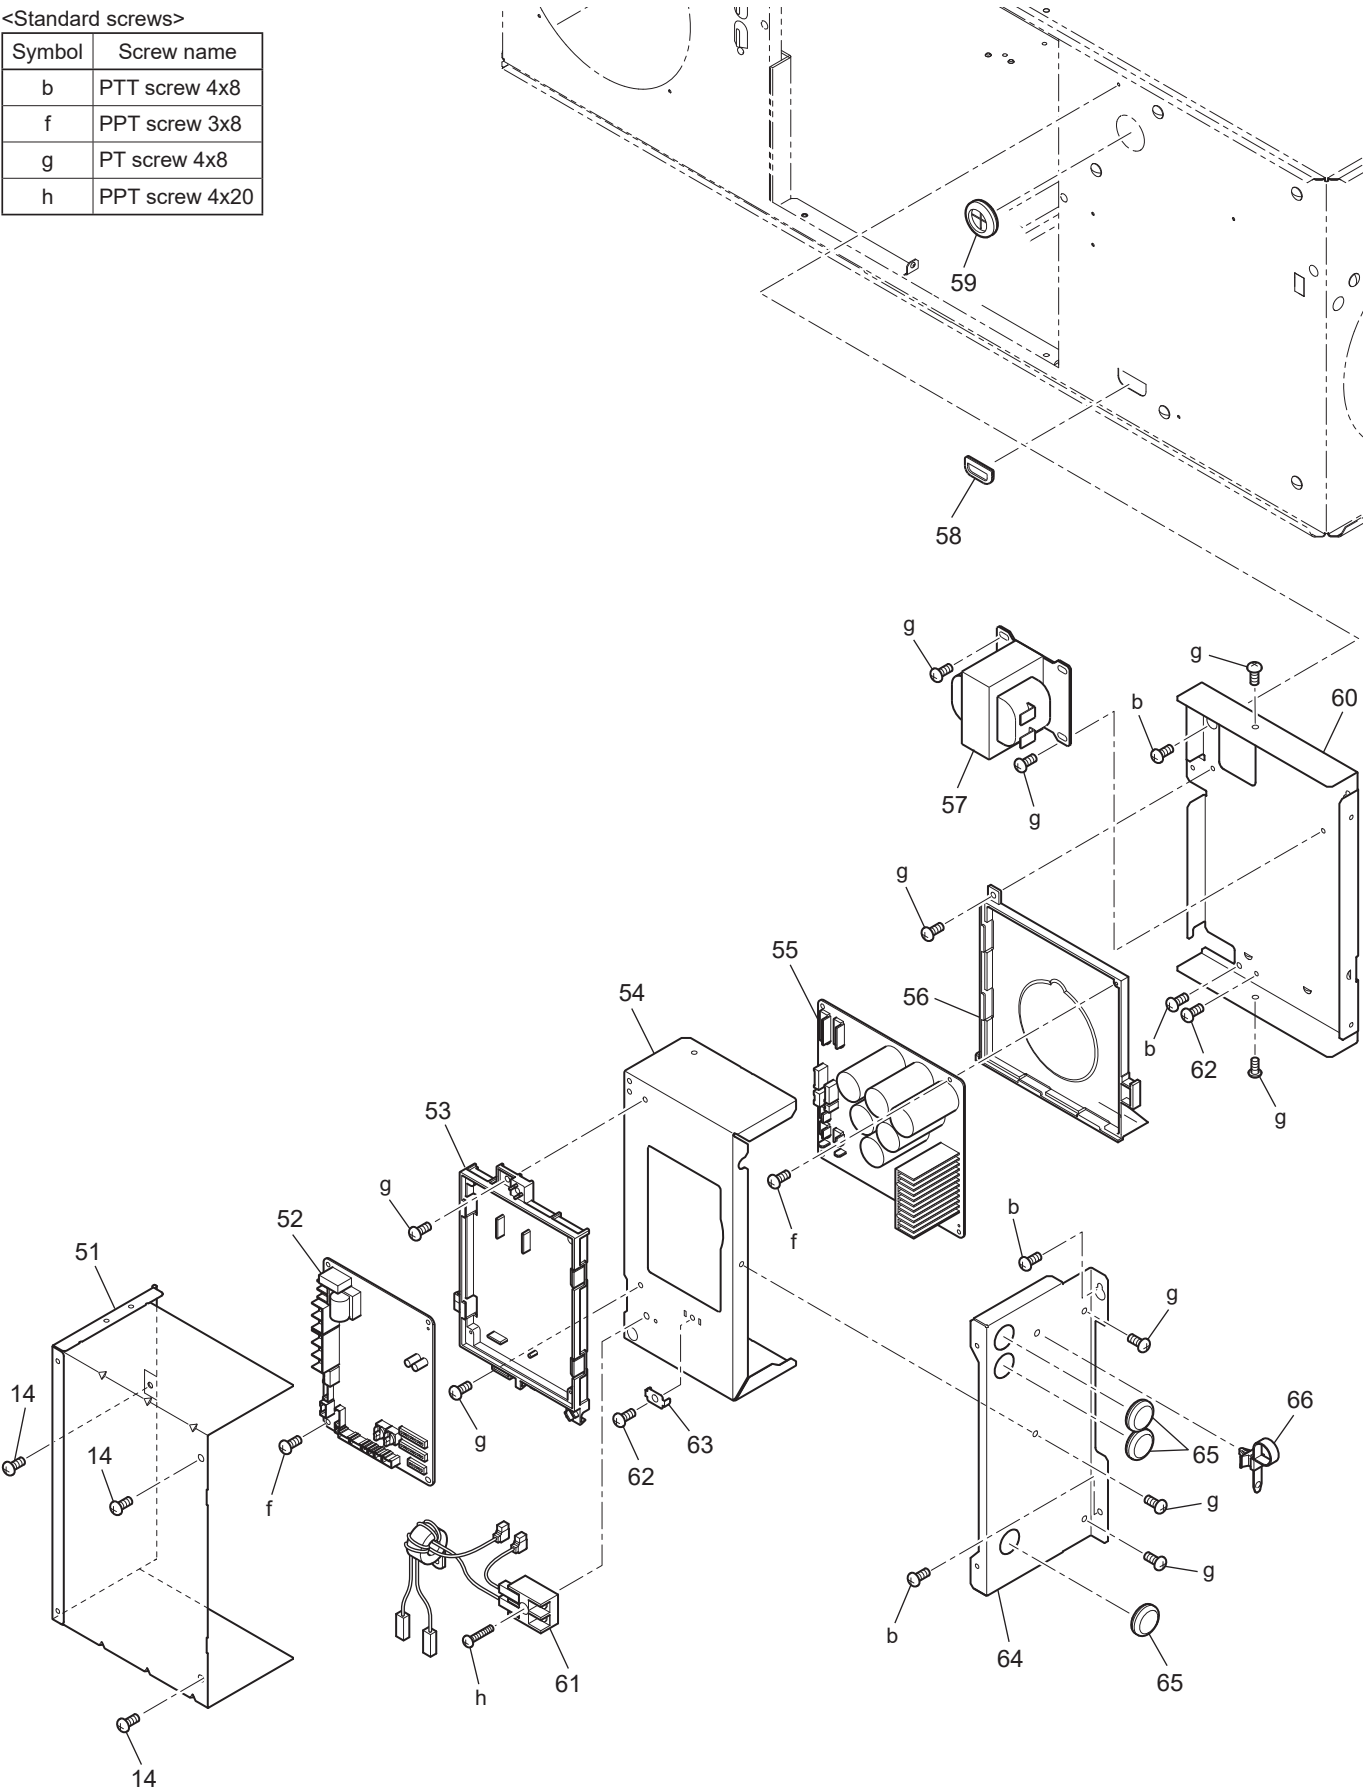


Control parts

TLGHF0600RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
51	Control box cover	W50 019 707	1		
52	Circuit board	W50 025 171	1	⚠	Control
53	PCB fix plate	W50 021 706	1		
54	Sub control base	W50 021 715	1		
55	Circuit board	W50 023 171	1	⚠	Power
56	PCB case	W50 021 380	1		
57	Reactor	W50 028 181	1	⚠	White · AC6.5A
58	Bush	W00 000 278	1		
59	Cord bush	W00 000 277	1		
60	Control base	W50 019 704	1		
61	Terminal block	W50 021 213	1	⚠	2P, With the lead wires
62	PT screw 4x8 BS	W00 000 011	2		
63	Earth fix plate	W82 001 706	1		
64	Side plate	W50 019 706	1		
65	Cord bush	W00 000 270	3		
66	Cord band	W00 000 258	1		

Wiring parts

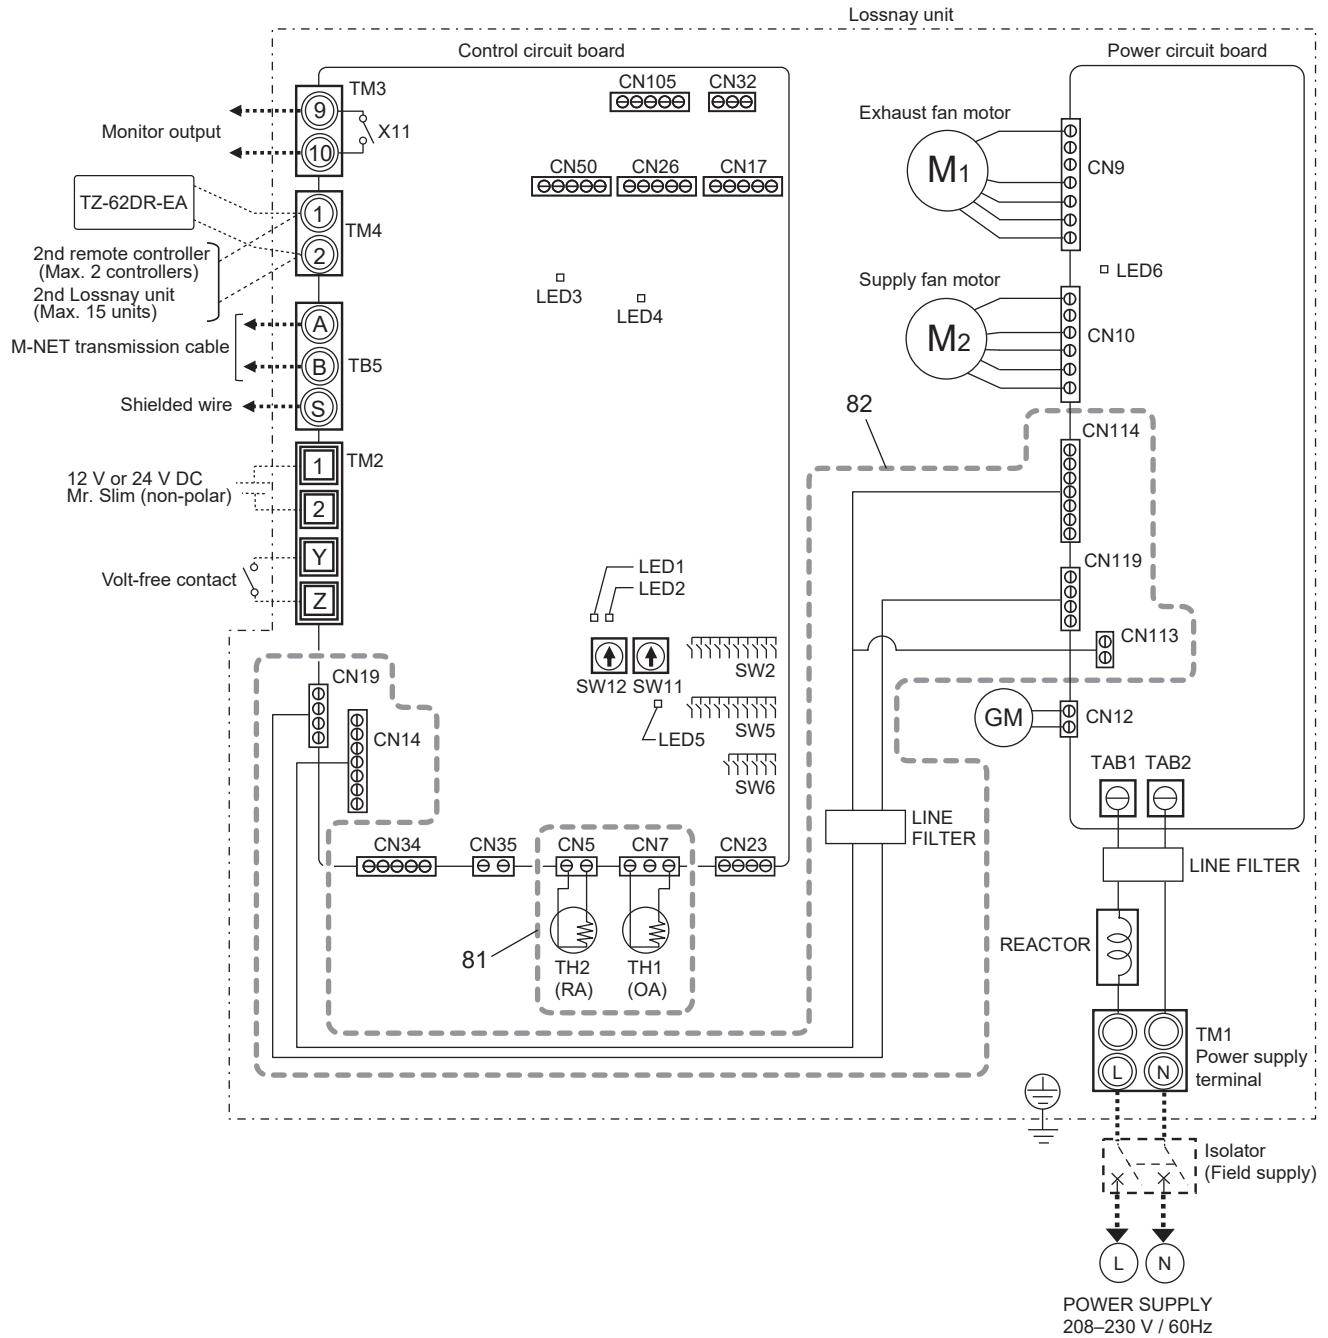


Wiring parts

TLGHF0600RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Thermistor	W50 023 168	1	△	OA・RA set
82	Lead wire	W50 021 214	1	△	
83	Lead wire	W50 004 231	1	△	3 15/16 inch (100 mm)

Structural parts

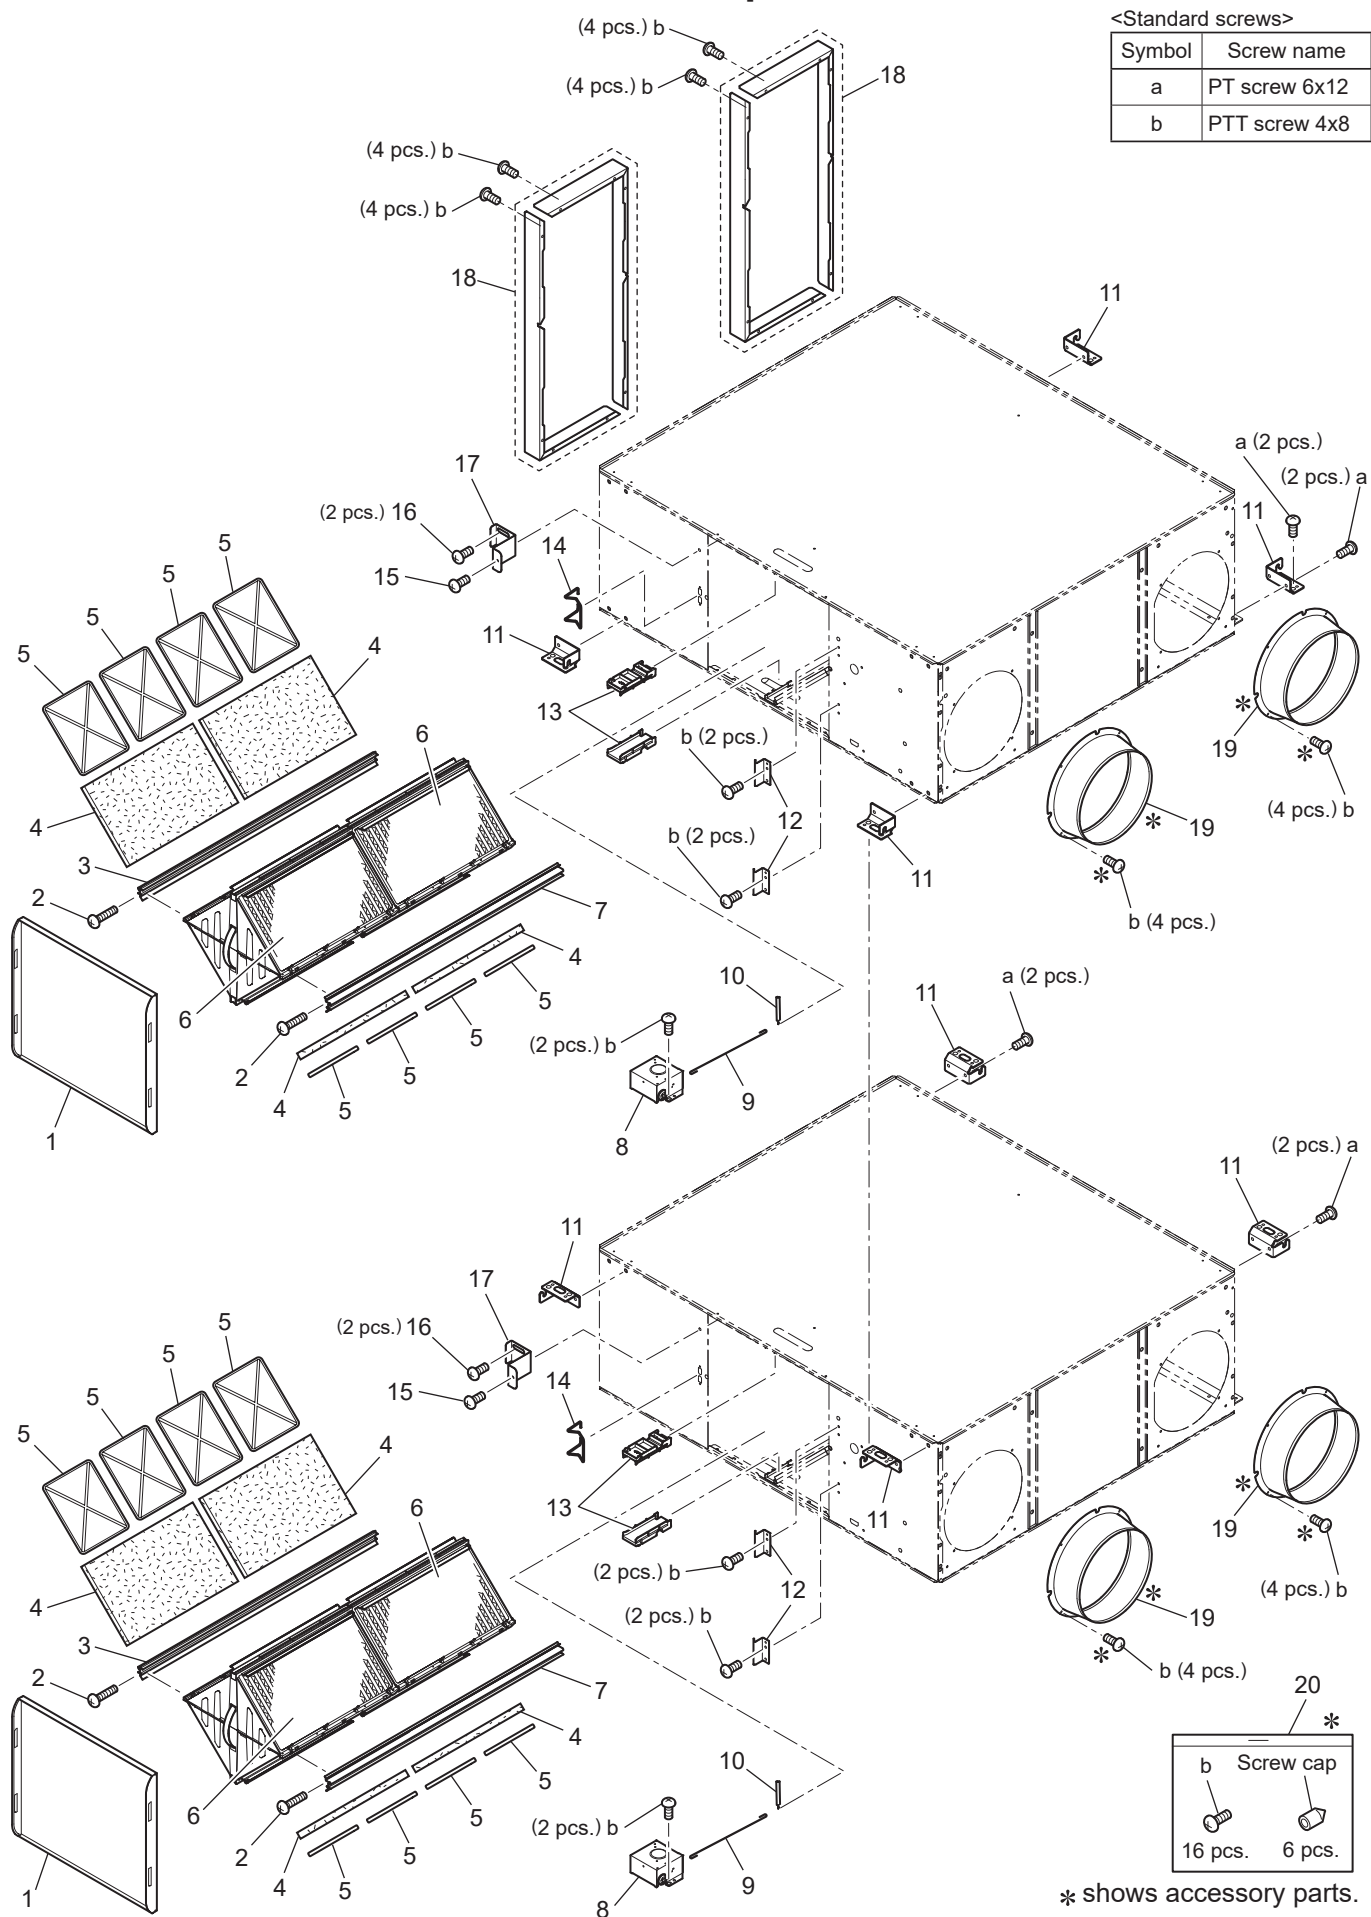


Structural parts

TLGHF0940RVX02A


No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 013 711	2		
2	Special screw M4	W00 000 101	4		
3	Core guide L	W50 013 384	2		
4	Filter	W50 023 719	8	⚠	
5	Filter stopper	W50 016 711	16		
6	Lossnay core	W50 004 720	4	⚠	With the filter stoppers
7	Core guide R	W50 013 391	2		
8	GM assembly	W50 023 260	2	⚠	AC220·240V
9	Rod	W50 004 150	2		
10	Pull spring	W50 013 157	2		
11	Hanger	W50 001 382	8		
12	Fix piece	W50 013 722	4		
13	Lead support	W50 013 706	4		
14	Hinge	W50 004 344	2		
15	Special screw 4x8	W00 000 089	5		
16	Special screw 4x8	W00 000 098	4		
17	Fix piece	W50 004 731	2		
18	Flange (A/B)	W50 013 707	2		
19	Flange	W50 003 610	4		
20	Screws in bag	W50 013 052	1		

Fan parts

Air exhaust fan assembly

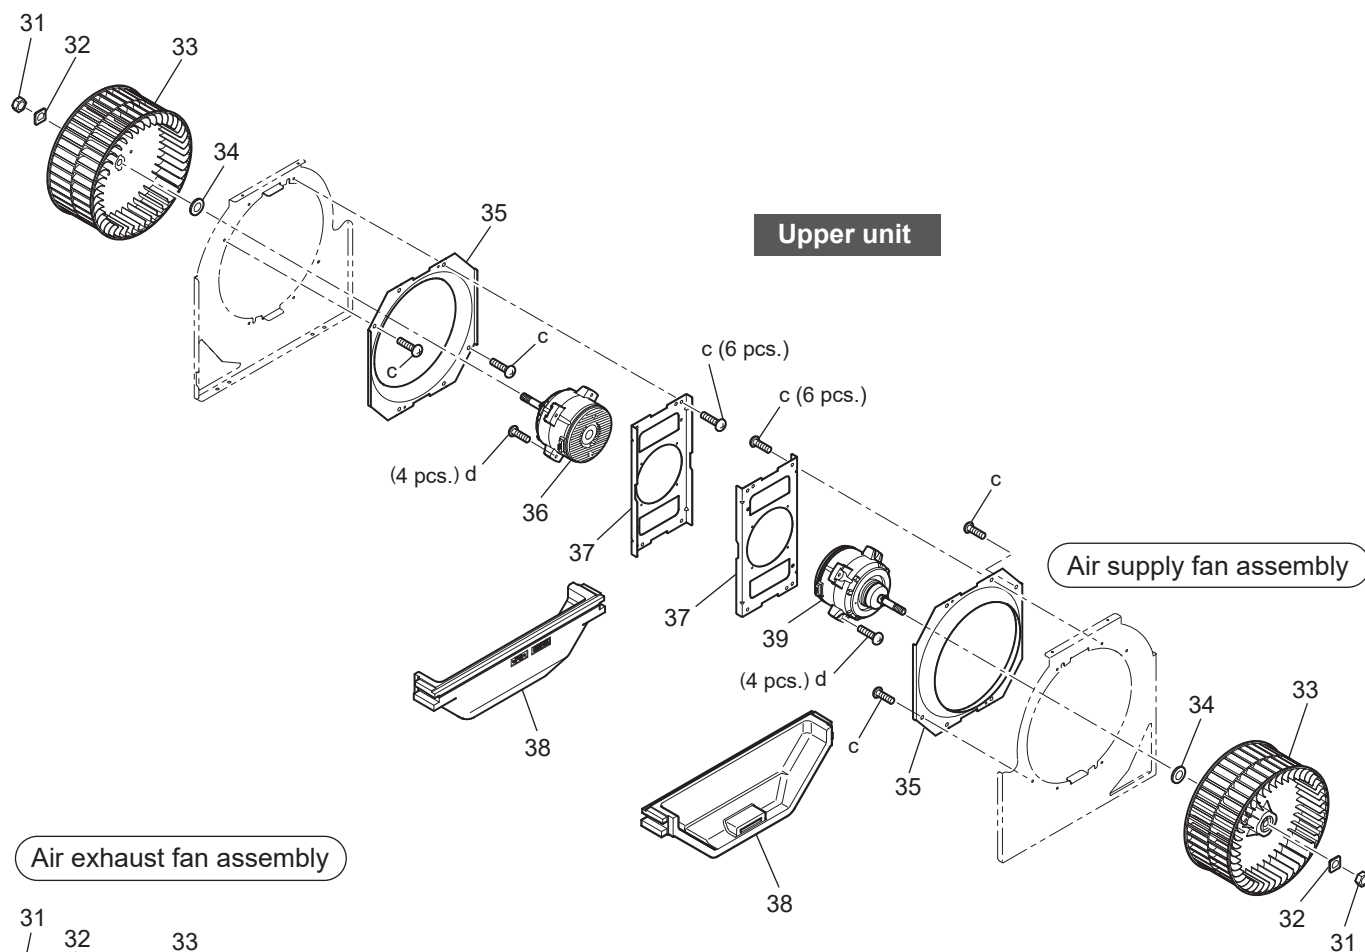

Air exhaust fan assembly

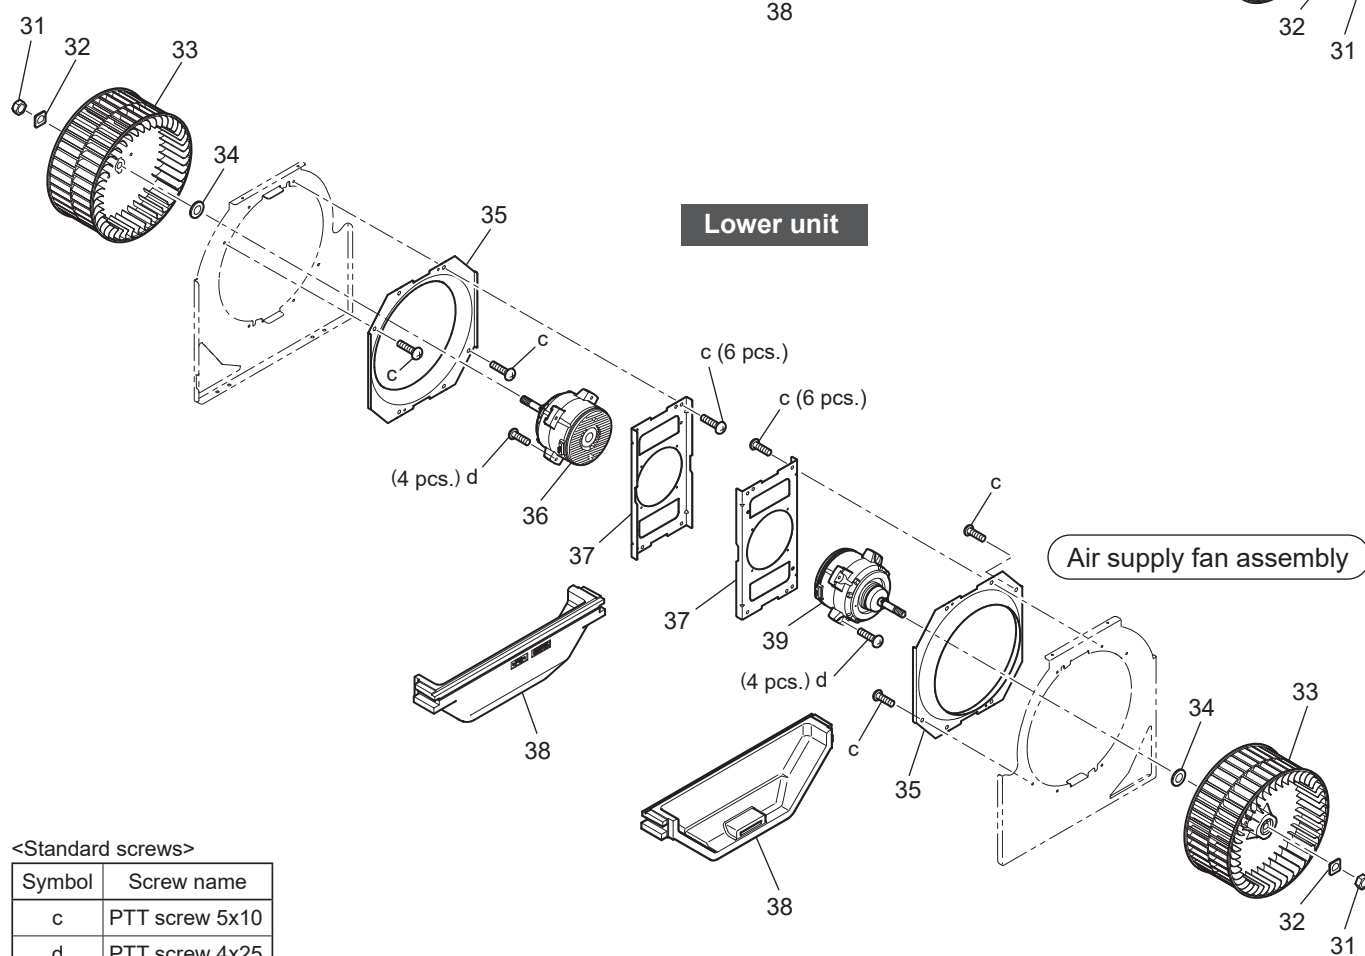

<Standard screws>


Symbol	Screw name
c	PTT screw 5x10
d	PTT screw 4x25

Fan parts

TLGHF0940RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	Special nut (M12)	W00 000 117	4		Left-handed
32	Tab washer	W50 004 730	4		
33	Centrifugal fan	W50 004 482	4	⚠	Dia. 9 5/8 inch (245 mm)
34	Washer (12)	W00 000 123	4		Outer dia. 15/16 inch (24 mm)
35	Inlet ring	W50 004 725	4		
36	DC motor (EA)	W50 023 458	1	⚠	
37	Motor fix plate	W50 004 736	4		
38	Separator	W50 013 487	4		
39	DC motor (SA)	W50 023 457	1	⚠	

Control parts

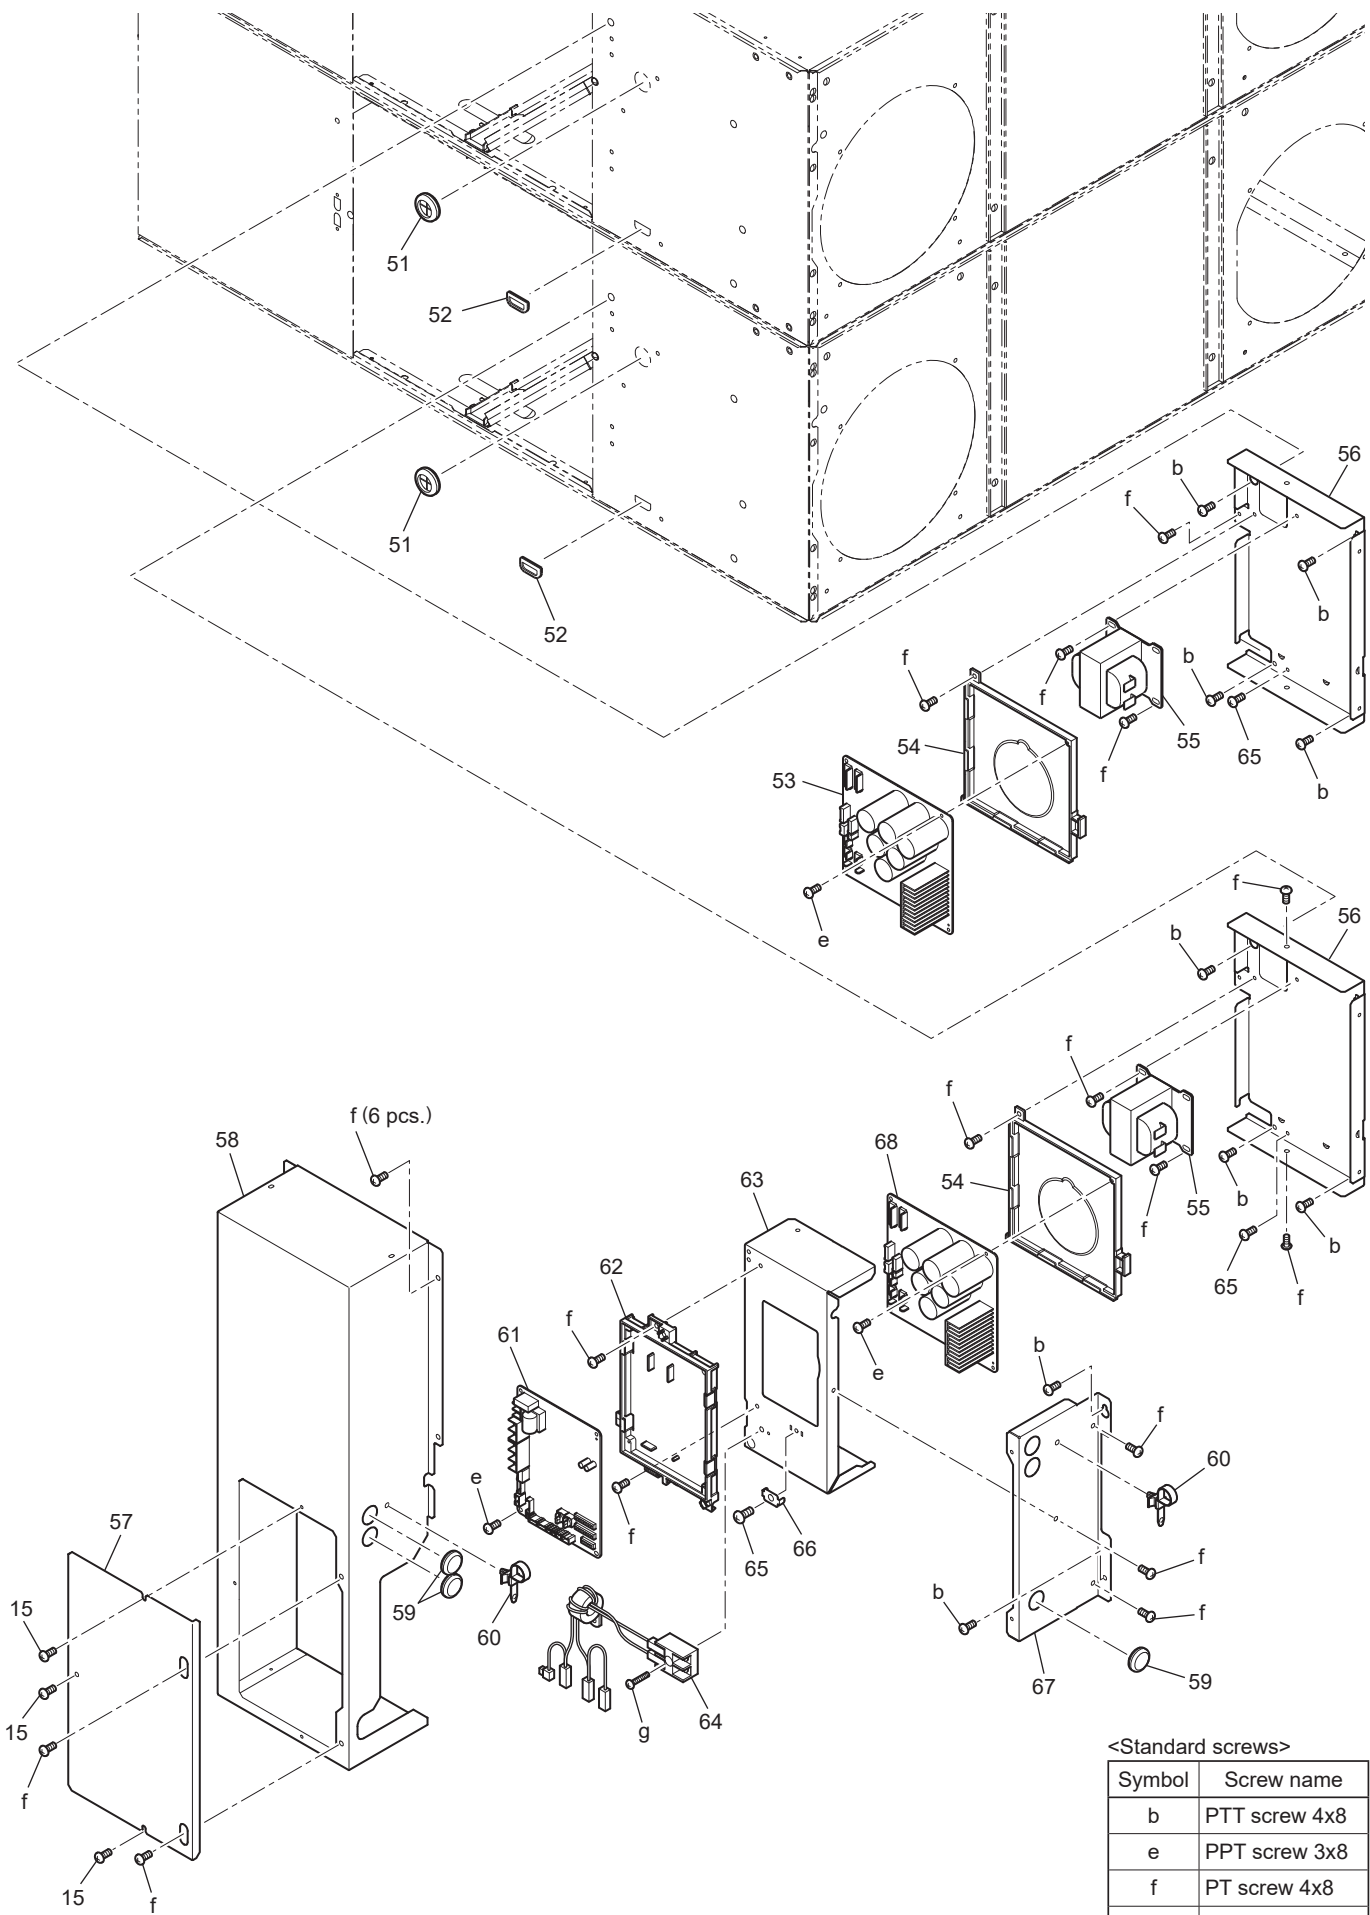


Control parts

TLGHF0940RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
51	Cord bush	W00 000 277	2		
52	Bush	W00 000 278	2		
53	Circuit board	W50 023 172	1	⚠	Power, Upper
54	PCB case	W50 021 380	2		
55	Reactor	W50 028 181	2	⚠	White · AC6.5A
56	Control base	W50 019 704	2		
57	Control cover	W50 019 709	1		
58	Control box cover	W50 019 708	1		
59	Cord bush	W00 000 270	3		
60	Cord band	W00 000 258	2		
61	Circuit board	W50 025 171	1	⚠	Control
62	PCB fix plate	W50 021 706	1		
63	Sub control base	W50 021 715	1		
64	Terminal block	W50 023 214	1	⚠	2P, With the lead wires
65	PT screw 4x8 BS	W00 000 011	3		
66	Earth fix plate	W82 001 706	1		
67	Side plate	W50 019 706	1		
68	Circuit board	W50 023 171	1	⚠	Power, Lower

Wiring parts

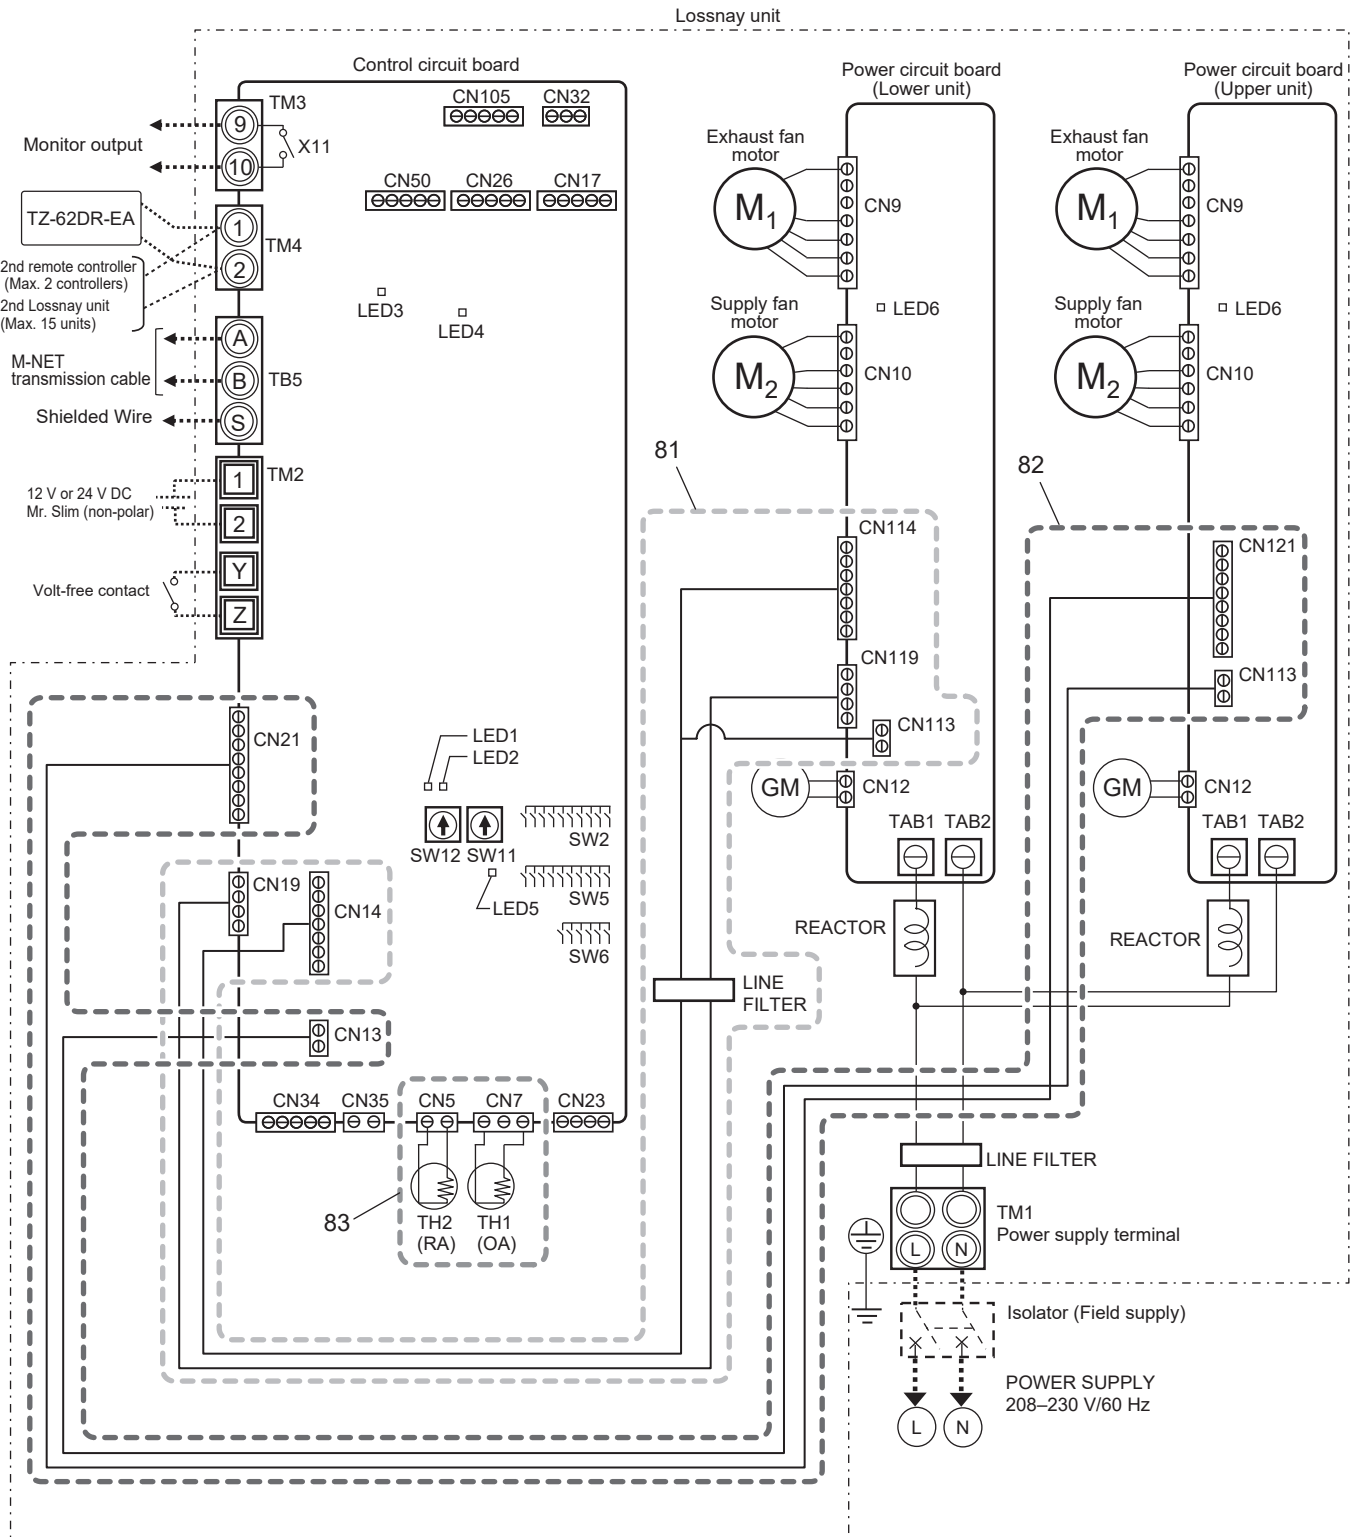


Wiring parts

TLGHF0940RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Lead wire	W50 023 213	1	△	
82	Lead wire	W50 021 214	1	△	
83	Thermistor	W50 023 167	1	△	OA・RA set
84	Lead wire	W50 004 231	1	△	3 15/16 inch (100 mm)

Structural parts

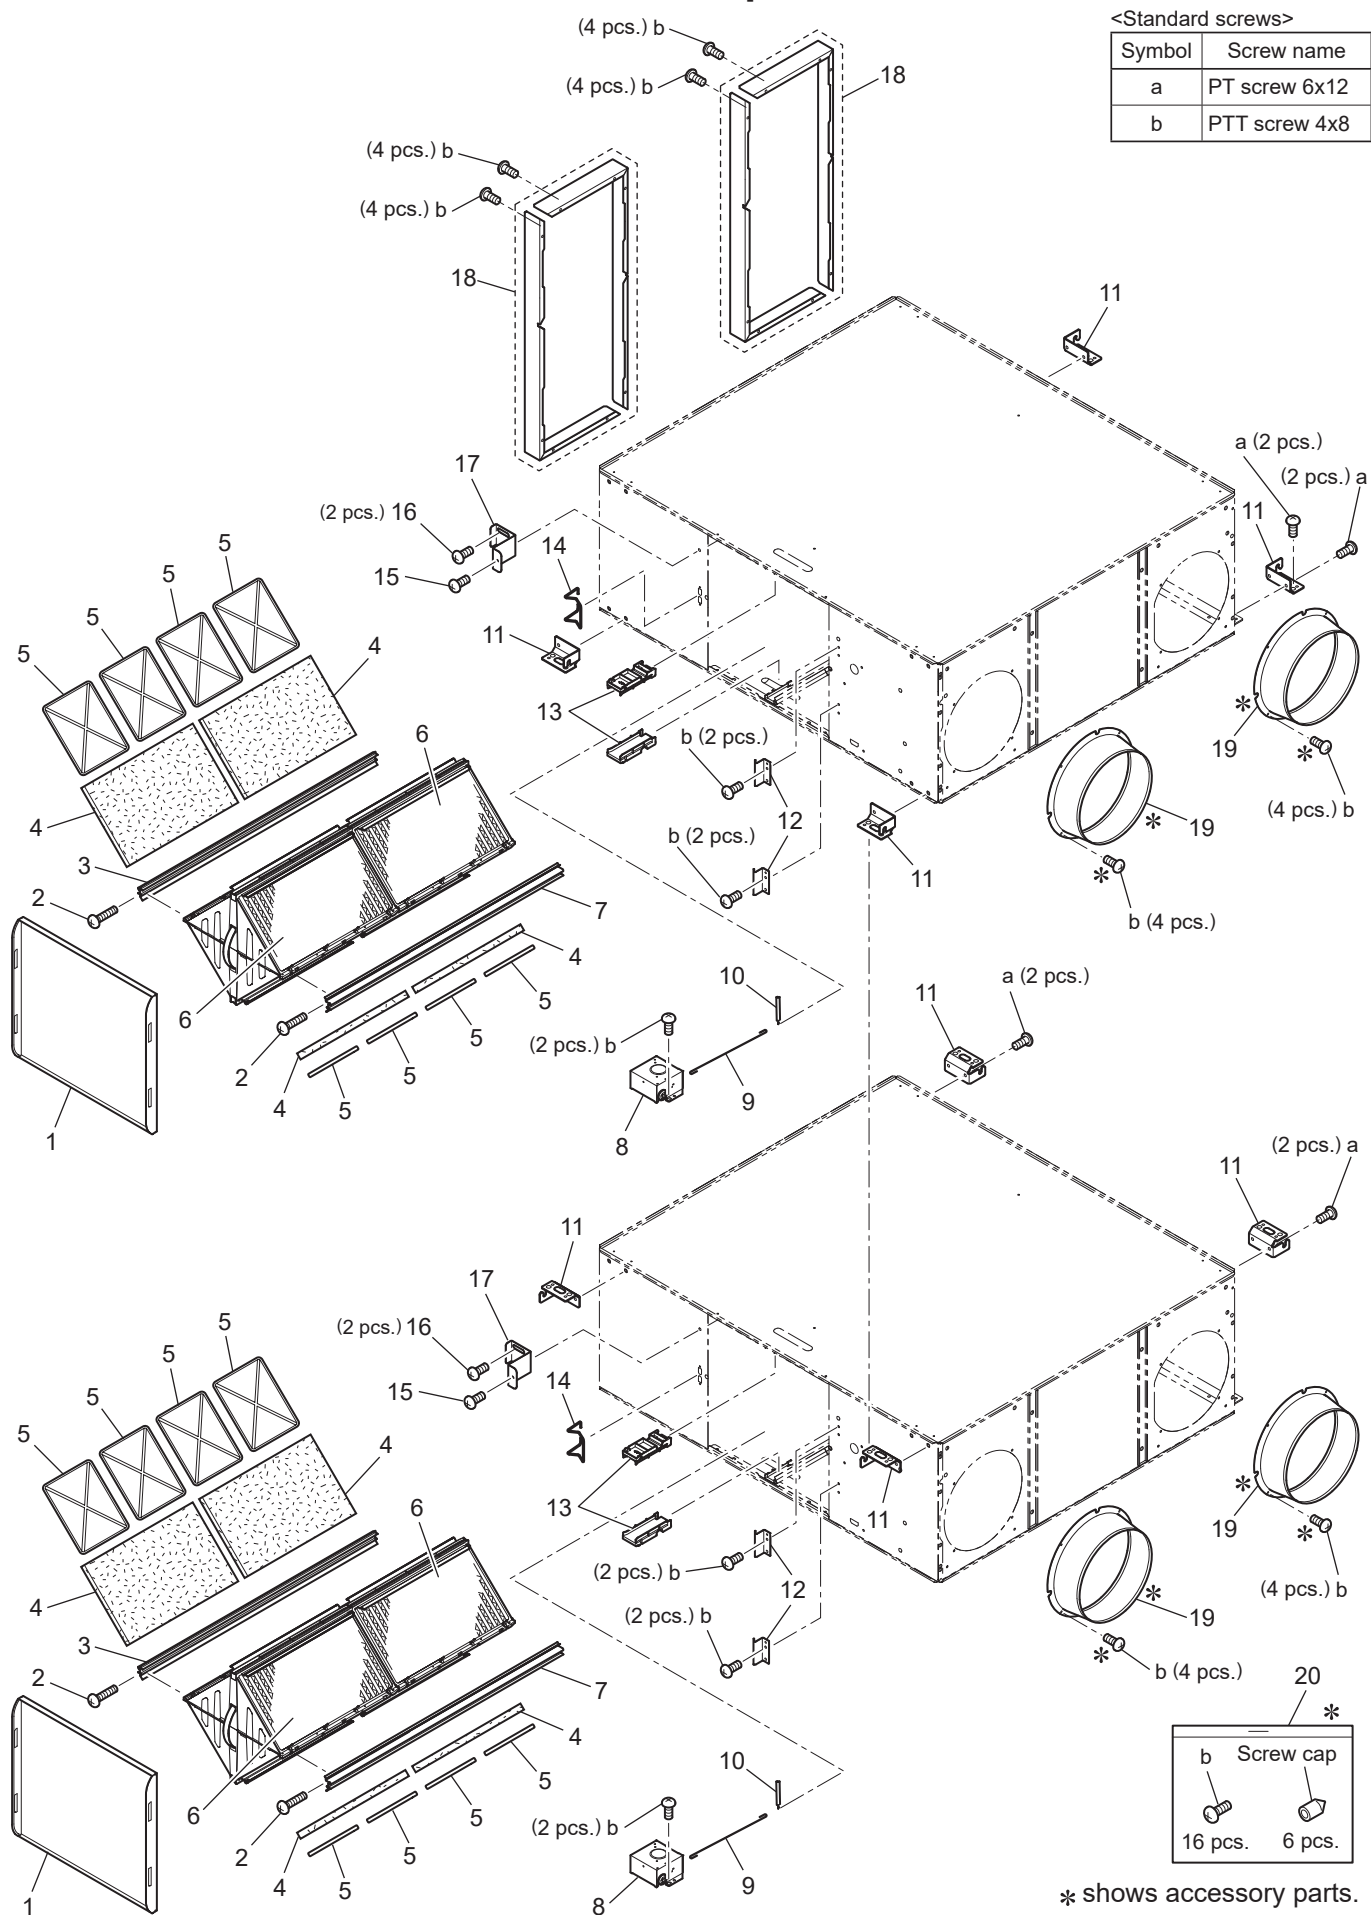


Structural parts

TLGHF1200RVX02A


No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 013 711	2		
2	Special screw M4	W00 000 101	4		
3	Core guide L	W50 013 385	2		
4	Filter	W50 023 720	8	⚠	
5	Filter stopper	W50 016 711	16		
6	Lossnay core	W50 004 721	4	⚠	With the filter stoppers
7	Core guide R	W50 013 392	2		
8	GM assembly	W50 019 262	2	⚠	AC220・240V
9	Rod	W50 004 150	2		
10	Pull spring	W50 013 157	2		
11	Hanger	W50 001 382	8		
12	Fix piece	W50 013 722	4		
13	Lead support	W50 013 706	4		
14	Hinge	W50 004 344	2		
15	Special screw 4x8	W00 000 089	5		
16	Special screw 4x8	W00 000 098	4		
17	Fix piece	W50 004 731	2		
18	Flange (A/B)	W50 013 707	2		
19	Flange	W50 003 610	4		
20	Screws in bag	W50 013 052	1		

Fan parts

Air exhaust fan assembly

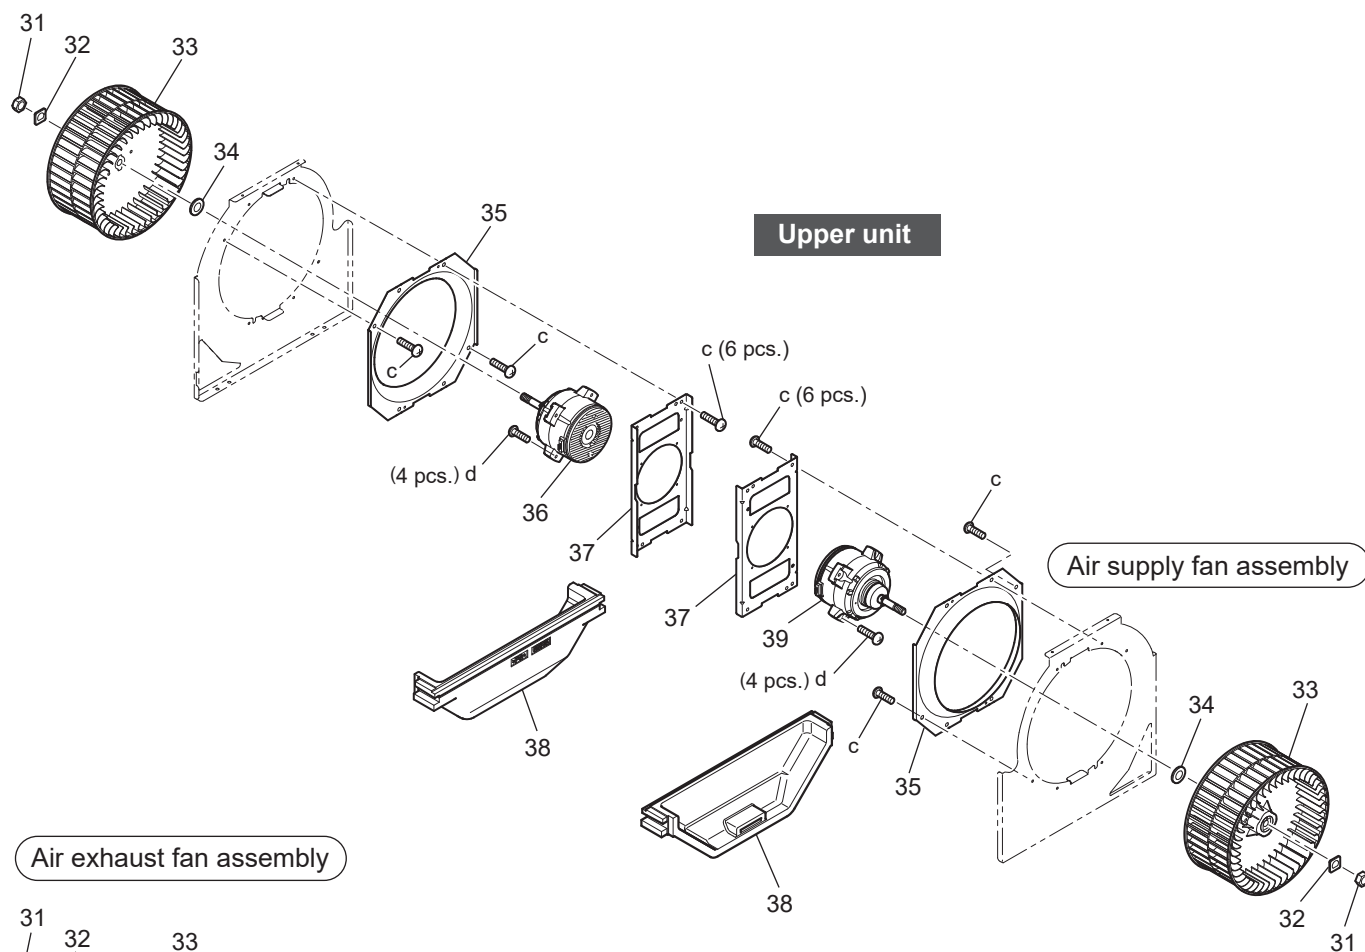

Air exhaust fan assembly

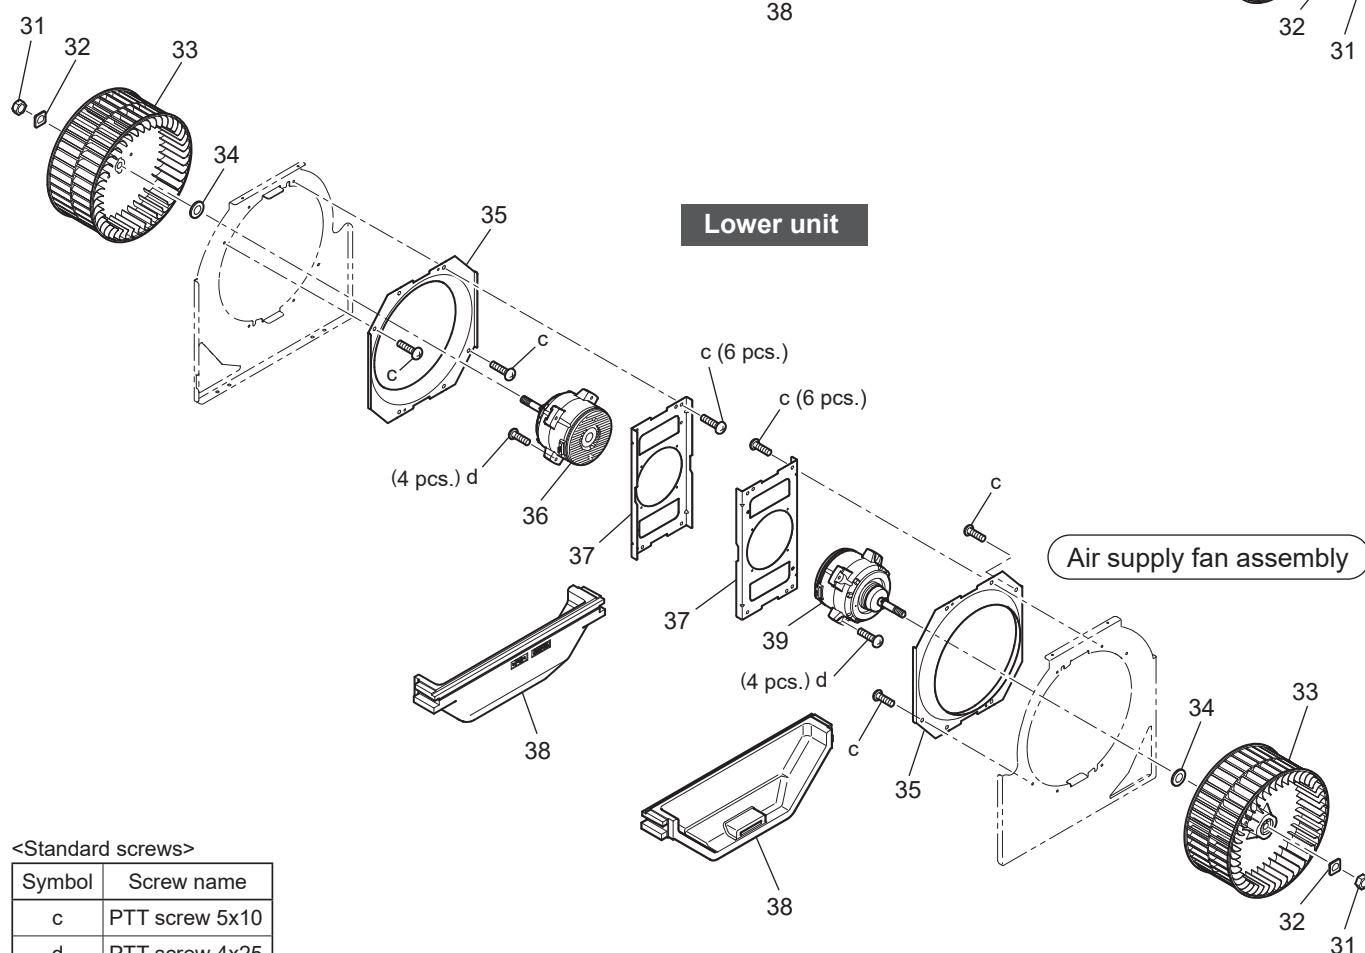

<Standard screws>


Symbol	Screw name
c	PTT screw 5x10
d	PTT screw 4x25

Fan parts

TLGHF1200RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	Special nut (M12)	W00 000 117	4		Left-handed
32	Tab washer	W50 004 730	4		
33	Centrifugal fan	W50 004 482	4	⚠	Dia. 9 5/8 inch (245 mm)
34	Washer (12)	W00 000 123	4		Outer dia. 15/16 inch (24 mm)
35	Inlet ring	W50 004 725	4		
36	DC motor (EA)	W50 023 458	2	⚠	
37	Motor fix plate	W50 004 736	4		
38	Separator	W50 013 487	4		
39	DC motor (SA)	W50 023 457	2	⚠	

Control parts

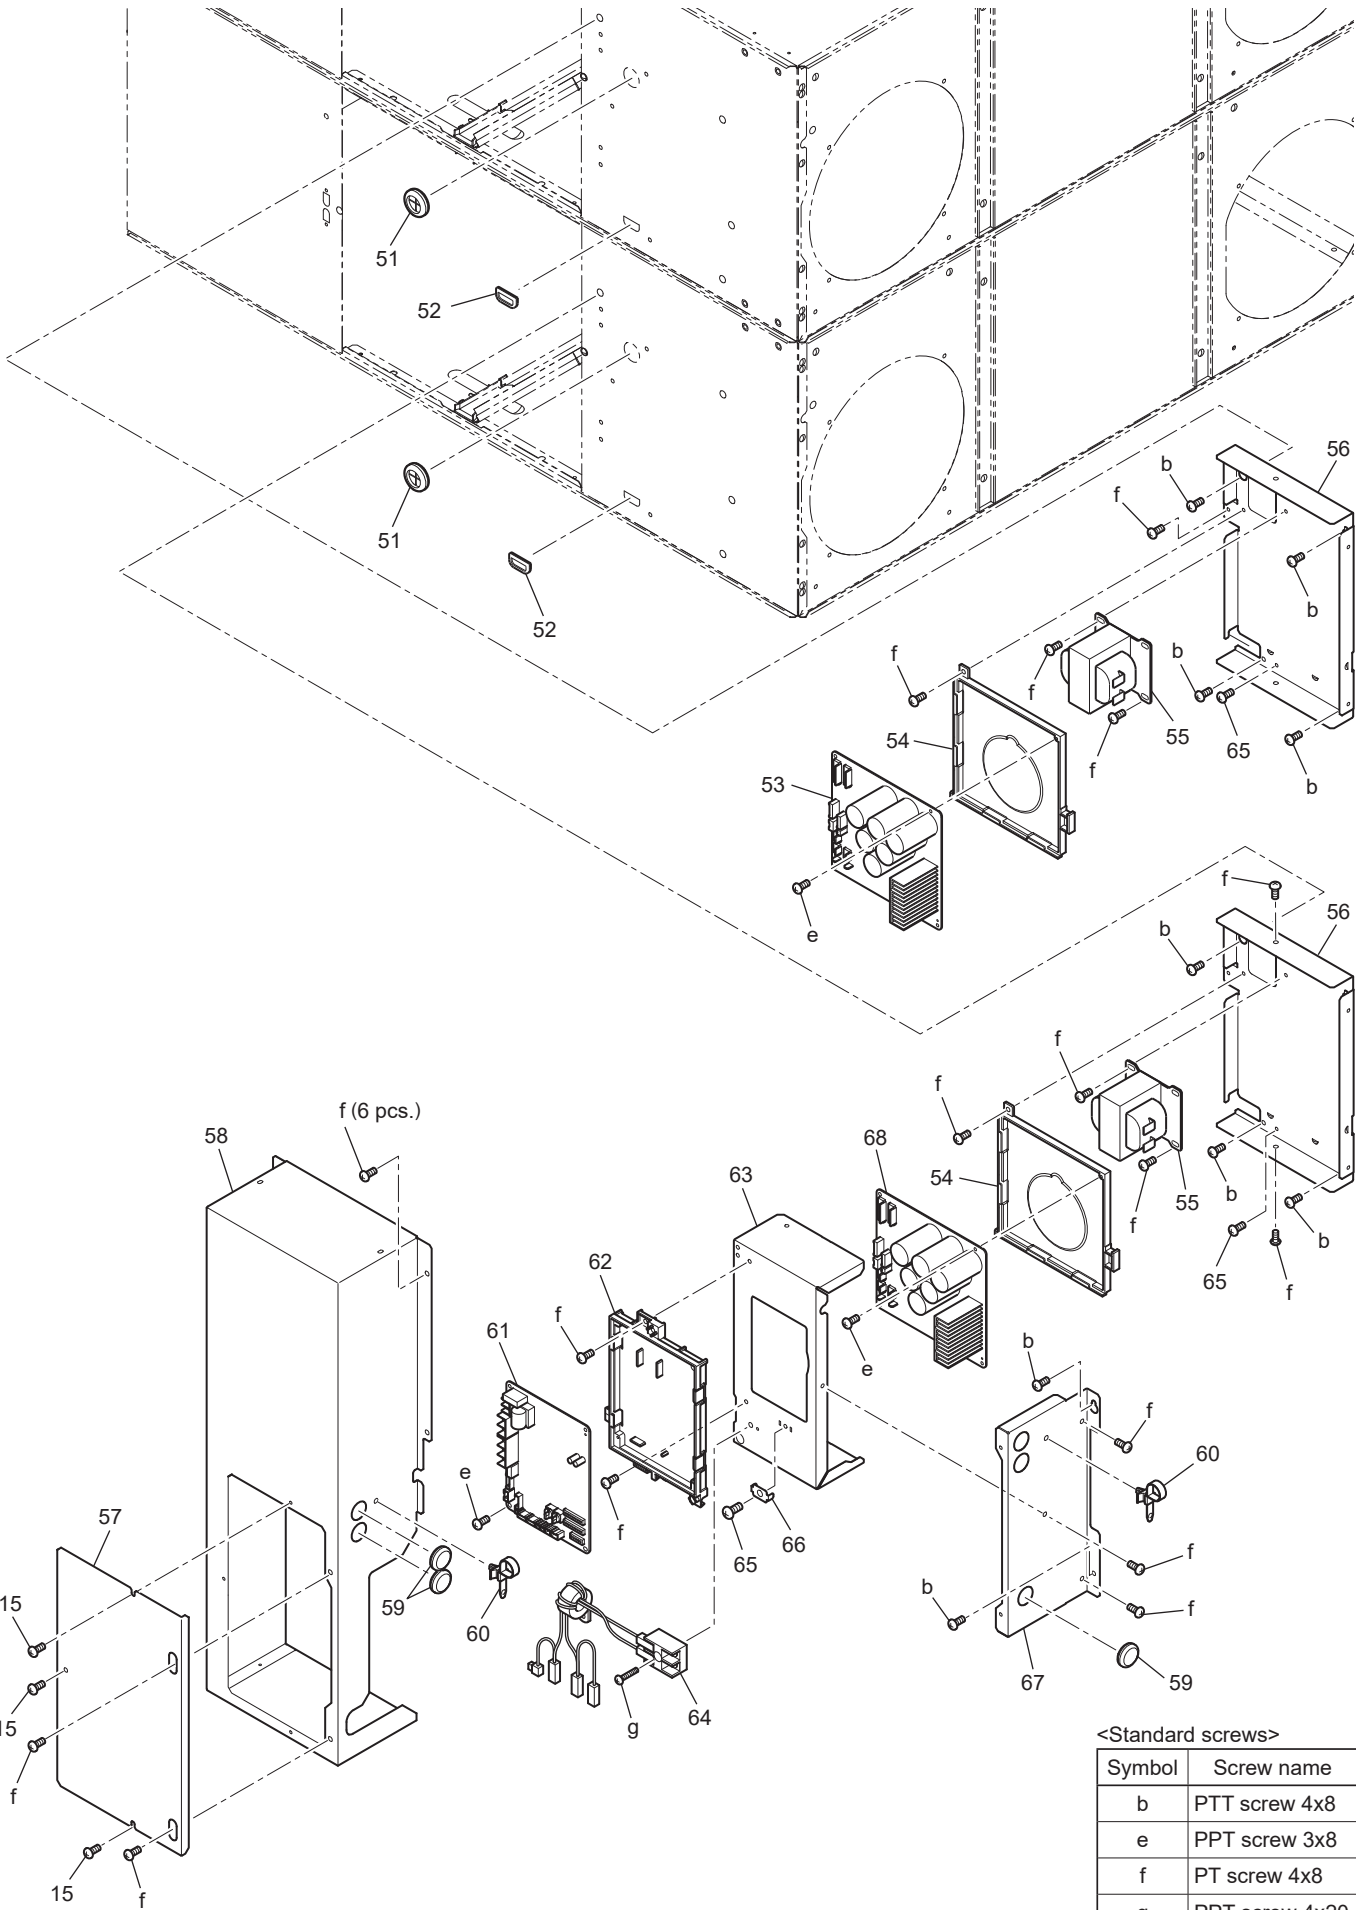

<Standard screws>



Symbol	Screw name
b	PTT screw 4x8
e	PPT screw 3x8
f	PT screw 4x8
g	PPT screw 4x20

Control parts

TLGHF1200RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
51	Cord bush	W00 000 277	2		
52	Bush	W00 000 278	2		
53	Circuit board	W50 023 172	1	⚠	Power, Upper
54	PCB case	W50 021 380	2		
55	Reactor	W50 028 181	2	⚠	White · AC6.5A
56	Control base	W50 019 704	2		
57	Control cover	W50 019 709	1		
58	Control box cover	W50 019 708	1		
59	Cord bush	W00 000 270	3		
60	Cord band	W00 000 258	2		
61	Circuit board	W50 025 171	1	⚠	Control
62	PCB fix plate	W50 021 706	1		
63	Sub control base	W50 021 715	1		
64	Terminal block	W50 023 214	1	⚠	2P, With the lead wires
65	PT screw 4x8 BS	W00 000 011	3		
66	Earth fix plate	W82 001 706	1		
67	Side plate	W50 019 706	1		
68	Circuit board	W50 023 171	1	⚠	Power, Lower

 Wiring parts

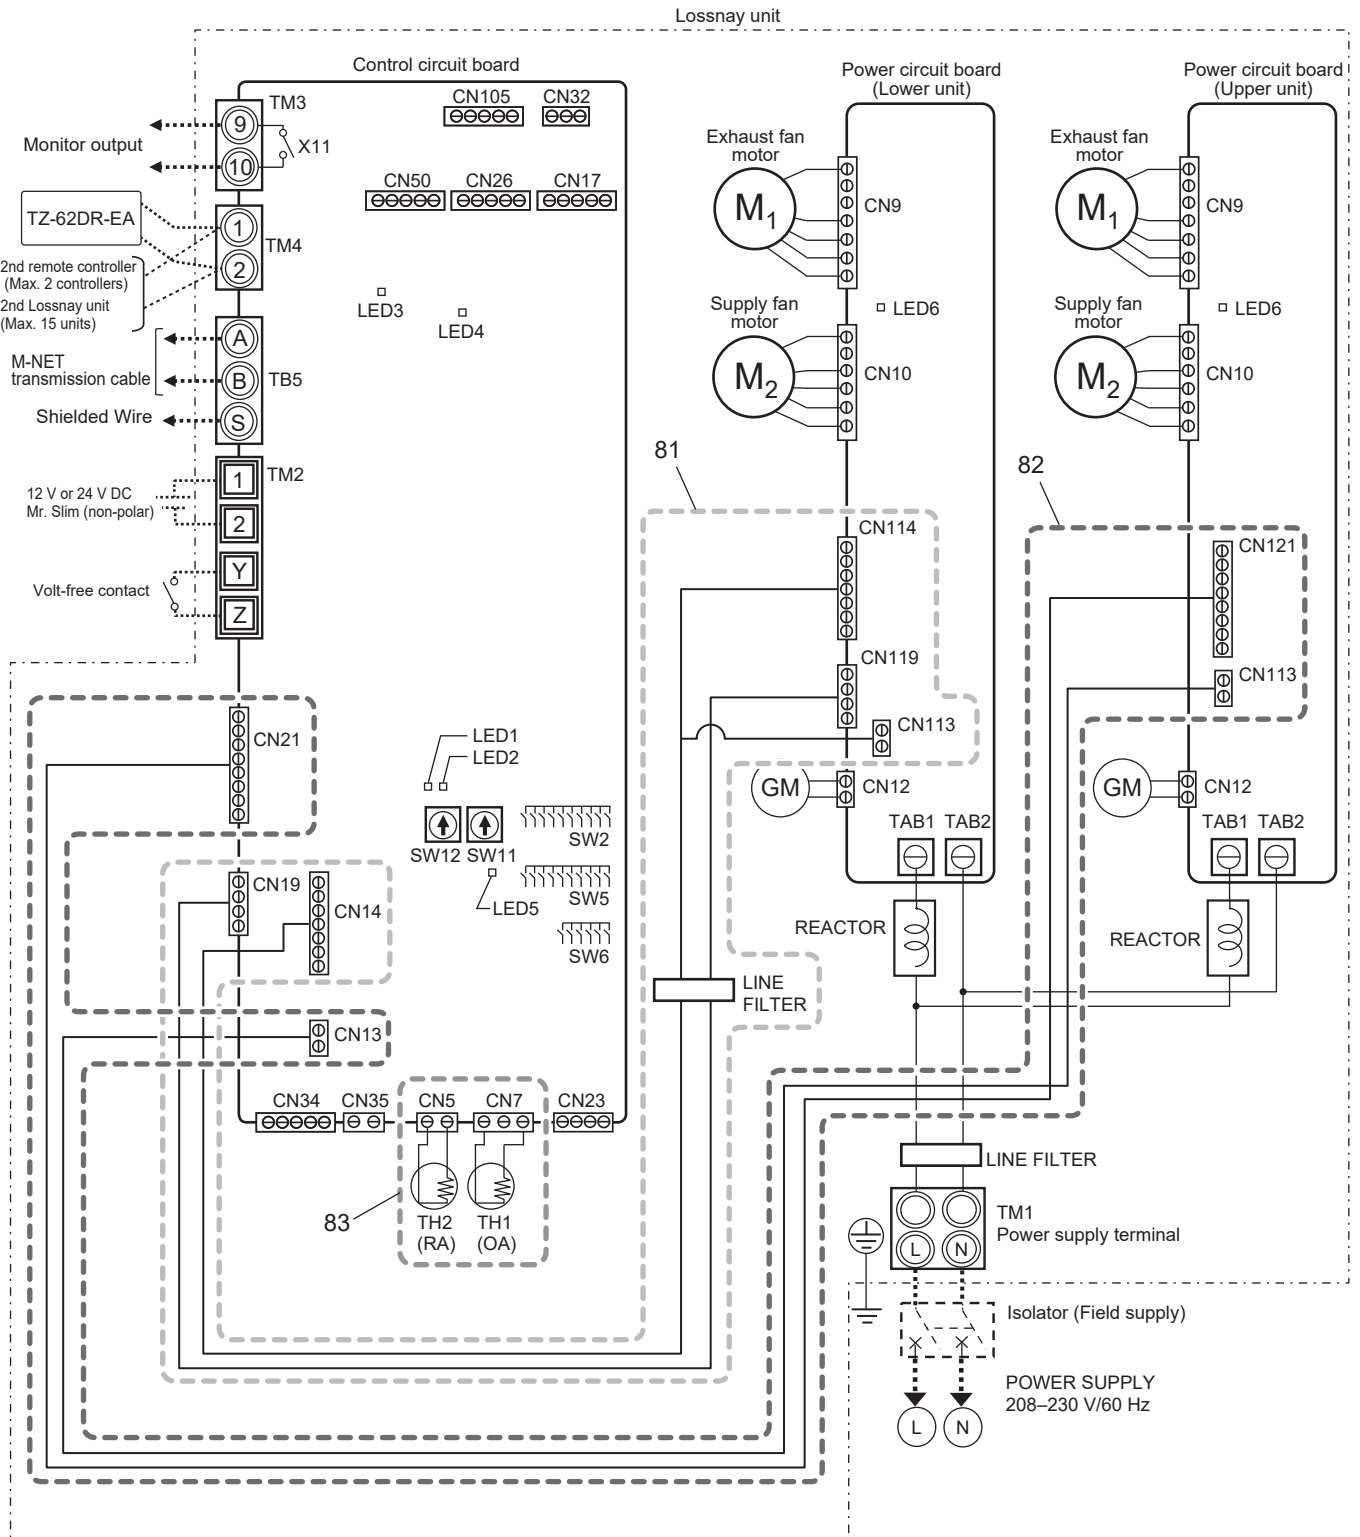

Wiring parts

TLGHF1200RVX02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Lead wire	W50 023 213	1	△	
82	Lead wire	W50 021 214	1	△	
83	Thermistor	W50 023 168	1	△	OA・RA set
84	Lead wire	W50 004 231	1	△	3 15/16 inch (100 mm)