


HOT WATER HEAT PUMP HJ-40A

Installation Instructions for the Housing joint 40A

■ Parts list

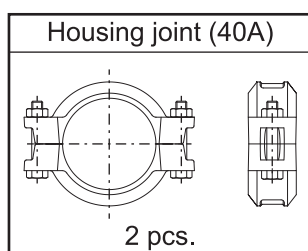

■ Installing the joint

Attach the joint to the plate heat exchanger on the unit and connect the plate heat exchanger to the water piping. When installing the joint, pay attention to the orientation of the bolts and nuts, and make sure they do not interfere with other components.

Also, apply a silicone based lubricant to the rubber parts.

When tightening the nuts, it's important not only to control the torque, but also to make sure that two joints are properly aligned.

Misalignment may result in water leaks or pipe disconnection.

<Unit: mm>

