October 2025 No. U325-C


MITSUBISHI ELECTRIC

LOSSNAY ENERGY RECOVERY VENTILATOR

PARTS CATALOG

MODELS

TLGHF0940RVXT02A
TLGHF1200RVXT02A
TLGHF1500RVXT02A
LGH-F940RVXT2-E
LGH-F1200RVXT2-E
LGH-F1500RVXT2-E

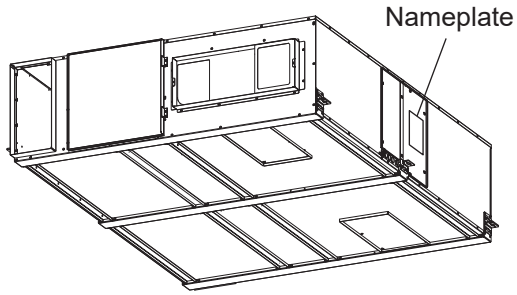

Warning:
Repair work must be performed by the manufacturer, its service agent or a similarly qualified person in order to avoid hazards.

MITSUBISHI ELECTRIC CORPORATION

Contents

Parts catalog ····· 3-51
TLGHF0940RVXT02A ····· 4-11
TLGHF1200RVXT02A ····· 12-19
TLGHF1500RVXT02A ····· 20-27
LGH-F940RVXT2-E ····· 28-35
LGH-F1200RVXT2-E ····· 36-43
LGH-F1500RVXT2-E ····· 44-51


HANDBOOK (U325H)

Parts catalog

Please note the following when using the parts catalog.

1. When ordering parts, the part number, part name, and the number of parts are required.
2. It may take time for you to receive the parts. Make an inquiry about a rush order.
3. Specifications may be subject to change without notice.
4. Parts marked with ⚠ and ▒▒ are critical for safety.
5. To maintain safety and performance, use the parts specified in the parts catalog.
6. When replacing the parts to which the nameplate is attached, remove the nameplate and attach it to the new parts.


Description of screw abbreviations

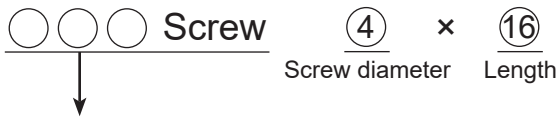

Abbreviation	Description
PC screw	Cross recess flat head machine screw
PRC screw	Cross recess oval head machine screw
PP screw	Cross recess pan head machine screw
SW · PP screw	Cross recess pan head screw with spring washer
PPT screw	Cross recess tapping screw
PCT screw	Cross recess flat head tapping screw
PTT screw	Cross recess truss head tapping screw
PT screw	Cross recess truss head machine screw
SET screw	Slotted head stop screw
SQ · SET screw	Square head stop screw
P · SET screw	Pan head stop screw
PMT screw	Primer truss head screw
HS · SET screw	Hexagon head stop screw
P · R · W screw	Cross recess round wood screw
P · C · W screw	Cross recess flat head wood screw
P · R · C · W screw	Cross recess round and flat wood screw
R · W screw	Slotted round wood screw
PW · PP screw	Cross recess pan head screw with small washer
SW-PW · PP screw	Cross recess pan head machine screw with spring washer and flat washer

TLGHF0940RVXT02A

Structural parts

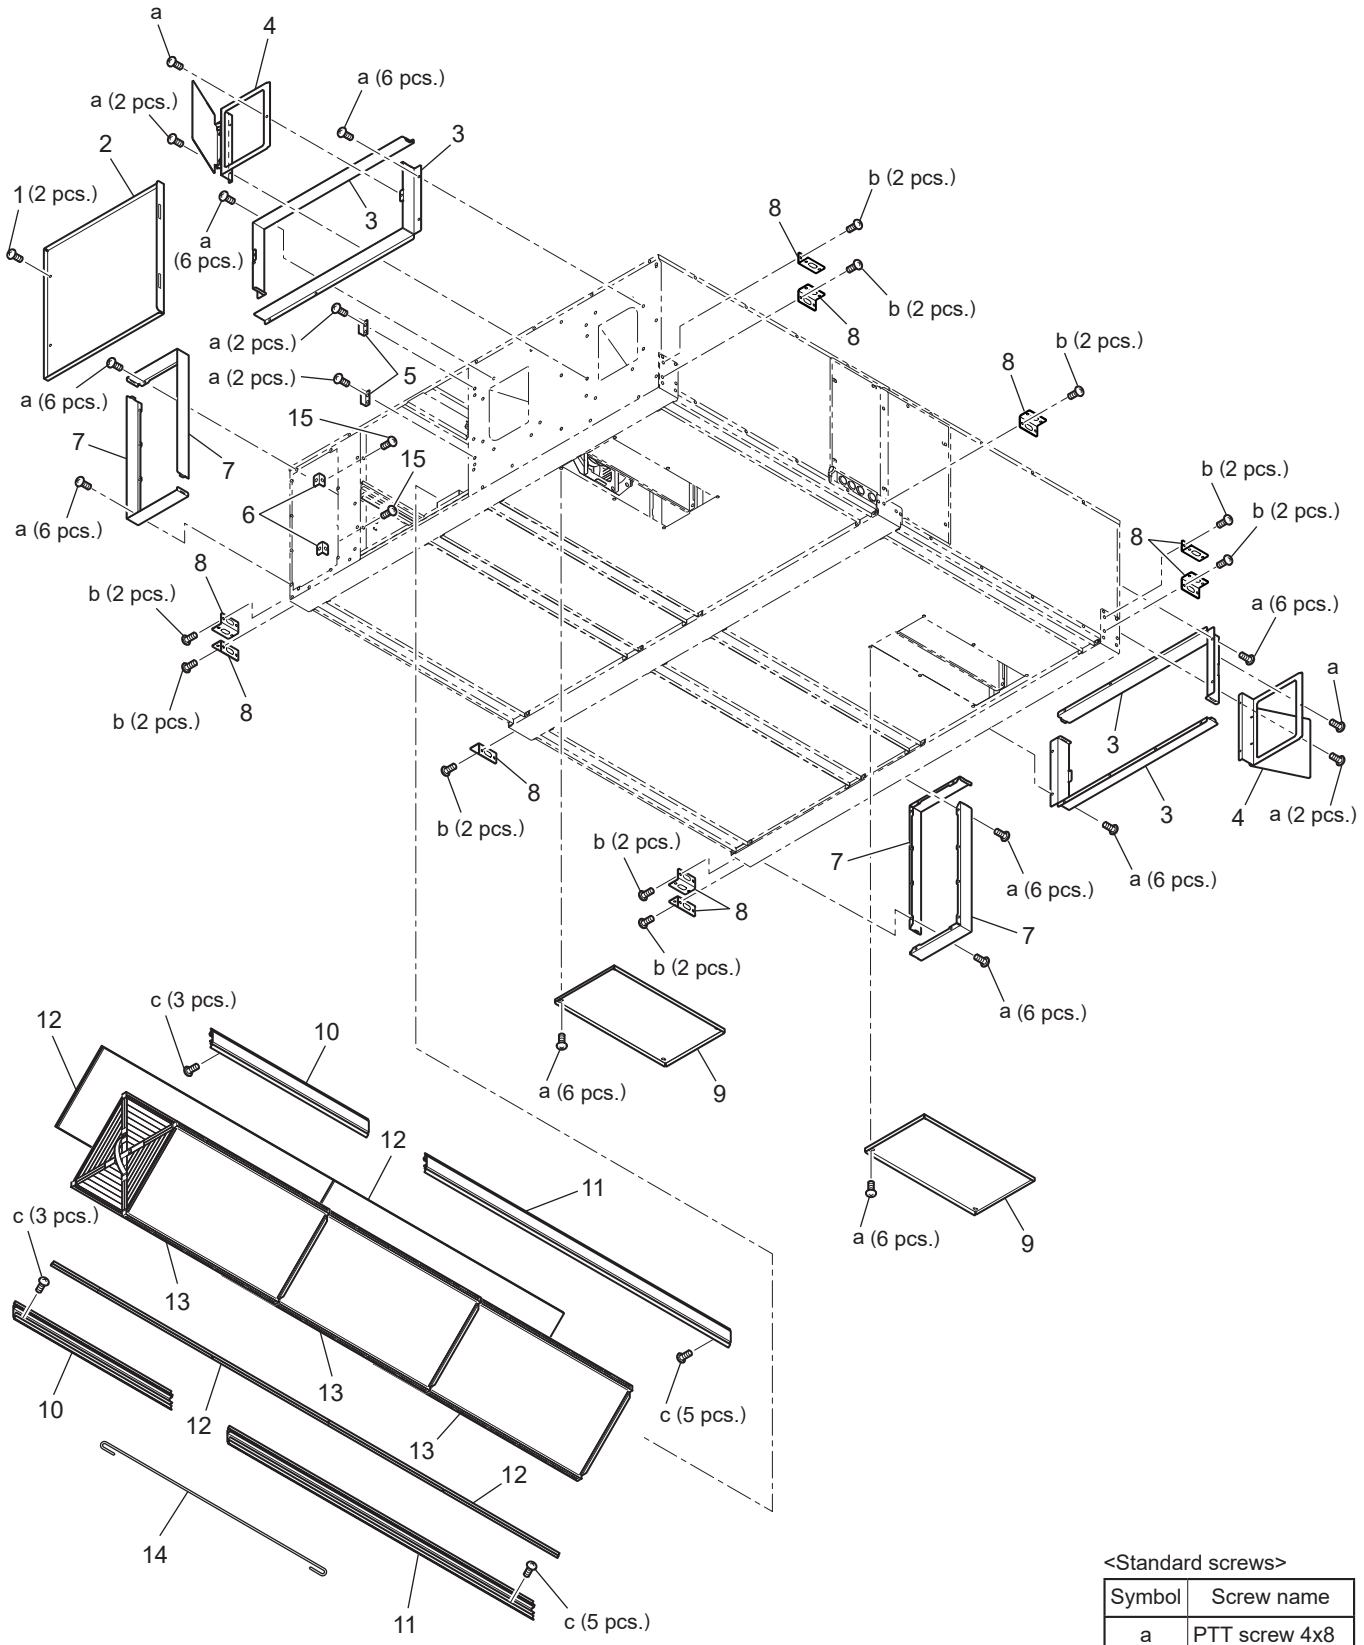

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
b	PT screw 6x12
c	PPT screw 4x8

Structural parts

TLGHF0940RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Special screw 4x12	W00 000 249	2		
2	Maintenance cover	W50 025 833	1		
3	Flange SA/EA	W50 025 709	4		
4	Shutter	W50 025 834	2		
5	Fix piece	W50 013 722	2		
6	Lock piece	W50 025 713	2		
7	Flange OA/RA	W50 025 708	4		
8	Hanger	W50 004 382	10		
9	Maintenance cover	W50 025 710	2		For the fans
10	Lossnay core holder	W50 025 381	2		675mm
11	Lossnay core holder	W50 025 382	2		1315mm
12	Filter	W50 027 717	4	⚠	
13	Lossnay core	W50 027 832	3	⚠	
14	Maintenance rod	W50 025 707	1		
15	Special screw 4x8	W00 000 089	11		

Fan parts

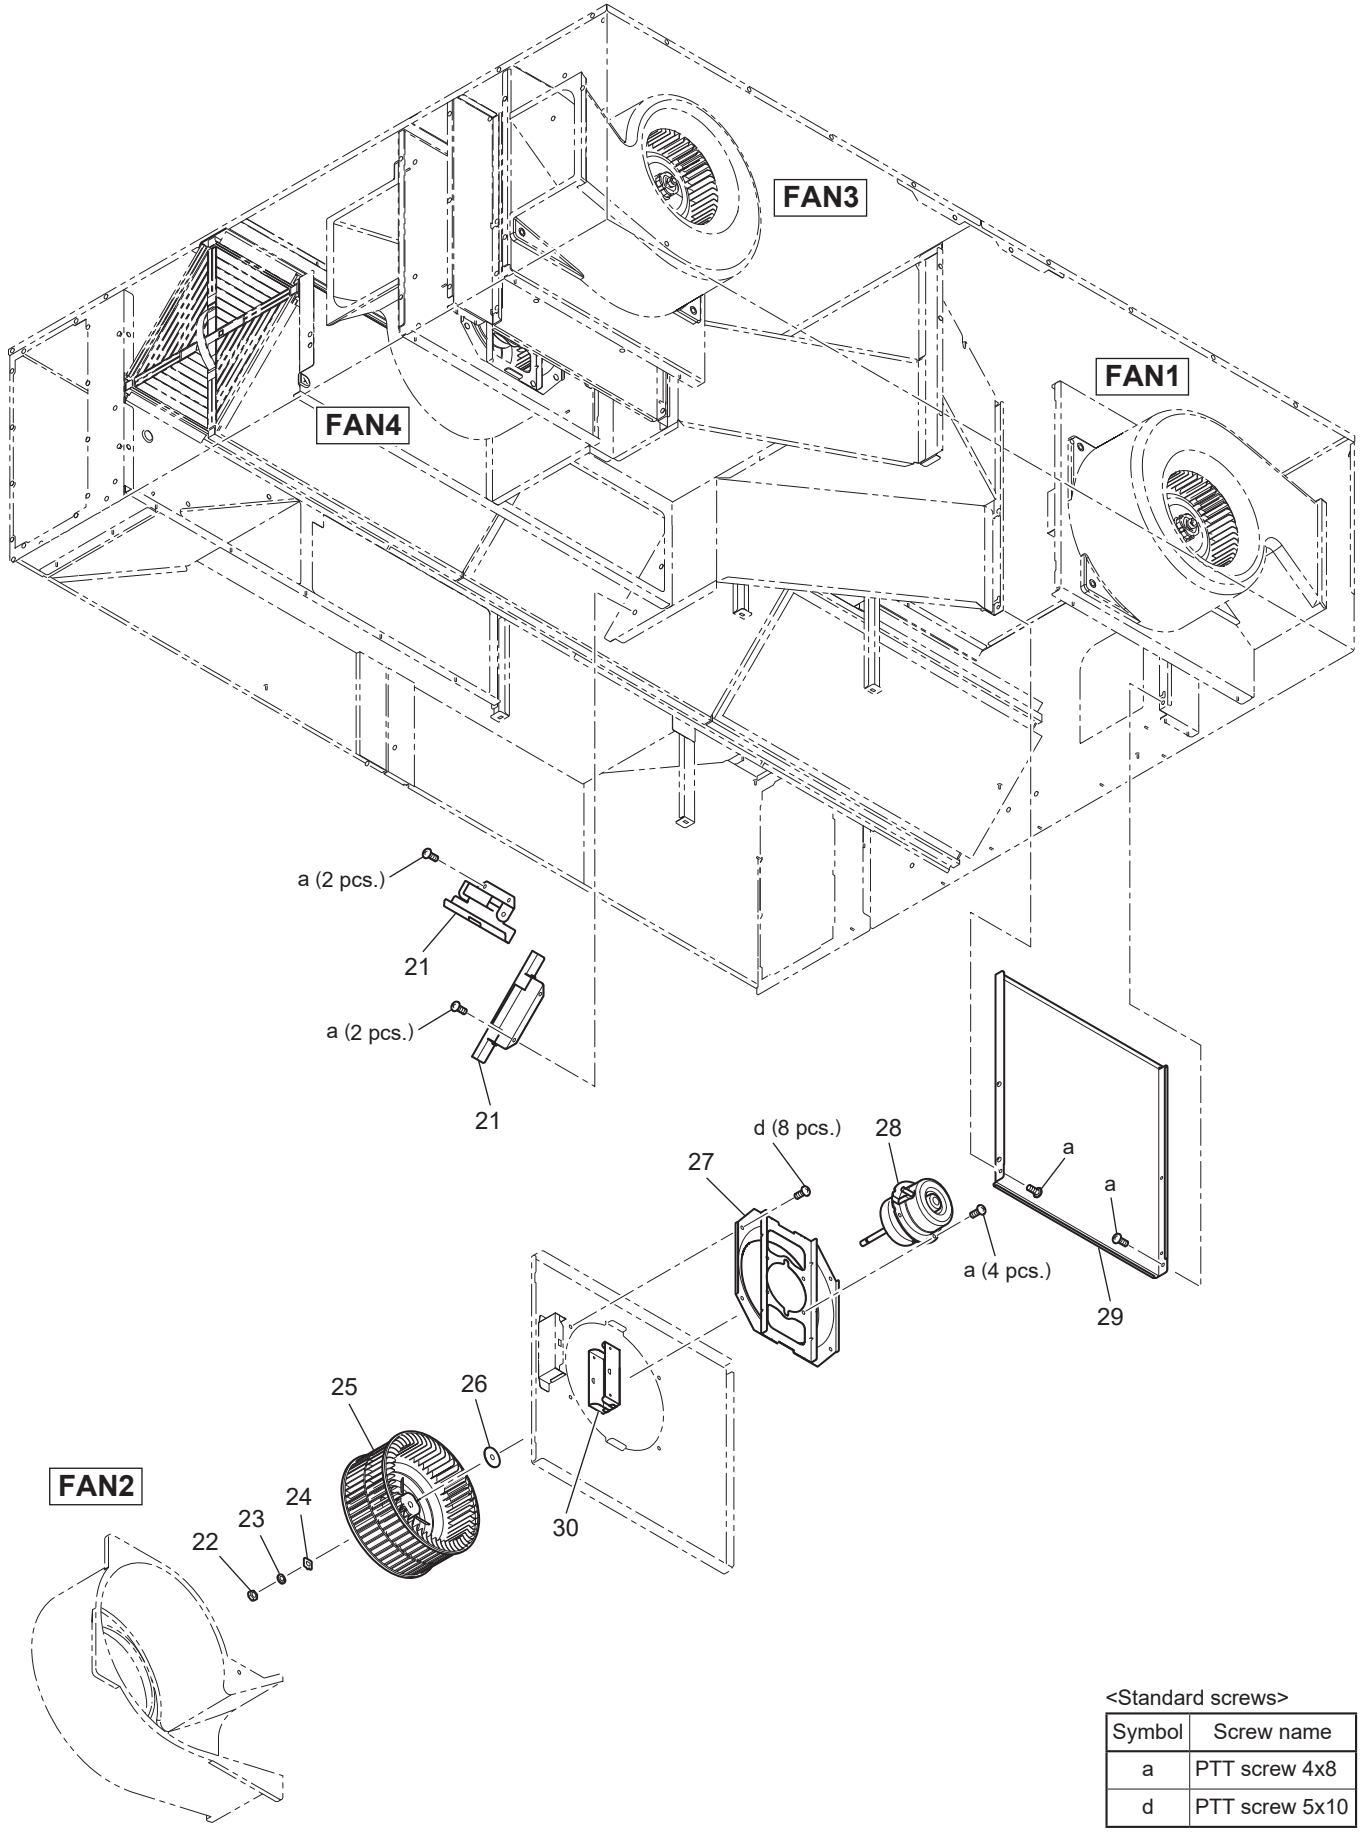

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
d	PTT screw 5x10

Fan parts

TLGHF0940RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Filter curtain	W50 025 715	2		
22	Special nut (M10)	W00 000 195	4		Left-handed
23	Spring washer (10)	W00 000 301	4		
24	Tab washer	W50 013 712	4		
25	Centrifugal fan	W50 025 480	4	⚠	Dia. 245mm
26	Special washer (10)	W50 003 478	4		Outer dia. 40mm
27	Motor fix plate	W50 025 712	4		
28	DC motor	W50 027 453	4	⚠	With the ferrite core
29	Separator	W50 025 711	2		
30	Connector cover (B)	W50 024 708	4		

Control parts

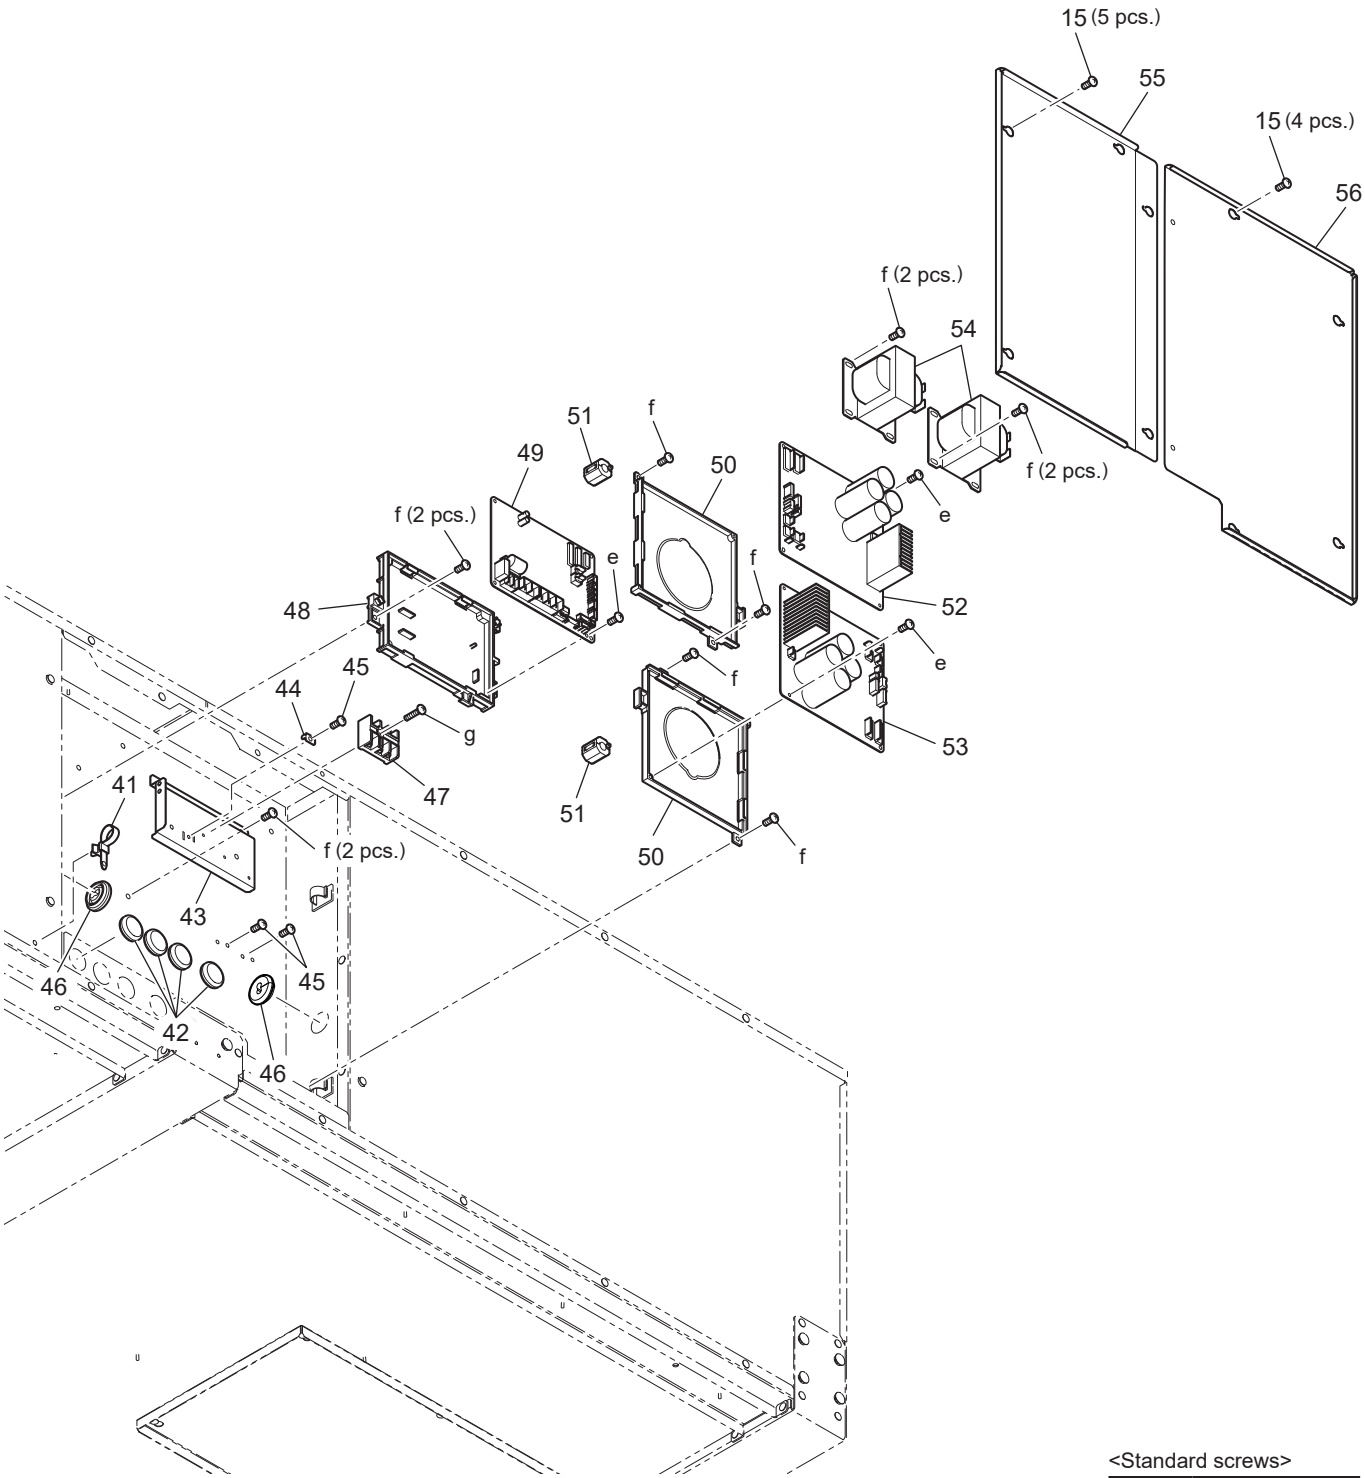

<Standard screws>


Symbol	Screw name
g	PPT screw 4x20
e	PPT screw 3x8
f	PT screw 4x8

Control parts

TLGHF0940RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cord band	W00 000 258	1		
42	Bush	W00 000 289	4		
43	Fix plate	W50 025 704	1		
44	Earth fix plate	W82 001 706	1		
45	PT screw 4x8 BS	W00 000 011	3		
46	Cord bush	W50 024 225	2		
47	Terminal block	W50 027 213	1	⚠	With the lead
48	PCB fix plate	W50 021 706	1		
49	Circuit board	W50 025 171	1	⚠	LG-X08DC-C2
50	PCB fix plate	W50 025 380	2		
51	Ferrite core	W50 024 180	2	⚠	MRFC-13
52	Circuit board	W50 024 171	1	⚠	LG-X08DC-P7
53	Circuit board	W50 024 174	1	⚠	LG-X08DC-P8
54	Reactor	W50 028 180	2	⚠	White・AC10A
55	Control cover A	W50 025 705	1		
56	Control cover B	W50 025 706	1		

Wiring parts

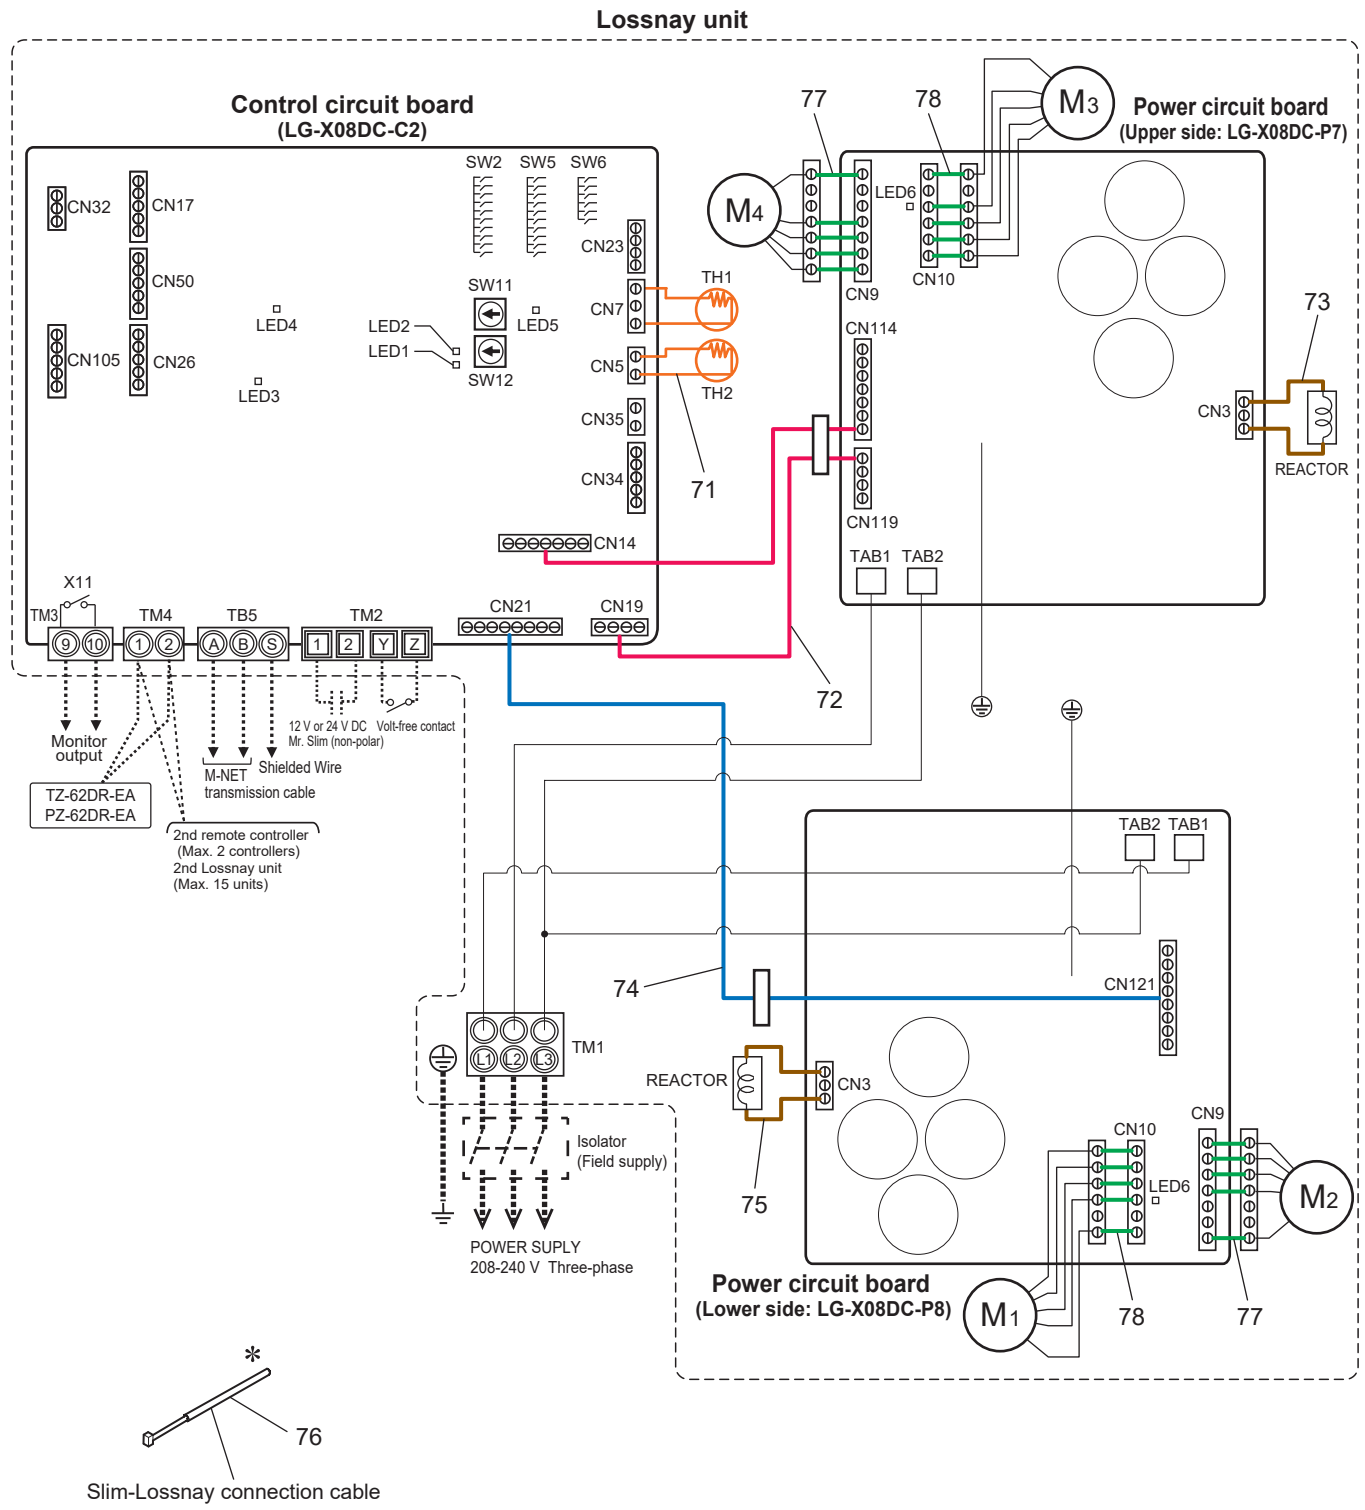

∗ shows accessory parts.


Wiring parts

TLGHF0940RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
71	Thermistor	W50 025 217	1	⚠	
72	Lead wire	W50 025 213	1	⚠	CN14-114, CN19-119
73	Lead wire	W50 027 215	1	⚠	Reactor 1
74	Lead wire	W50 025 214	1	⚠	CN21-121
75	Lead wire	W50 027 214	1	⚠	Reactor 2
76	Lead wire	W50 004 231	1	⚠	100mm
77	Lead wire	W50 030 226	1	⚠	CN9, motor
78	Lead wire	W50 030 225	1	⚠	CN10, motor

TLGHF1200RVXT02A

Structural parts

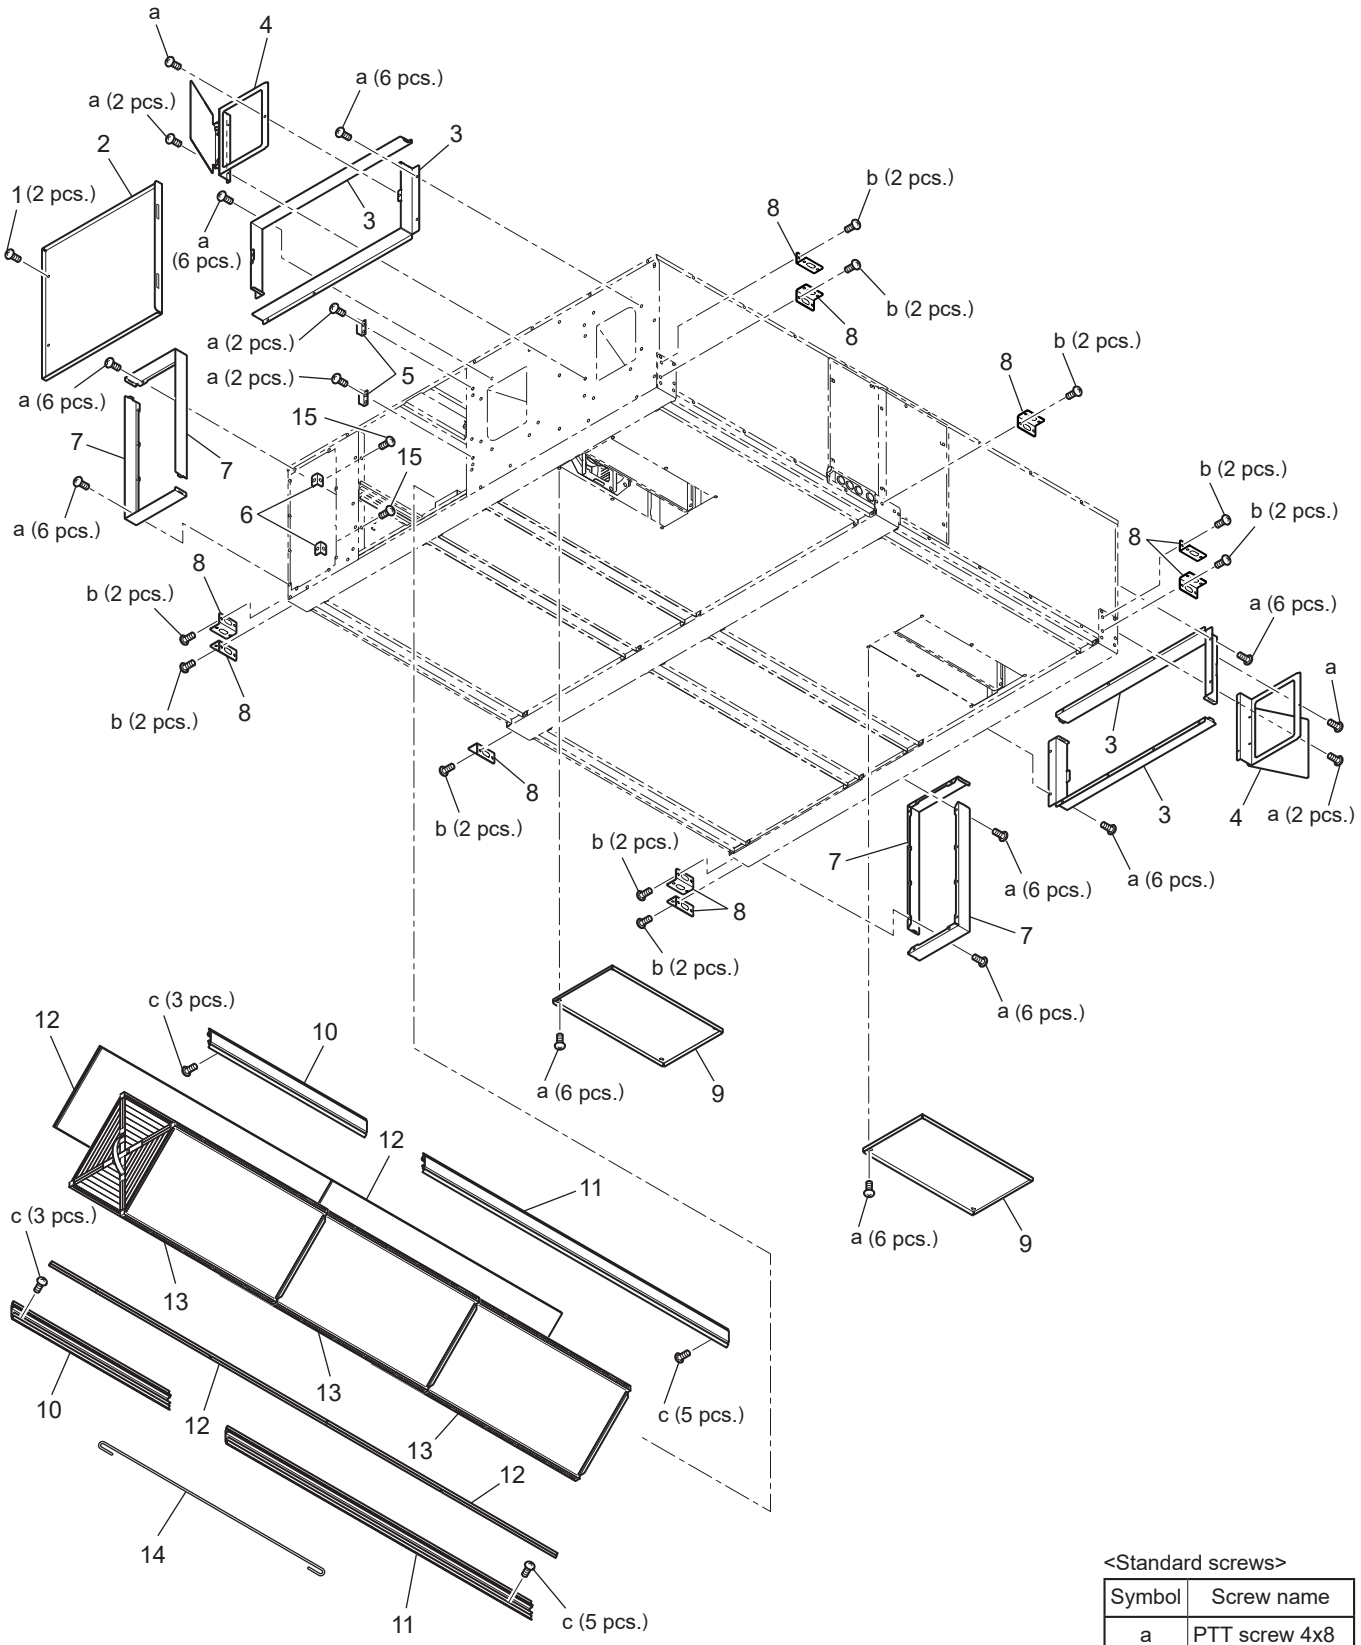

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
b	PT screw 6x12
c	PPT screw 4x8

Structural parts

TLGHF1200RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Special screw 4x12	W00 000 249	2		
2	Maintenance cover	W50 025 833	1		
3	Flange SA/EA	W50 025 709	4		
4	Shutter	W50 025 834	2		
5	Fix piece	W50 013 722	2		
6	Lock piece	W50 025 713	2		
7	Flange OA/RA	W50 025 708	4		
8	Hanger	W50 004 382	10		
9	Maintenance cover	W50 025 710	2		For the fans
10	Lossnay core holder	W50 025 381	2		675mm
11	Lossnay core holder	W50 025 382	2		1315mm
12	Filter	W50 027 717	4	⚠	
13	Lossnay core	W50 027 832	3	⚠	
14	Maintenance rod	W50 025 707	1		
15	Special screw 4x8	W00 000 089	11		

Fan parts

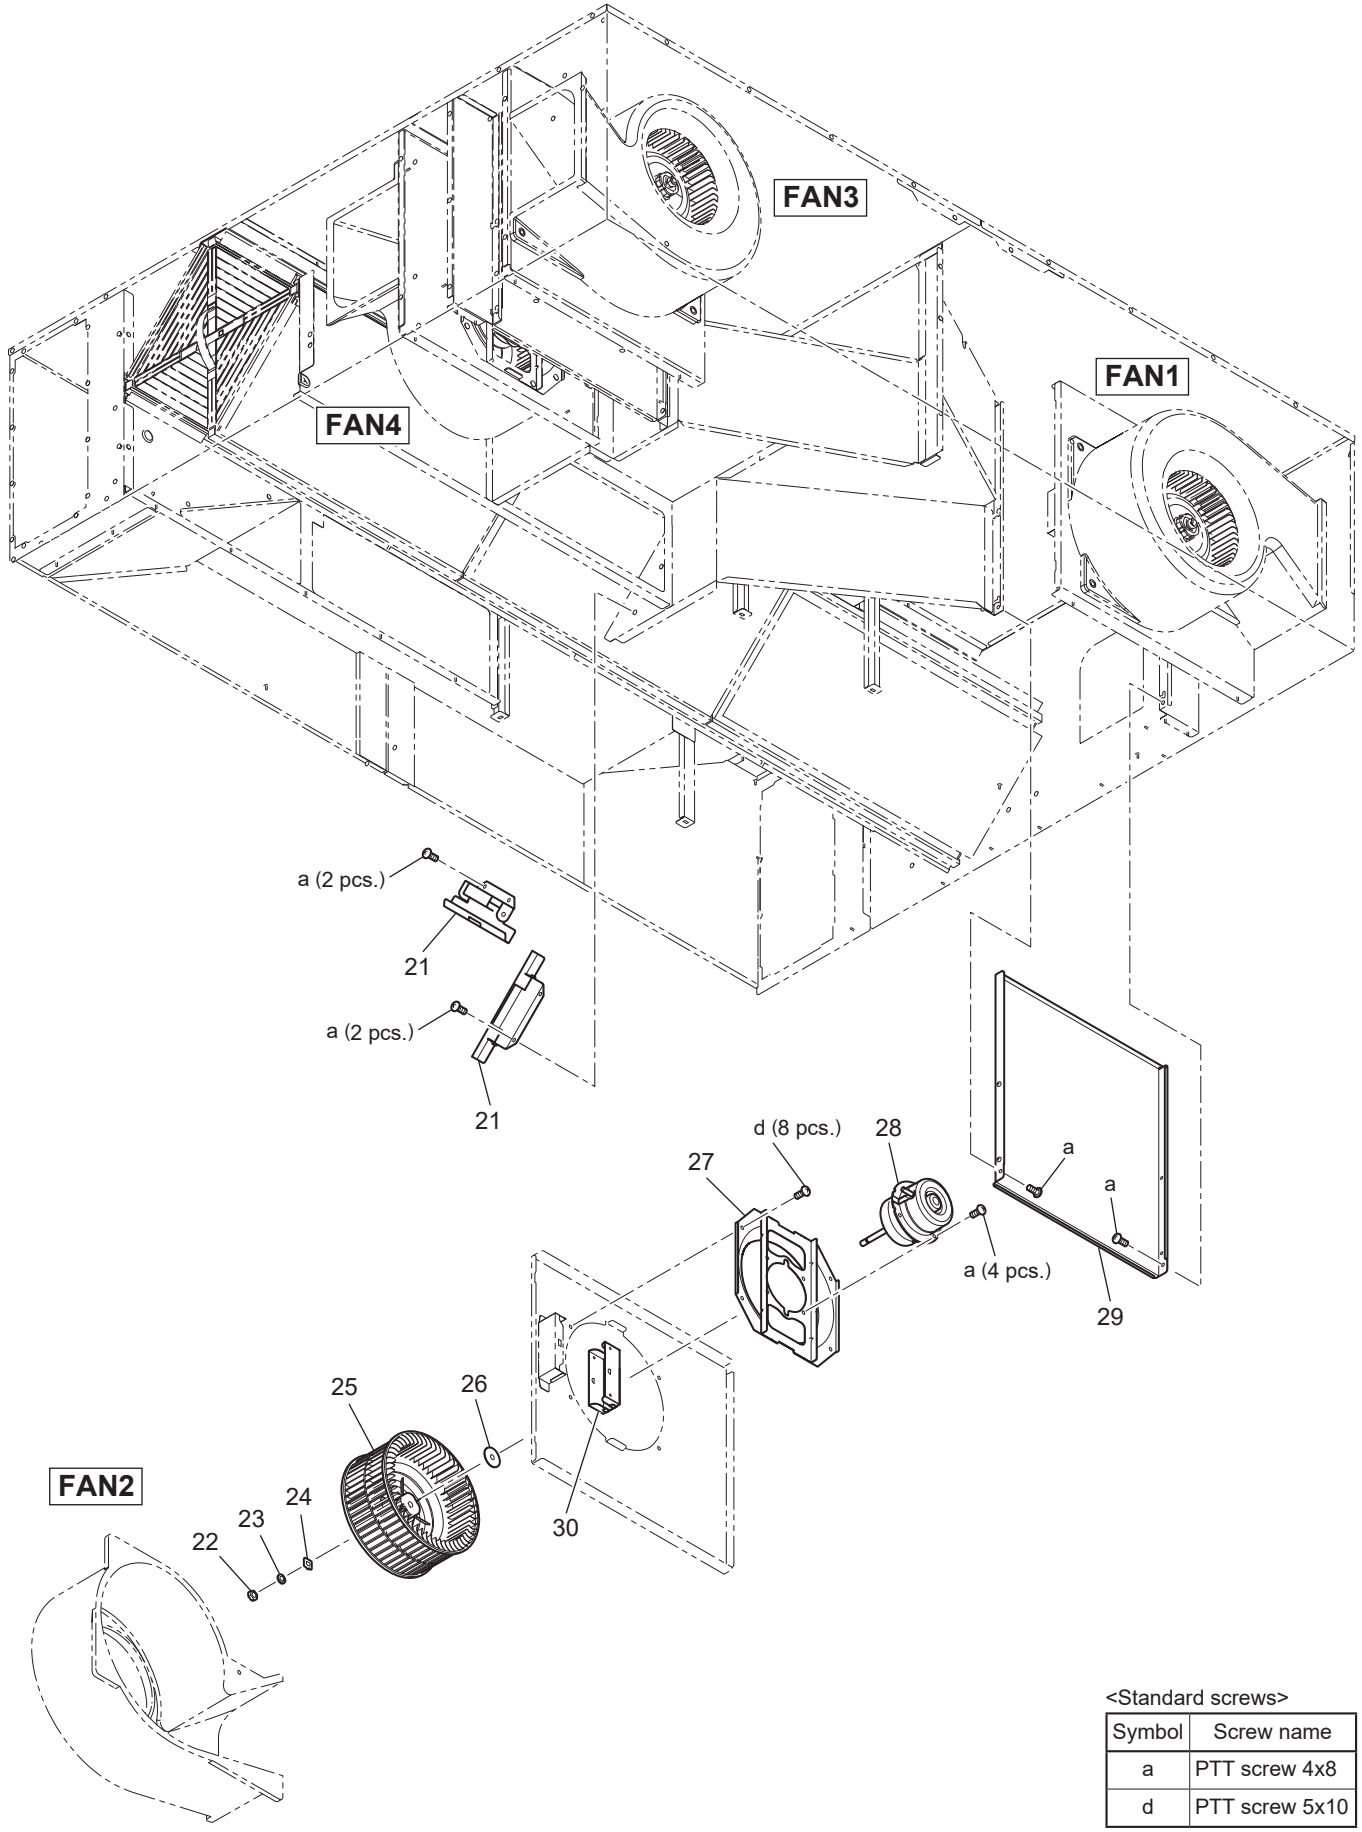

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
d	PTT screw 5x10

Fan parts

TLGHF1200RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Filter curtain	W50 025 715	2		
22	Special nut (M10)	W00 000 195	4		Left-handed
23	Spring washer (10)	W00 000 301	4		
24	Tab washer	W50 013 712	4		
25	Centrifugal fan	W50 025 480	4	⚠	Dia. 245mm
26	Special washer (10)	W50 003 478	4		Outer dia. 40mm
27	Motor fix plate	W50 025 712	4		
28	DC motor	W50 027 454	4	⚠	With the ferrite core
29	Separator	W50 025 711	2		
30	Connector cover (B)	W50 024 708	4		

Control parts

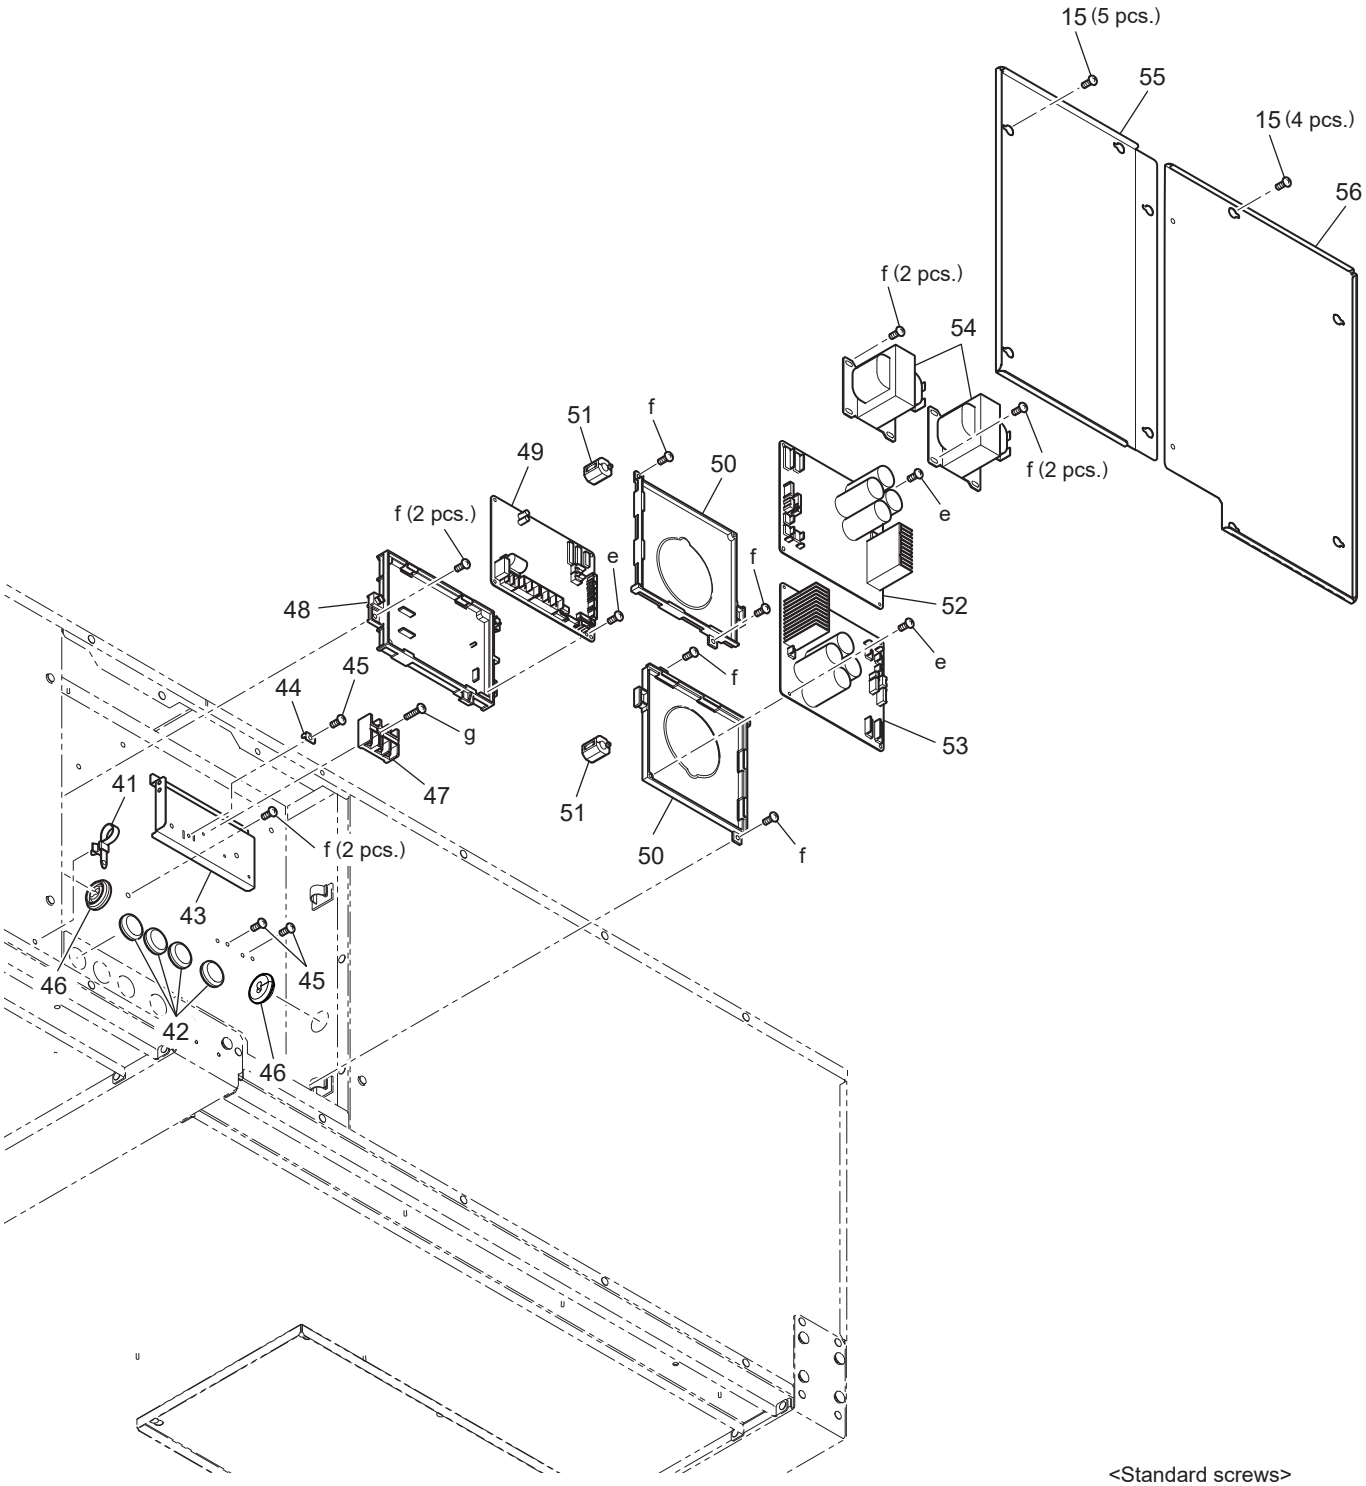

<Standard screws>


Symbol	Screw name
g	PPT screw 4x20
e	PPT screw 3x8
f	PT screw 4x8

Control parts

TLGHF1200RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cord band	W00 000 258	1		
42	Bush	W00 000 289	4		
43	Fix plate	W50 025 704	1		
44	Earth fix plate	W82 001 706	1		
45	PT screw 4x8 BS	W00 000 011	3		
46	Cord bush	W50 024 225	2		
47	Terminal block	W50 027 213	1	⚠	With the lead
48	PCB fix plate	W50 021 706	1		
49	Circuit board	W50 025 171	1	⚠	LG-X08DC-C2
50	PCB fix plate	W50 025 380	2		
51	Ferrite core	W50 024 180	2	⚠	MRFC-13
52	Circuit board	W50 024 171	1	⚠	LG-X08DC-P7
53	Circuit board	W50 024 174	1	⚠	LG-X08DC-P8
54	Reactor	W50 028 180	2	⚠	White・AC10A
55	Control cover A	W50 025 705	1		
56	Control cover B	W50 025 706	1		

Wiring parts

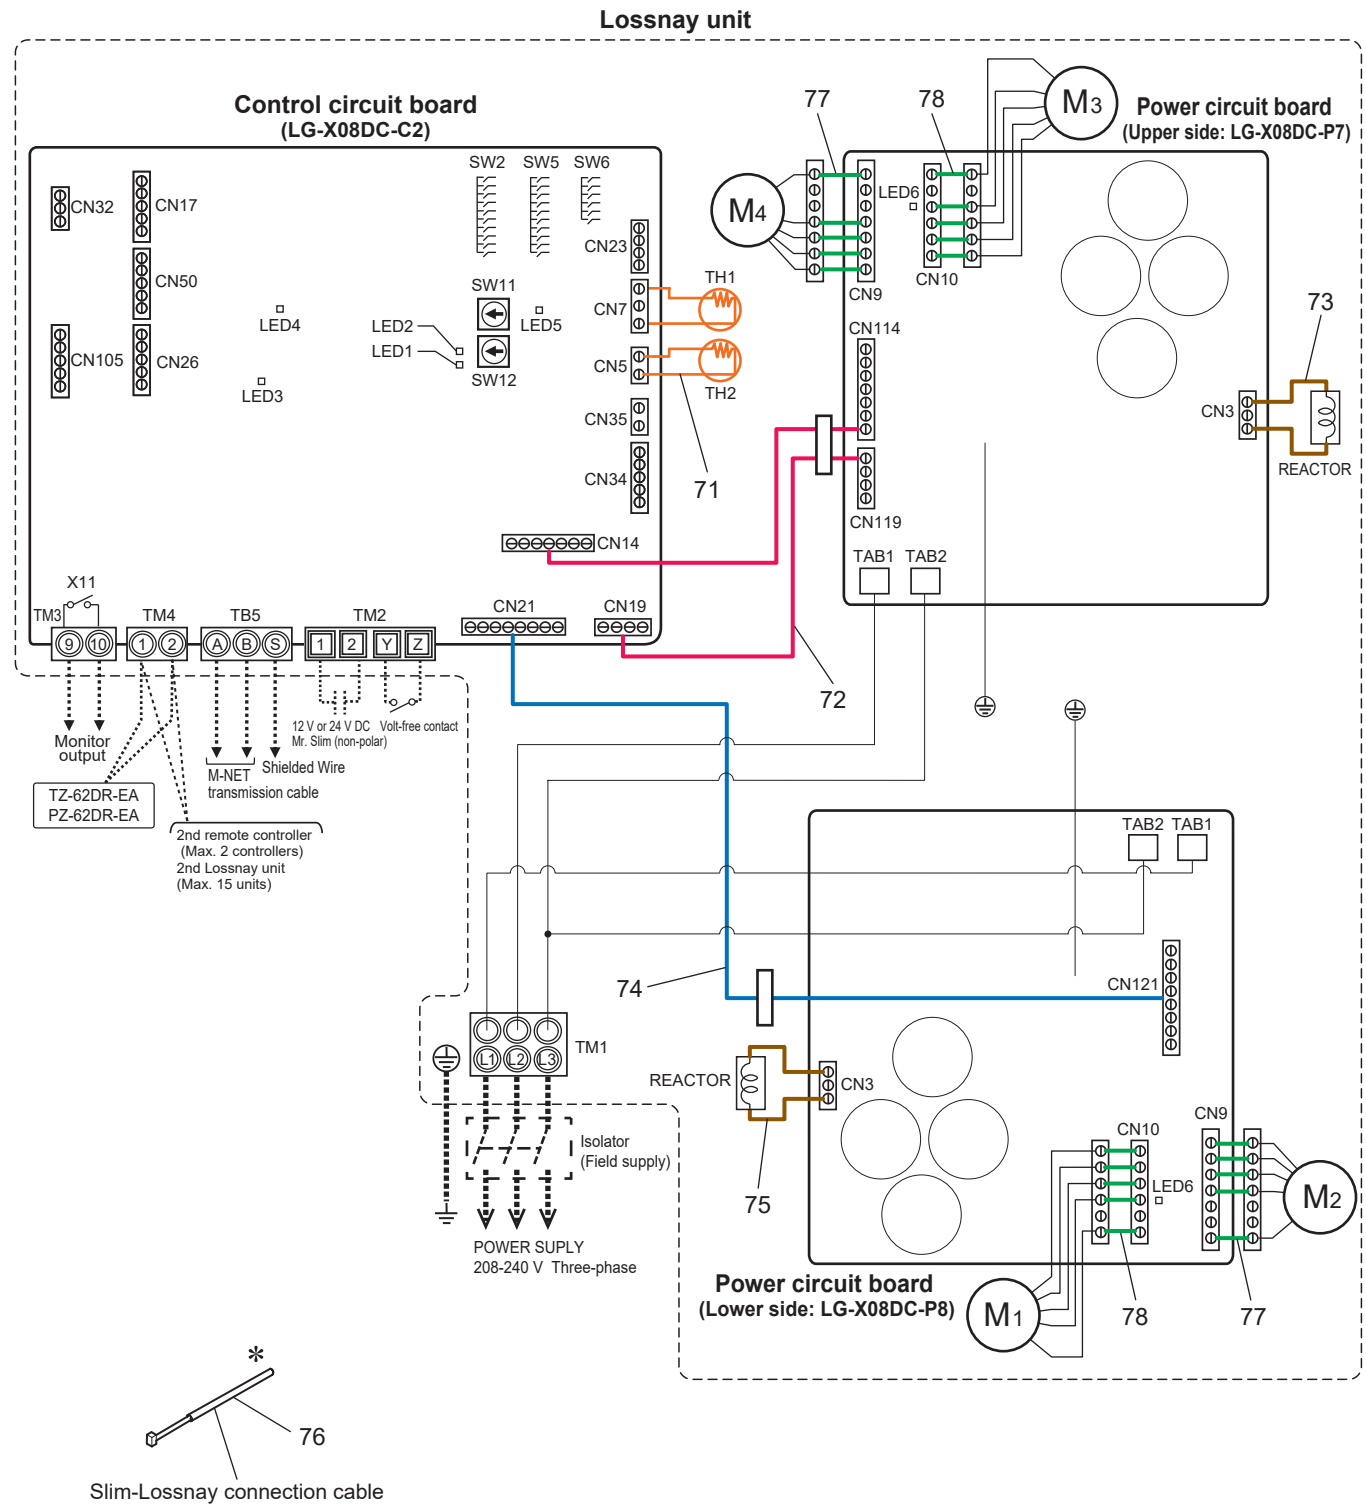

* shows accessory parts.


Wiring parts

TLGHF1200RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
71	Thermistor	W50 025 217	1	⚠	
72	Lead wire	W50 025 213	1	⚠	CN14-114, CN19-119
73	Lead wire	W50 027 215	1	⚠	Reactor 1
74	Lead wire	W50 025 214	1	⚠	CN21-121
75	Lead wire	W50 027 214	1	⚠	Reactor 2
76	Lead wire	W50 004 231	1	⚠	100mm
77	Lead wire	W50 030 226	1	⚠	CN9, motor
78	Lead wire	W50 030 225	1	⚠	CN10, motor

TLGHF1500RVXT02A

Structural parts

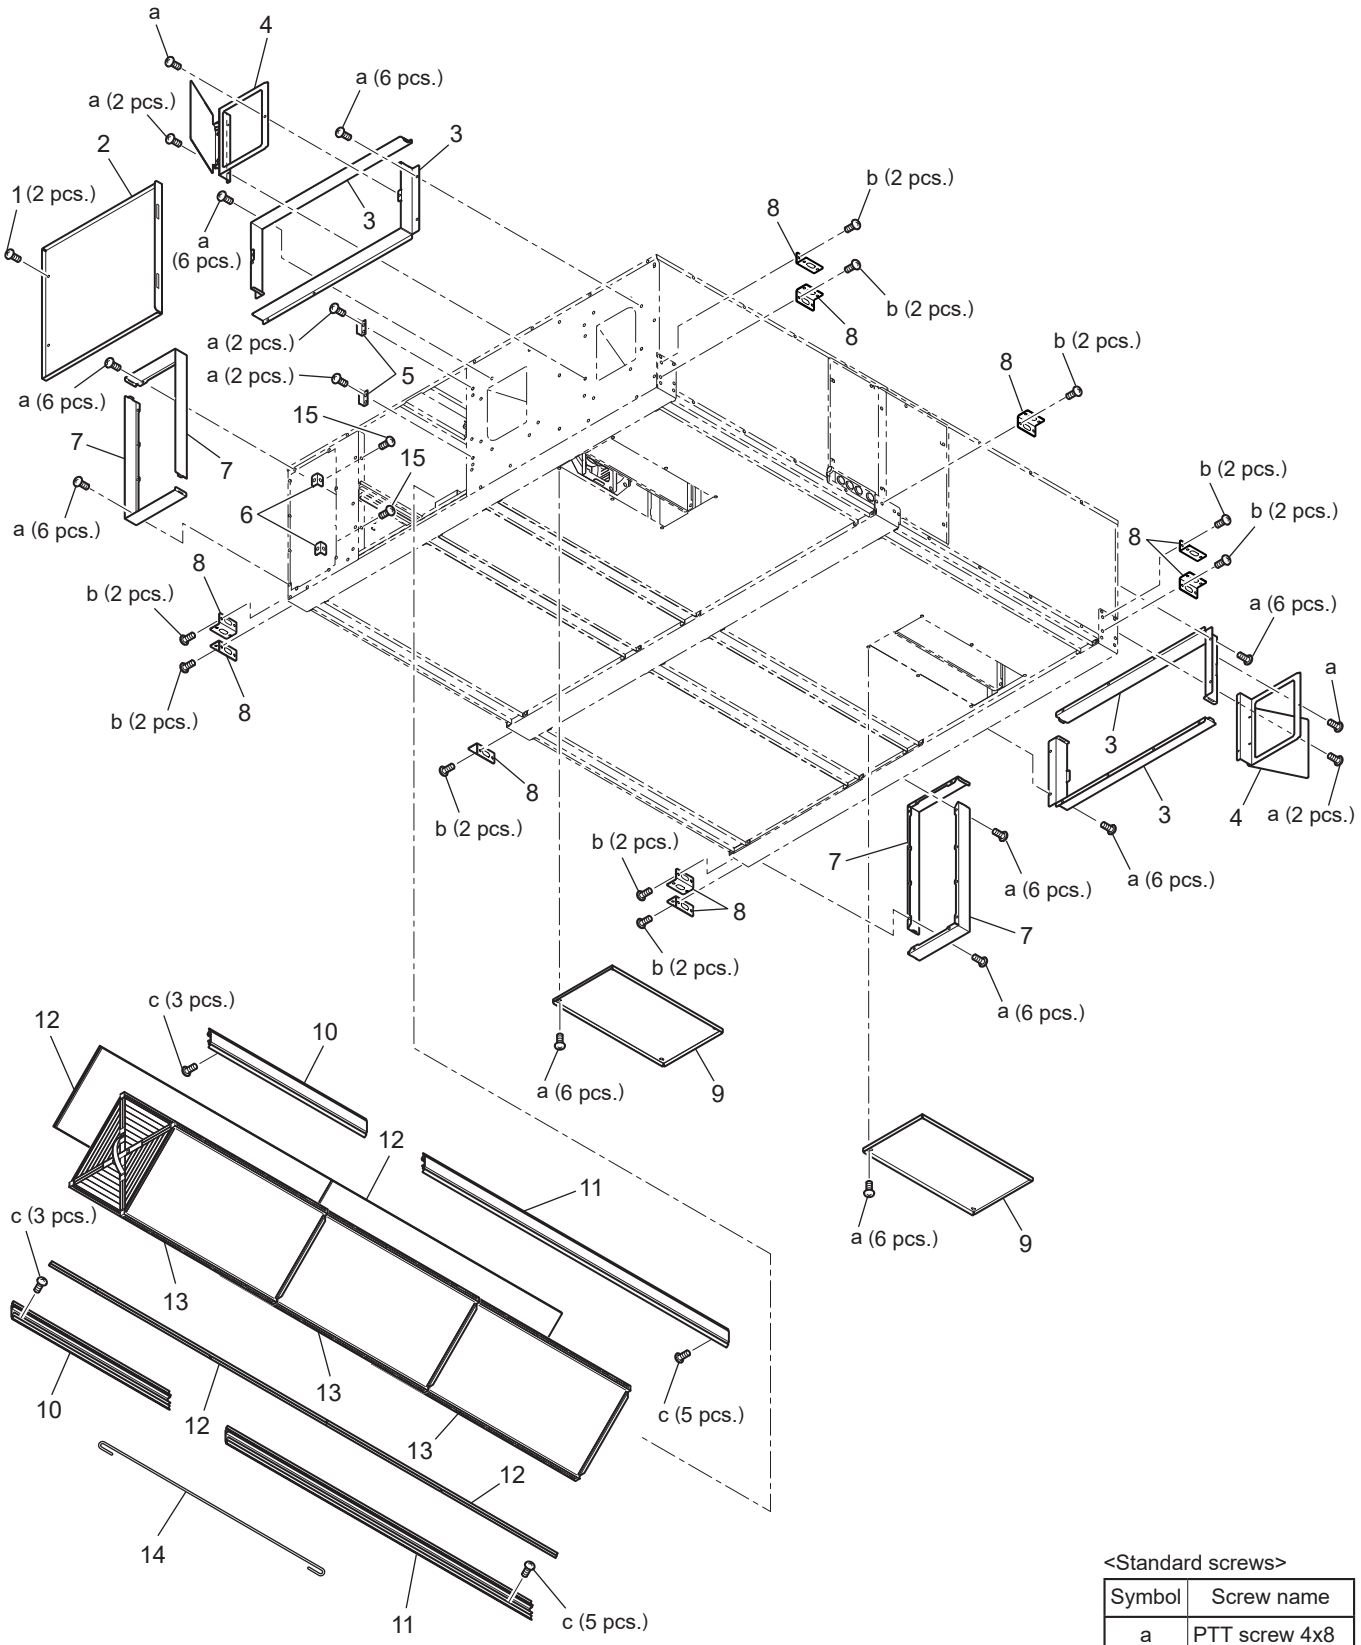

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
b	PT screw 6x12
c	PPT screw 4x8

Structural parts

TLGHF1500RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Special screw 4x12	W00 000 249	2		
2	Maintenance cover	W50 025 833	1		
3	Flange SA/EA	W50 025 709	4		
4	Shutter	W50 025 834	2		
5	Fix piece	W50 013 722	2		
6	Lock piece	W50 025 713	2		
7	Flange OA/RA	W50 025 708	4		
8	Hanger	W50 004 382	10		
9	Maintenance cover	W50 025 710	2		For the fans
10	Lossnay core holder	W50 025 381	2		675mm
11	Lossnay core holder	W50 025 382	2		1315mm
12	Filter	W50 027 717	4	⚠	
13	Lossnay core	W50 027 832	3	⚠	
14	Maintenance rod	W50 025 707	1		
15	Special screw 4x8	W00 000 089	11		

Fan parts

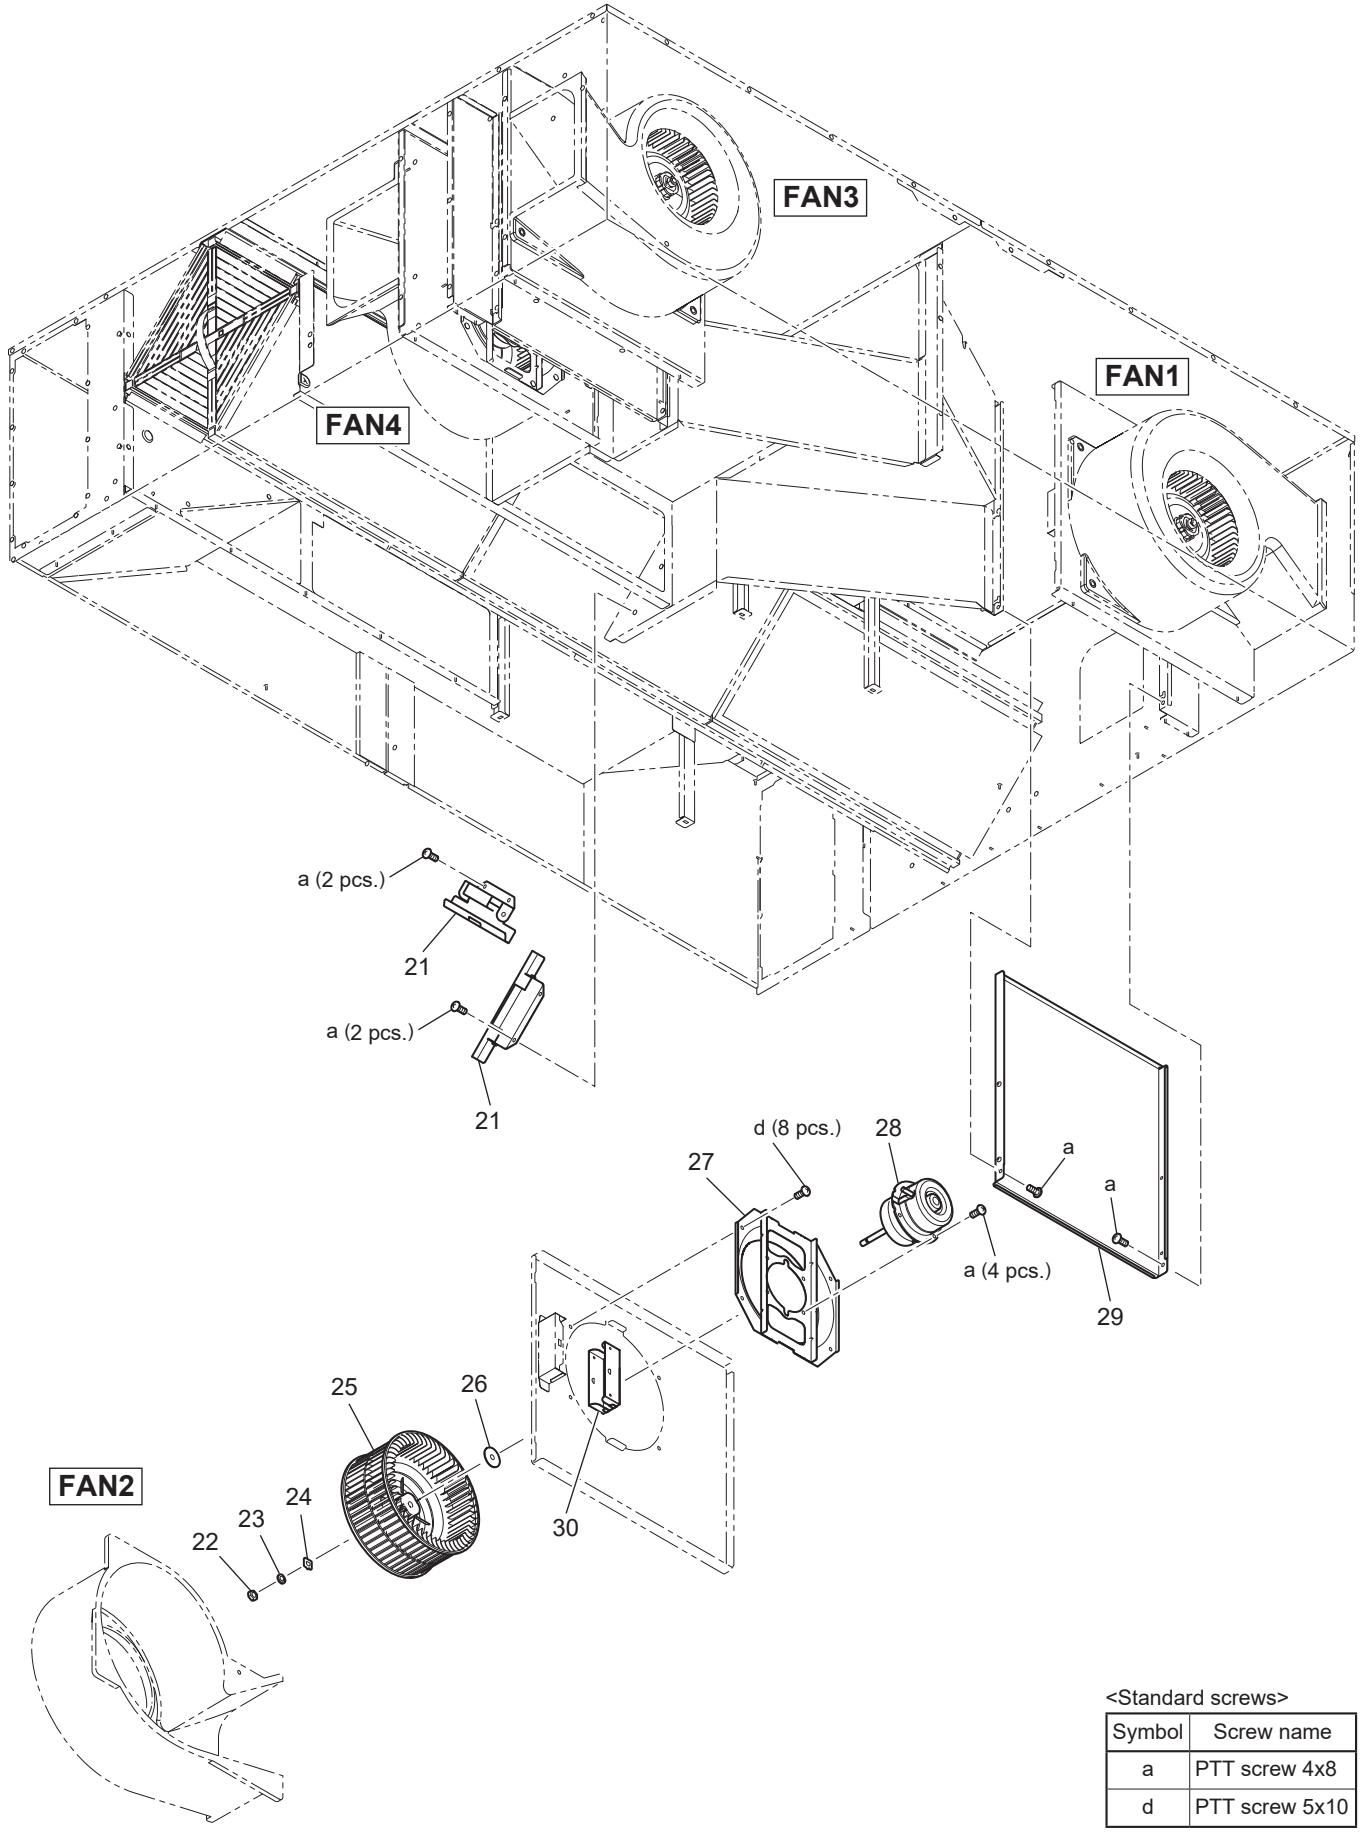

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
d	PTT screw 5x10

Fan parts

TLGHF1500RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Filter curtain	W50 025 715	2		
22	Special nut (M10)	W00 000 195	4		Left-handed
23	Spring washer (10)	W00 000 301	4		
24	Tab washer	W50 013 712	4		
25	Centrifugal fan	W50 025 480	4	⚠	Dia. 245mm
26	Special washer (10)	W50 003 478	4		Outer dia. 40mm
27	Motor fix plate	W50 025 712	4		
28	DC motor	W50 027 455	4	⚠	With the ferrite core
29	Separator	W50 025 711	2		
30	Connector cover (B)	W50 024 708	4		

Control parts

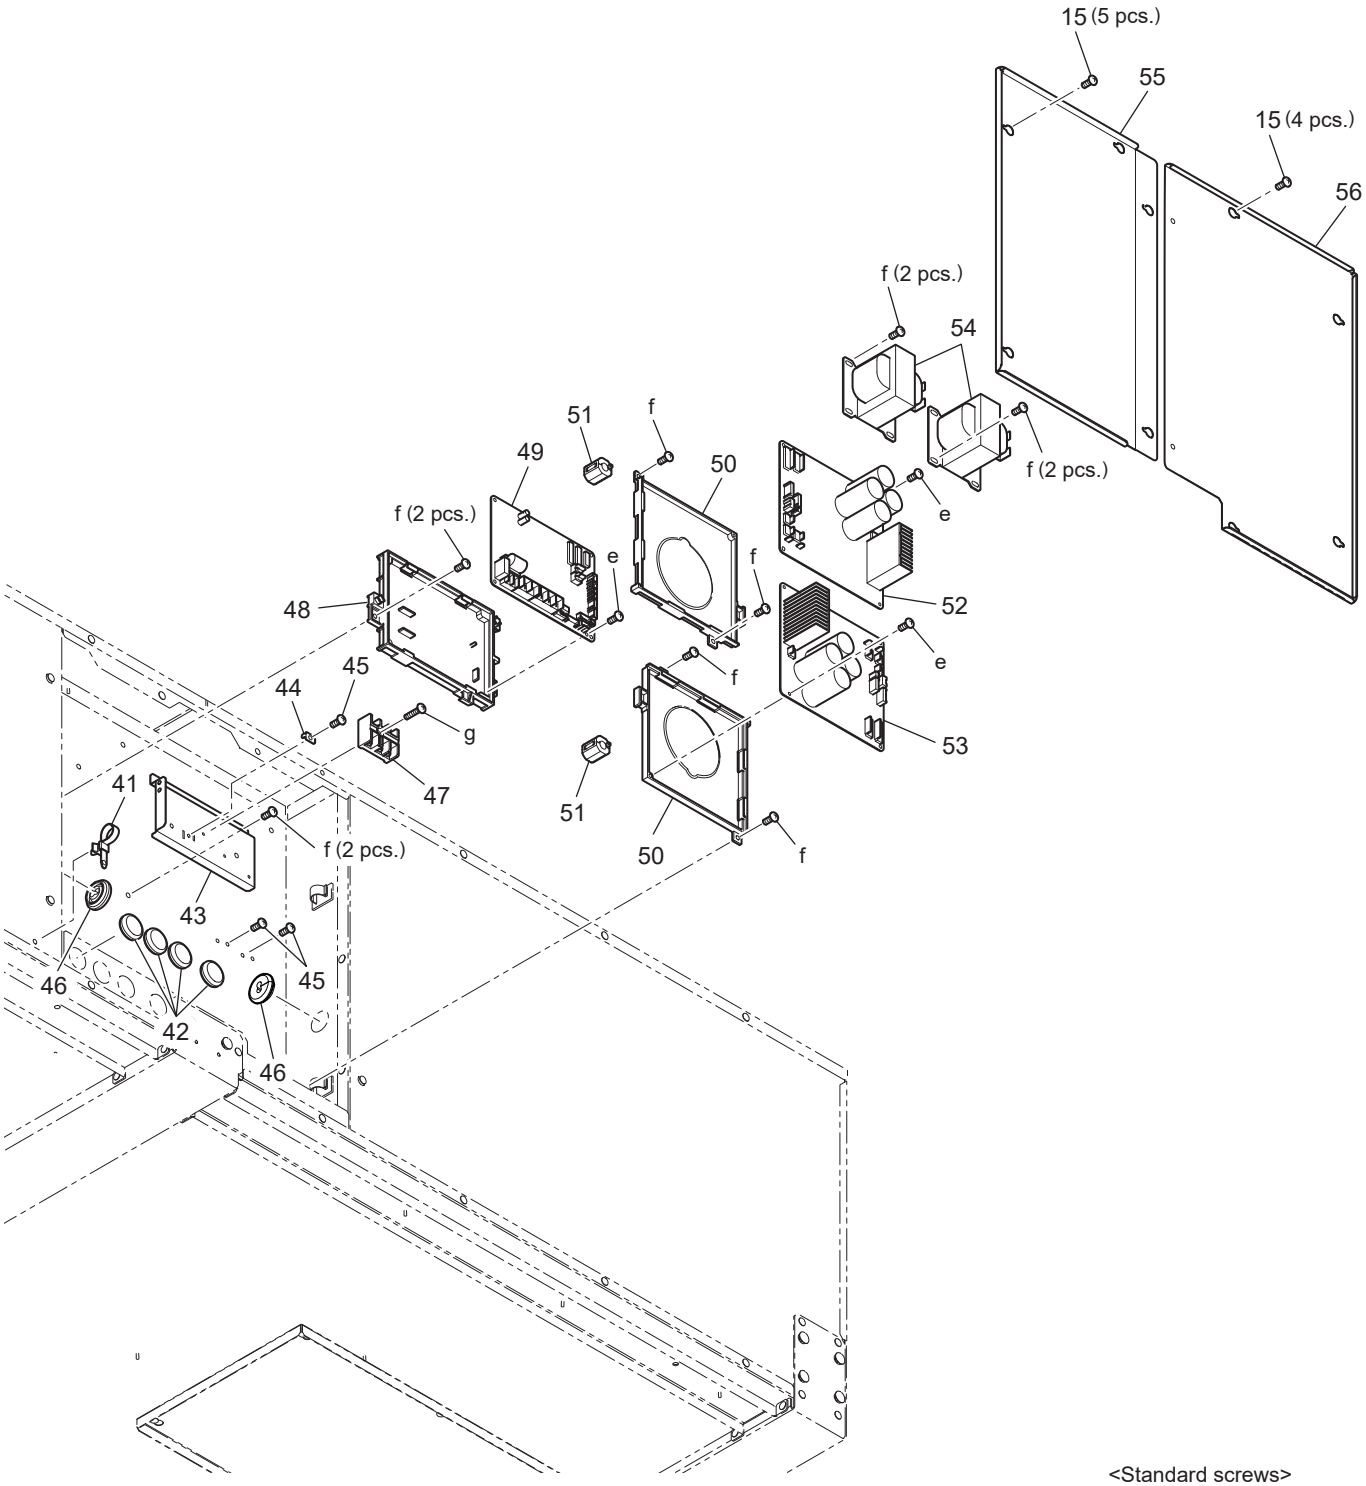

<Standard screws>


Symbol	Screw name
g	PPT screw 4x20
e	PPT screw 3x8
f	PT screw 4x8

Control parts

TLGHF1500RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cord band	W00 000 258	1		
42	Bush	W00 000 289	4		
43	Fix plate	W50 025 704	1		
44	Earth fix plate	W82 001 706	1		
45	PT screw 4x8 BS	W00 000 011	3		
46	Cord bush	W50 024 225	2		
47	Terminal block	W50 027 216	1	⚠	With the lead
48	PCB fix plate	W50 021 706	1		
49	Circuit board	W50 025 171	1	⚠	LG-X08DC-C2
50	PCB fix plate	W50 025 380	2		
51	Ferrite core	W50 024 180	2	⚠	MRFC-13
52	Circuit board	W50 024 171	1	⚠	LG-X08DC-P7
53	Circuit board	W50 024 174	1	⚠	LG-X08DC-P8
54	Reactor	W50 028 180	2	⚠	White・AC10A
55	Control cover A	W50 025 705	1		
56	Control cover B	W50 025 706	1		

Wiring parts

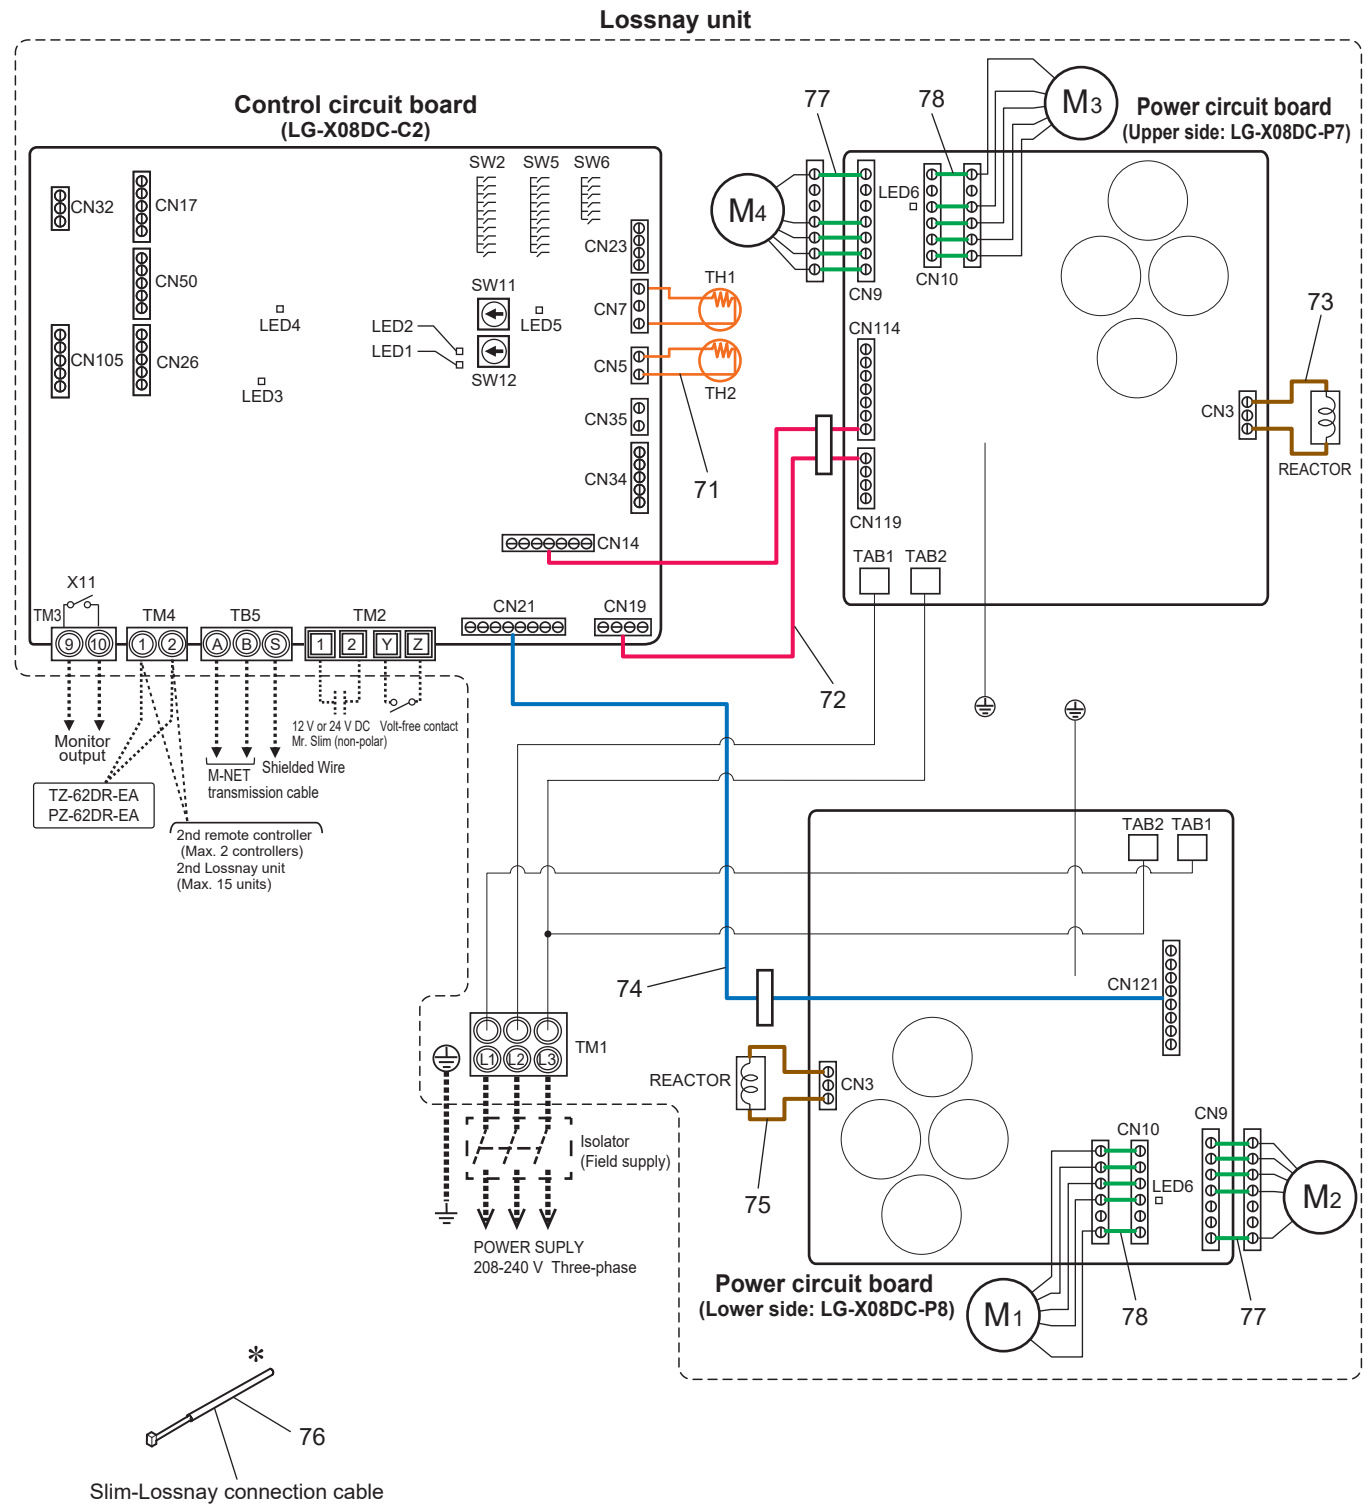


* shows accessory parts.

Wiring parts

TLGHF1500RVXT02A

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
71	Thermistor	W50 025 217	1	⚠	
72	Lead wire	W50 025 213	1	⚠	CN14-114, CN19-119
73	Lead wire	W50 027 215	1	⚠	Reactor 1
74	Lead wire	W50 025 214	1	⚠	CN21-121
75	Lead wire	W50 027 214	1	⚠	Reactor 2
76	Lead wire	W50 004 231	1	⚠	100mm
77	Lead wire	W50 030 226	1	⚠	CN9, motor
78	Lead wire	W50 030 225	1	⚠	CN10, motor

Structural parts

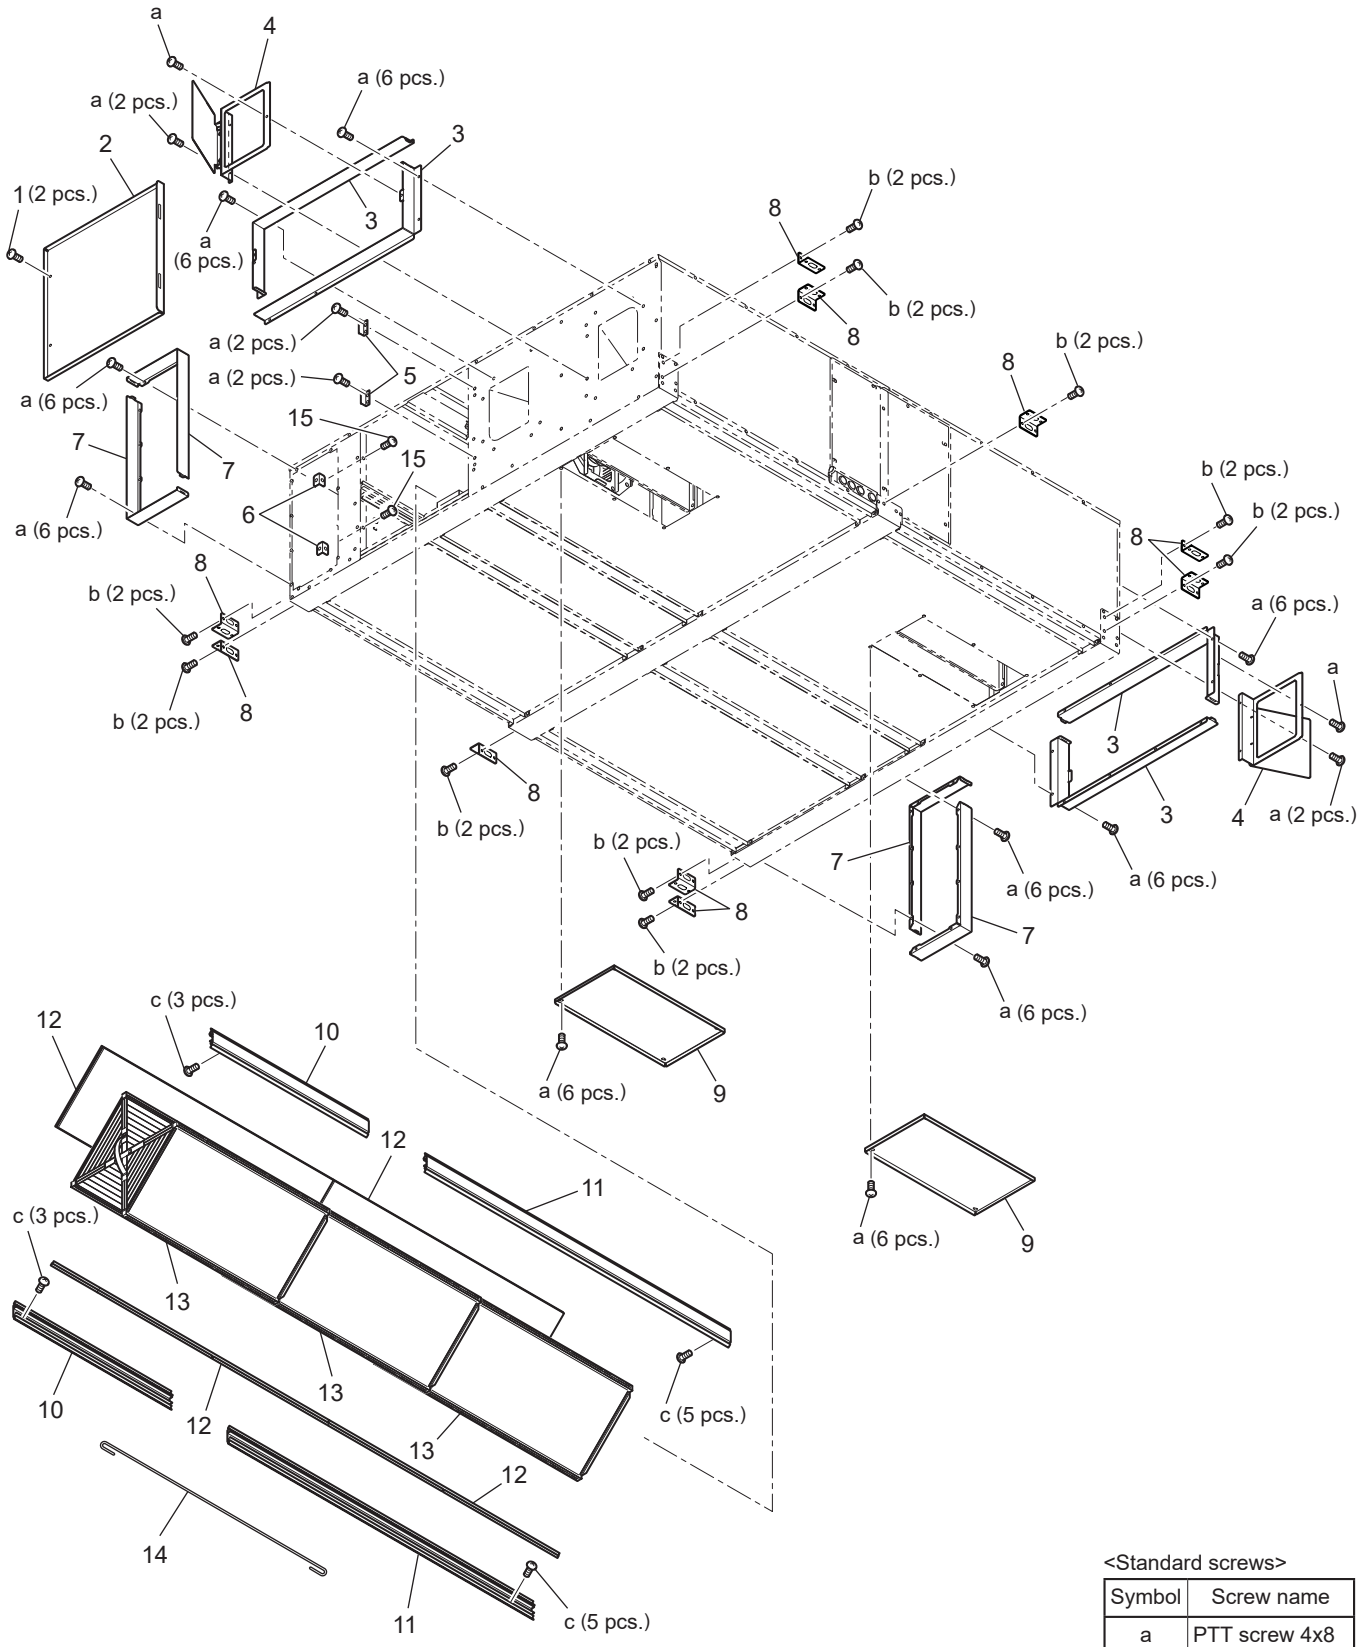

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
b	PT screw 6x12
c	PPT screw 4x8

Structural parts

LGH-F940RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Special screw 4x12	W00 000 249	2		
2	Maintenance cover	W50 025 833	1		
3	Flange SA/EA	W50 025 709	4		
4	Shutter	W50 025 834	2		
5	Fix piece	W50 013 722	2		
6	Lock piece	W50 025 713	2		
7	Flange OA/RA	W50 025 708	4		
8	Hanger	W50 004 382	10		
9	Maintenance cover	W50 025 710	2		For the fans
10	Lossnay core holder	W50 025 381	2		675mm
11	Lossnay core holder	W50 025 382	2		1315mm
12	Filter	W50 027 717	4	⚠	
13	Lossnay core	W50 027 832	3	⚠	
14	Maintenance rod	W50 025 707	1		
15	Special screw 4x8	W00 000 089	11		

Fan parts

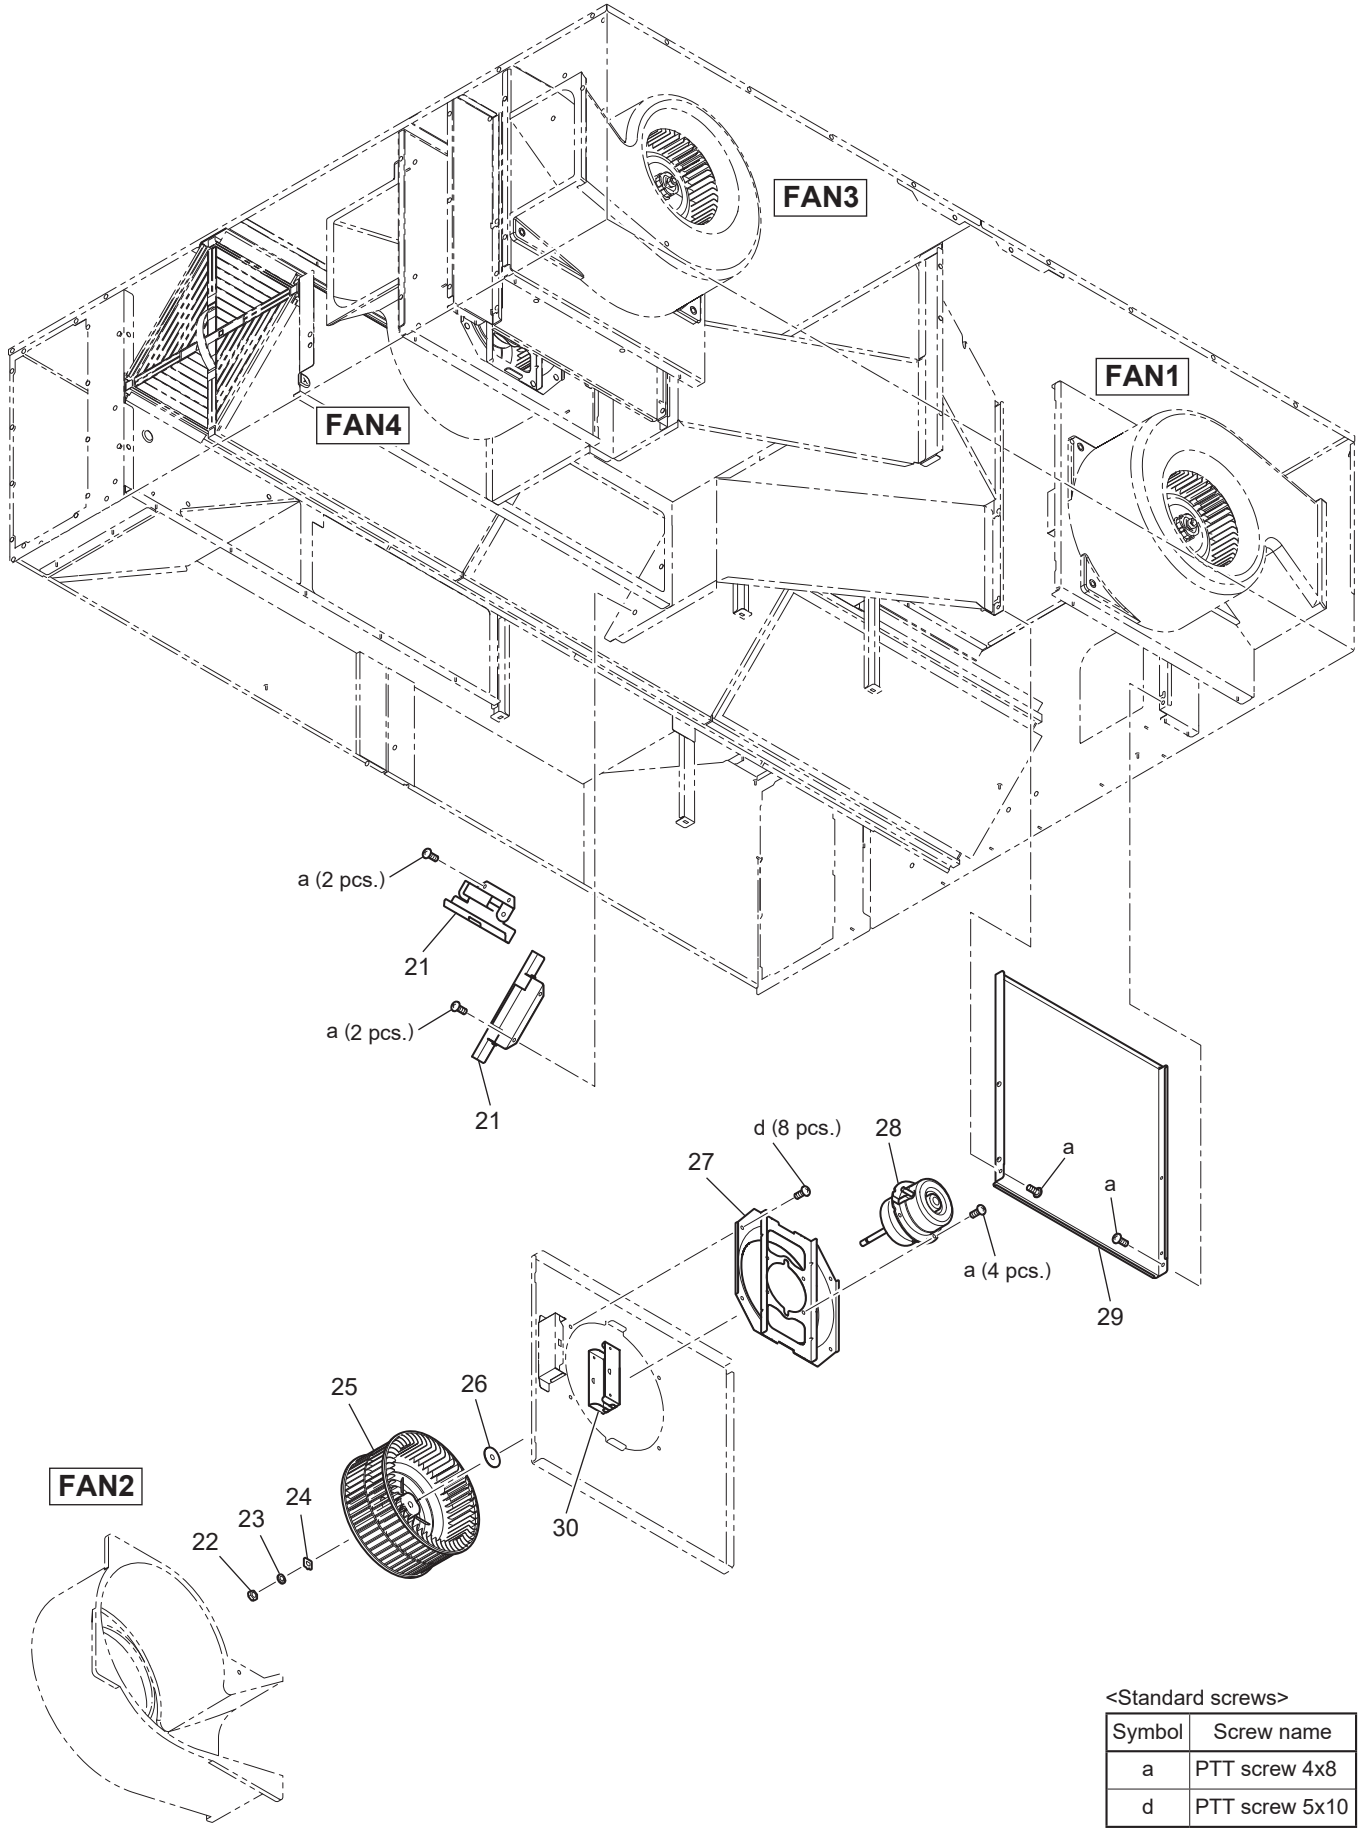

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
d	PTT screw 5x10

Fan parts

LGH-F940RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Filter curtain	W50 025 715	2		
22	Special nut (M10)	W00 000 195	4		Left-handed
23	Spring washer (10)	W00 000 301	4		
24	Tab washer	W50 013 712	4		
25	Centrifugal fan	W50 025 480	4	⚠	Dia. 245mm
26	Special washer (10)	W50 003 478	4		Outer dia. 40mm
27	Motor fix plate	W50 025 712	4		
28	DC motor	W50 027 453	1	⚠	With the ferrite core
29	Separator	W50 025 711	2		
30	Connector cover (B)	W50 024 708	4		

Control parts

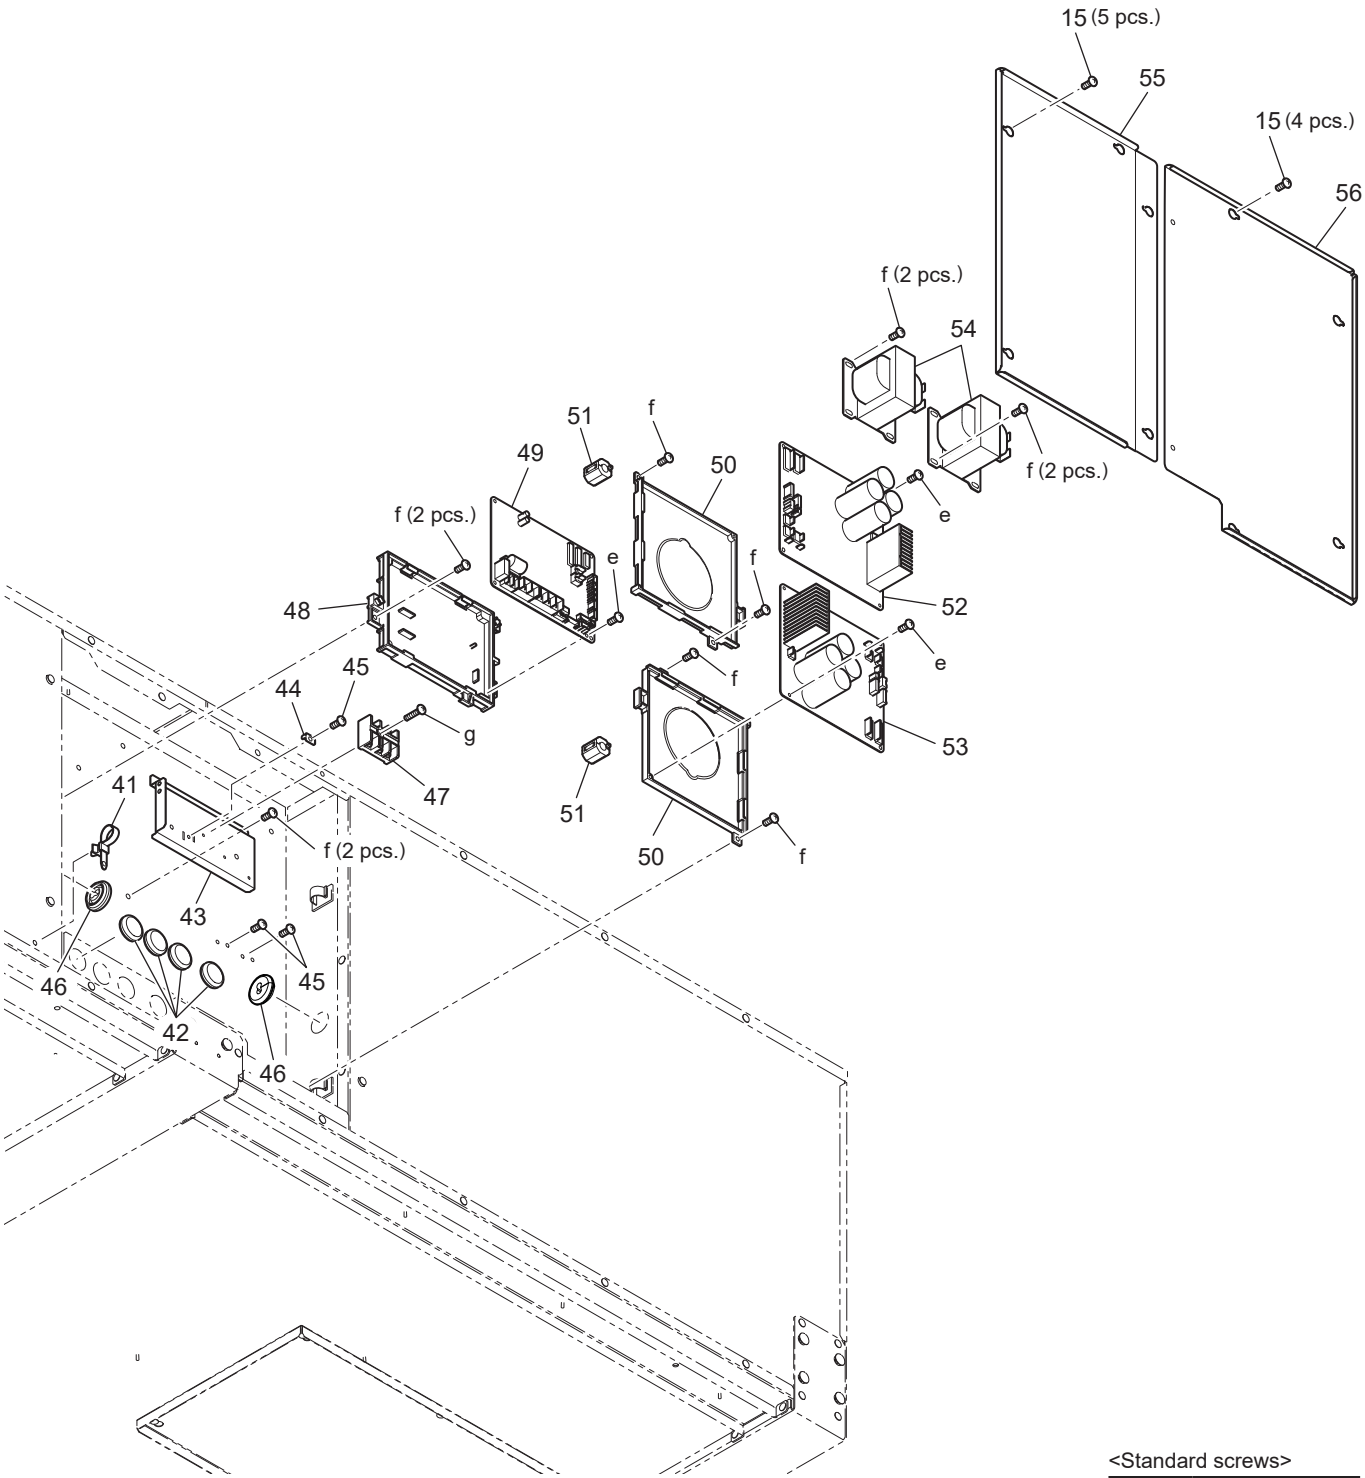

<Standard screws>


Symbol	Screw name
g	PPT screw 4x20
e	PPT screw 3x8
f	PT screw 4x8

Control parts

LGH-F940RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cord band	W00 000 258	1		
42	Bush	W00 000 289	4		
43	Fix plate	W50 025 704	1		
44	Earth fix plate	W82 001 706	1		
45	PT screw 4x8 BS	W00 000 011	3		
46	Cord bush	W50 024 225	2		
47	Terminal block	W50 027 213	1	⚠	With the lead
48	PCB fix plate	W50 021 706	1		
49	Circuit board	W50 025 171	1	⚠	LG-X08DC-C2
50	PCB fix plate	W50 025 380	2		
51	Ferrite core	W50 024 180	2	⚠	MRFC-13
52	Circuit board	W50 024 171	1	⚠	LG-X08DC-P7
53	Circuit board	W50 024 174	1	⚠	LG-X08DC-P8
54	Reactor	W50 028 180	2	⚠	White・AC10A
55	Control cover A	W50 025 705	1		
56	Control cover B	W50 025 706	1		

Wiring parts

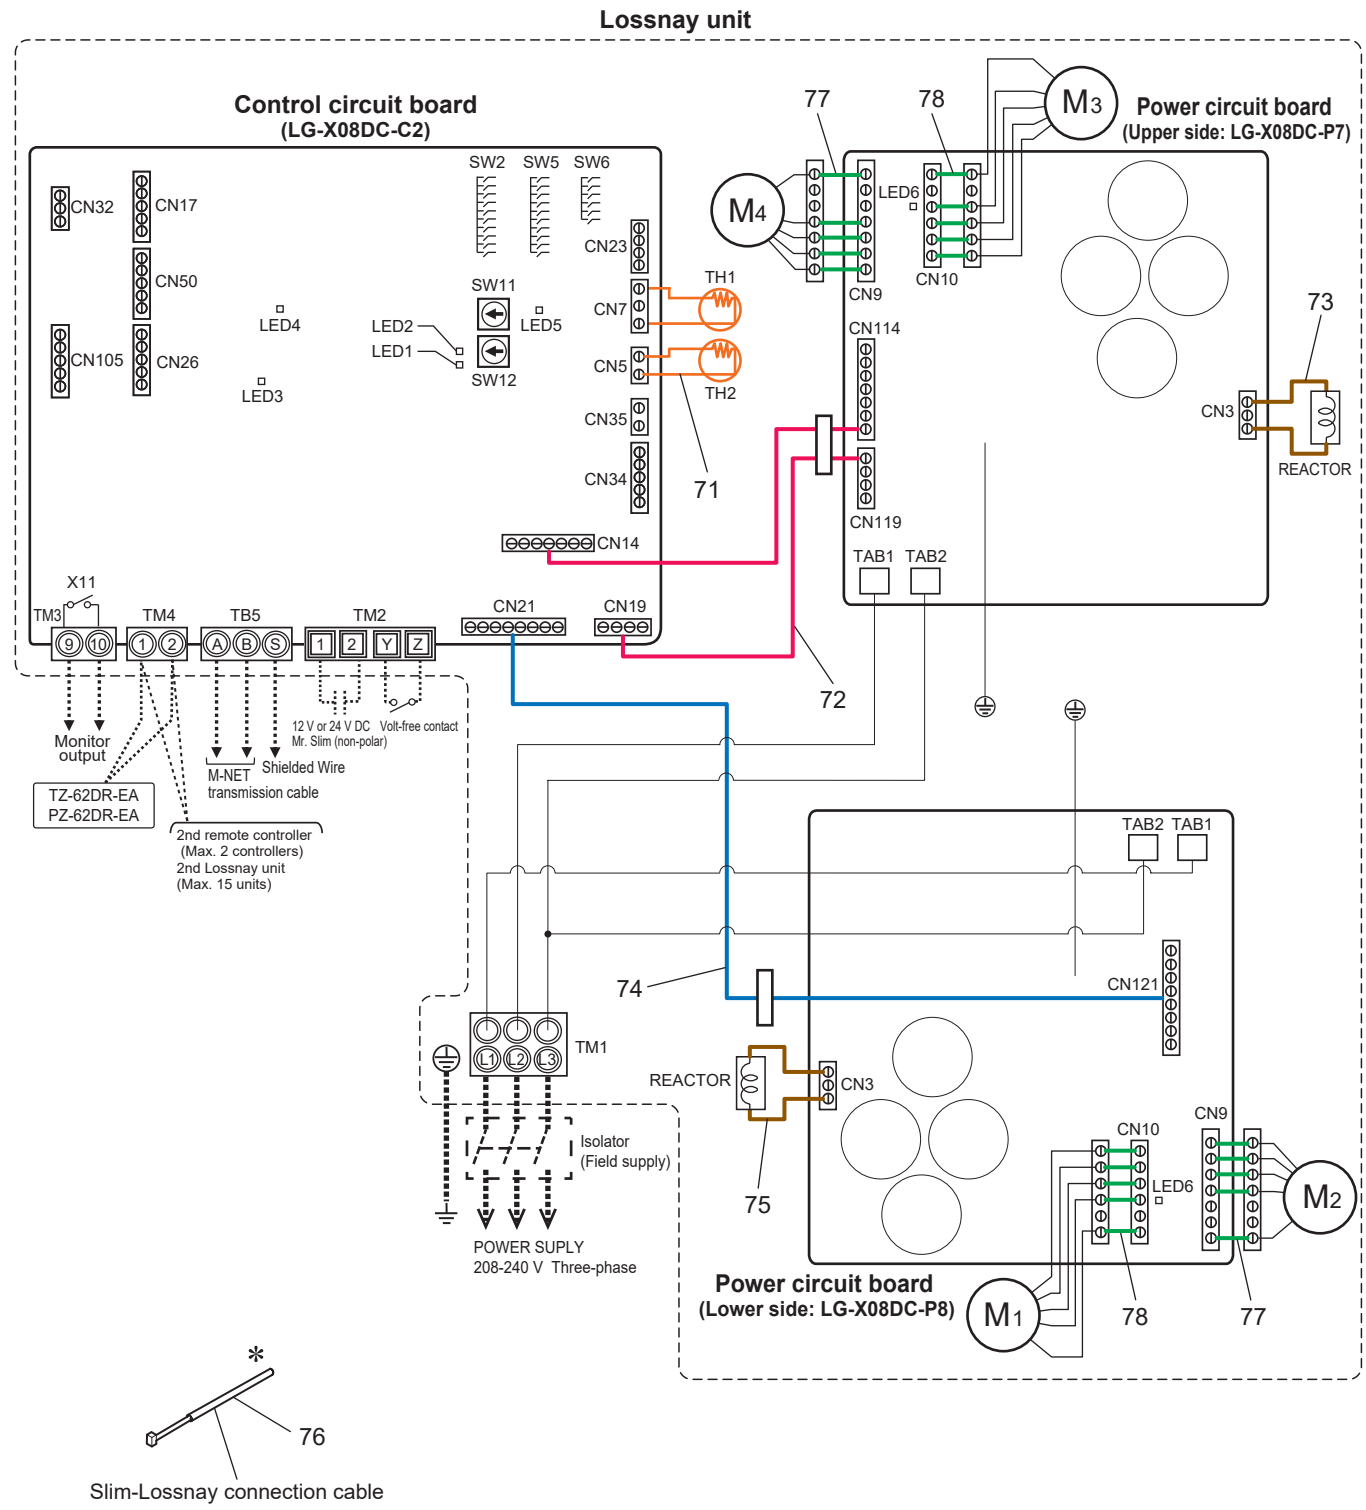


∗ shows accessory parts.

Wiring parts

LGH-F940RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
71	Thermistor	W50 025 217	1	⚠	
72	Lead wire	W50 025 213	1	⚠	CN14-114, CN19-119
73	Lead wire	W50 027 215	1	⚠	Reactor 1
74	Lead wire	W50 025 214	1	⚠	CN21-121
75	Lead wire	W50 027 214	1	⚠	Reactor 2
76	Lead wire	W50 004 231	1	⚠	100mm
77	Lead wire	W50 030 226	1	⚠	CN9, motor
78	Lead wire	W50 030 225	1	⚠	CN10, motor

Structural parts

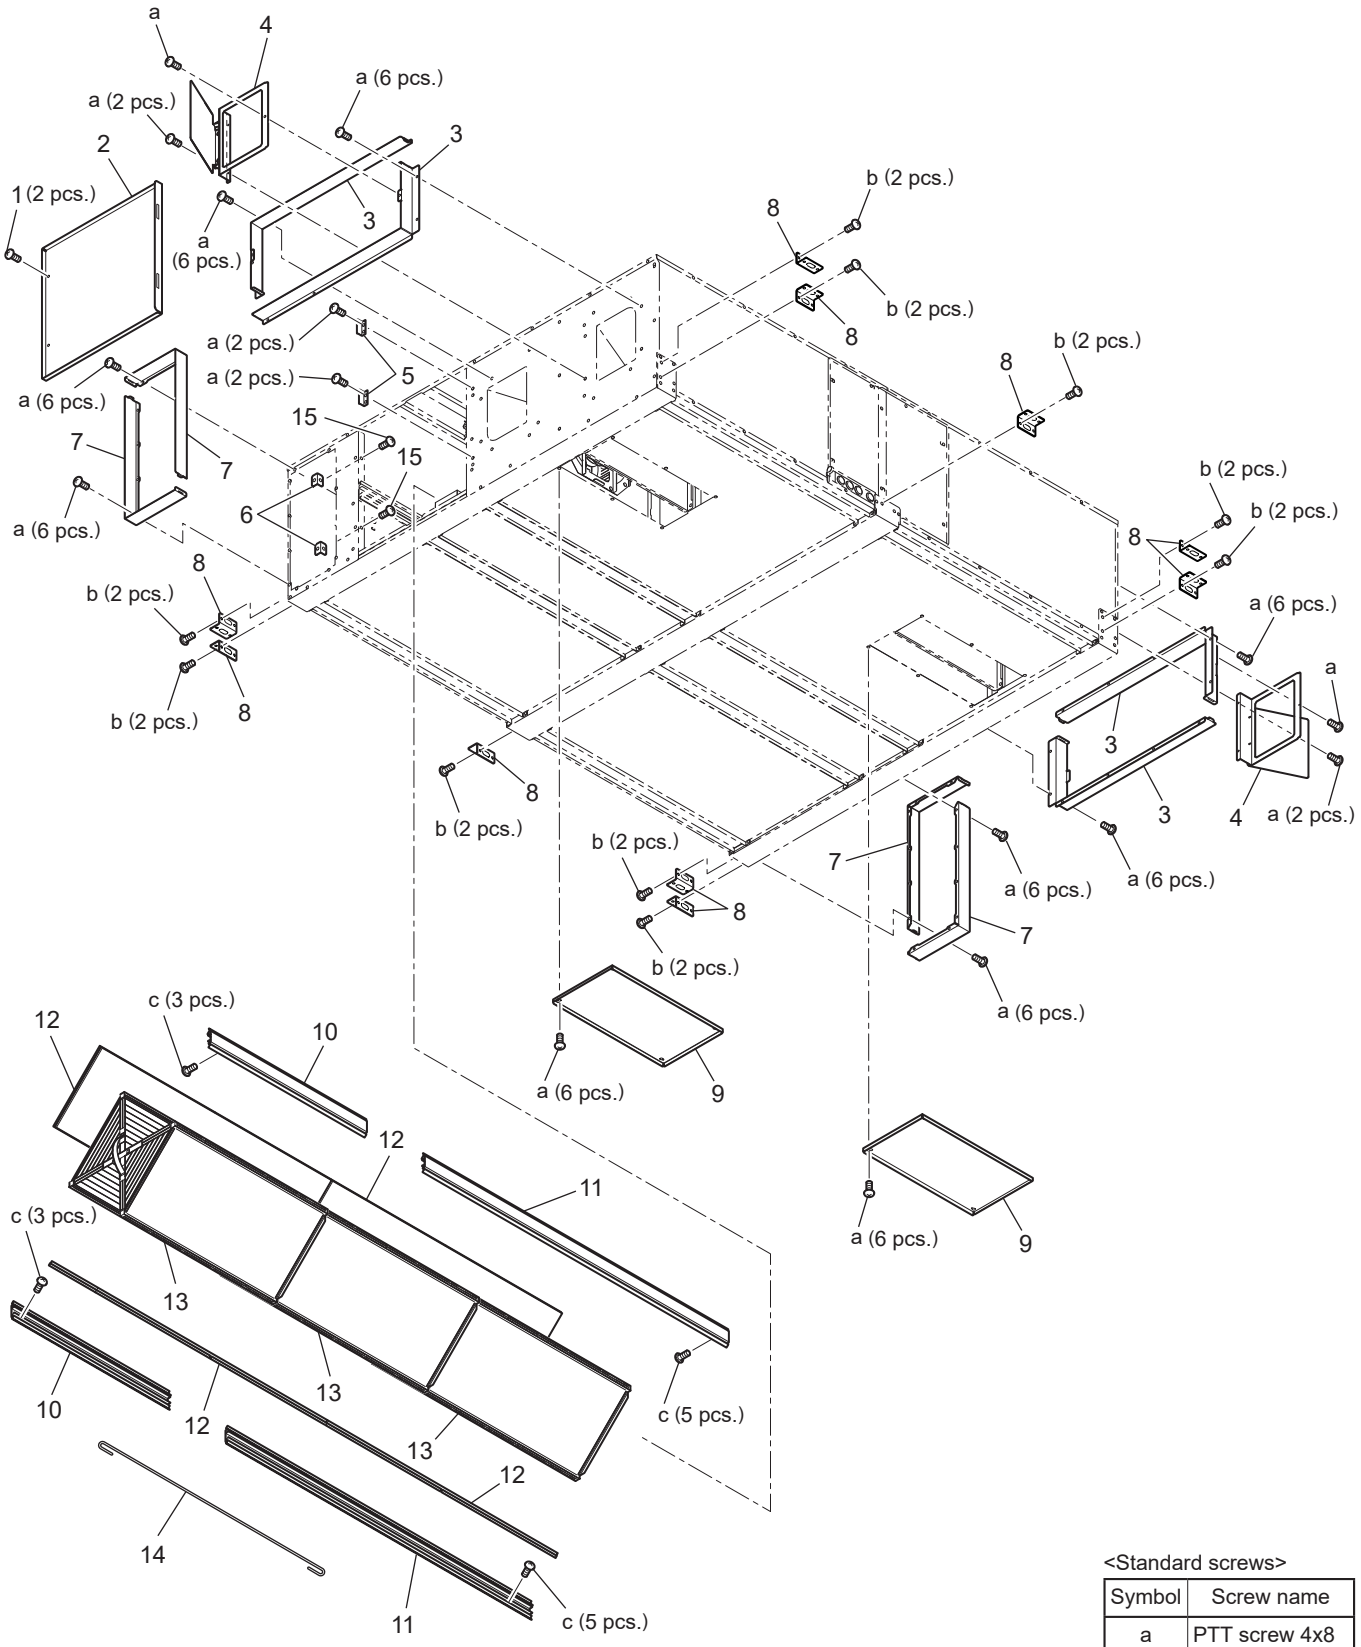

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
b	PT screw 6x12
c	PPT screw 4x8

Structural parts

LGH-F1200RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Special screw 4x12	W00 000 249	2		
2	Maintenance cover	W50 025 833	1		
3	Flange SA/EA	W50 025 709	4		
4	Shutter	W50 025 834	2		
5	Fix piece	W50 013 722	2		
6	Lock piece	W50 025 713	2		
7	Flange OA/RA	W50 025 708	4		
8	Hanger	W50 004 382	10		
9	Maintenance cover	W50 025 710	2		For the fans
10	Lossnay core holder	W50 025 381	2		675mm
11	Lossnay core holder	W50 025 382	2		1315mm
12	Filter	W50 027 717	4	⚠	
13	Lossnay core	W50 027 832	3	⚠	
14	Maintenance rod	W50 025 707	1		
15	Special screw 4x8	W00 000 089	11		

Fan parts

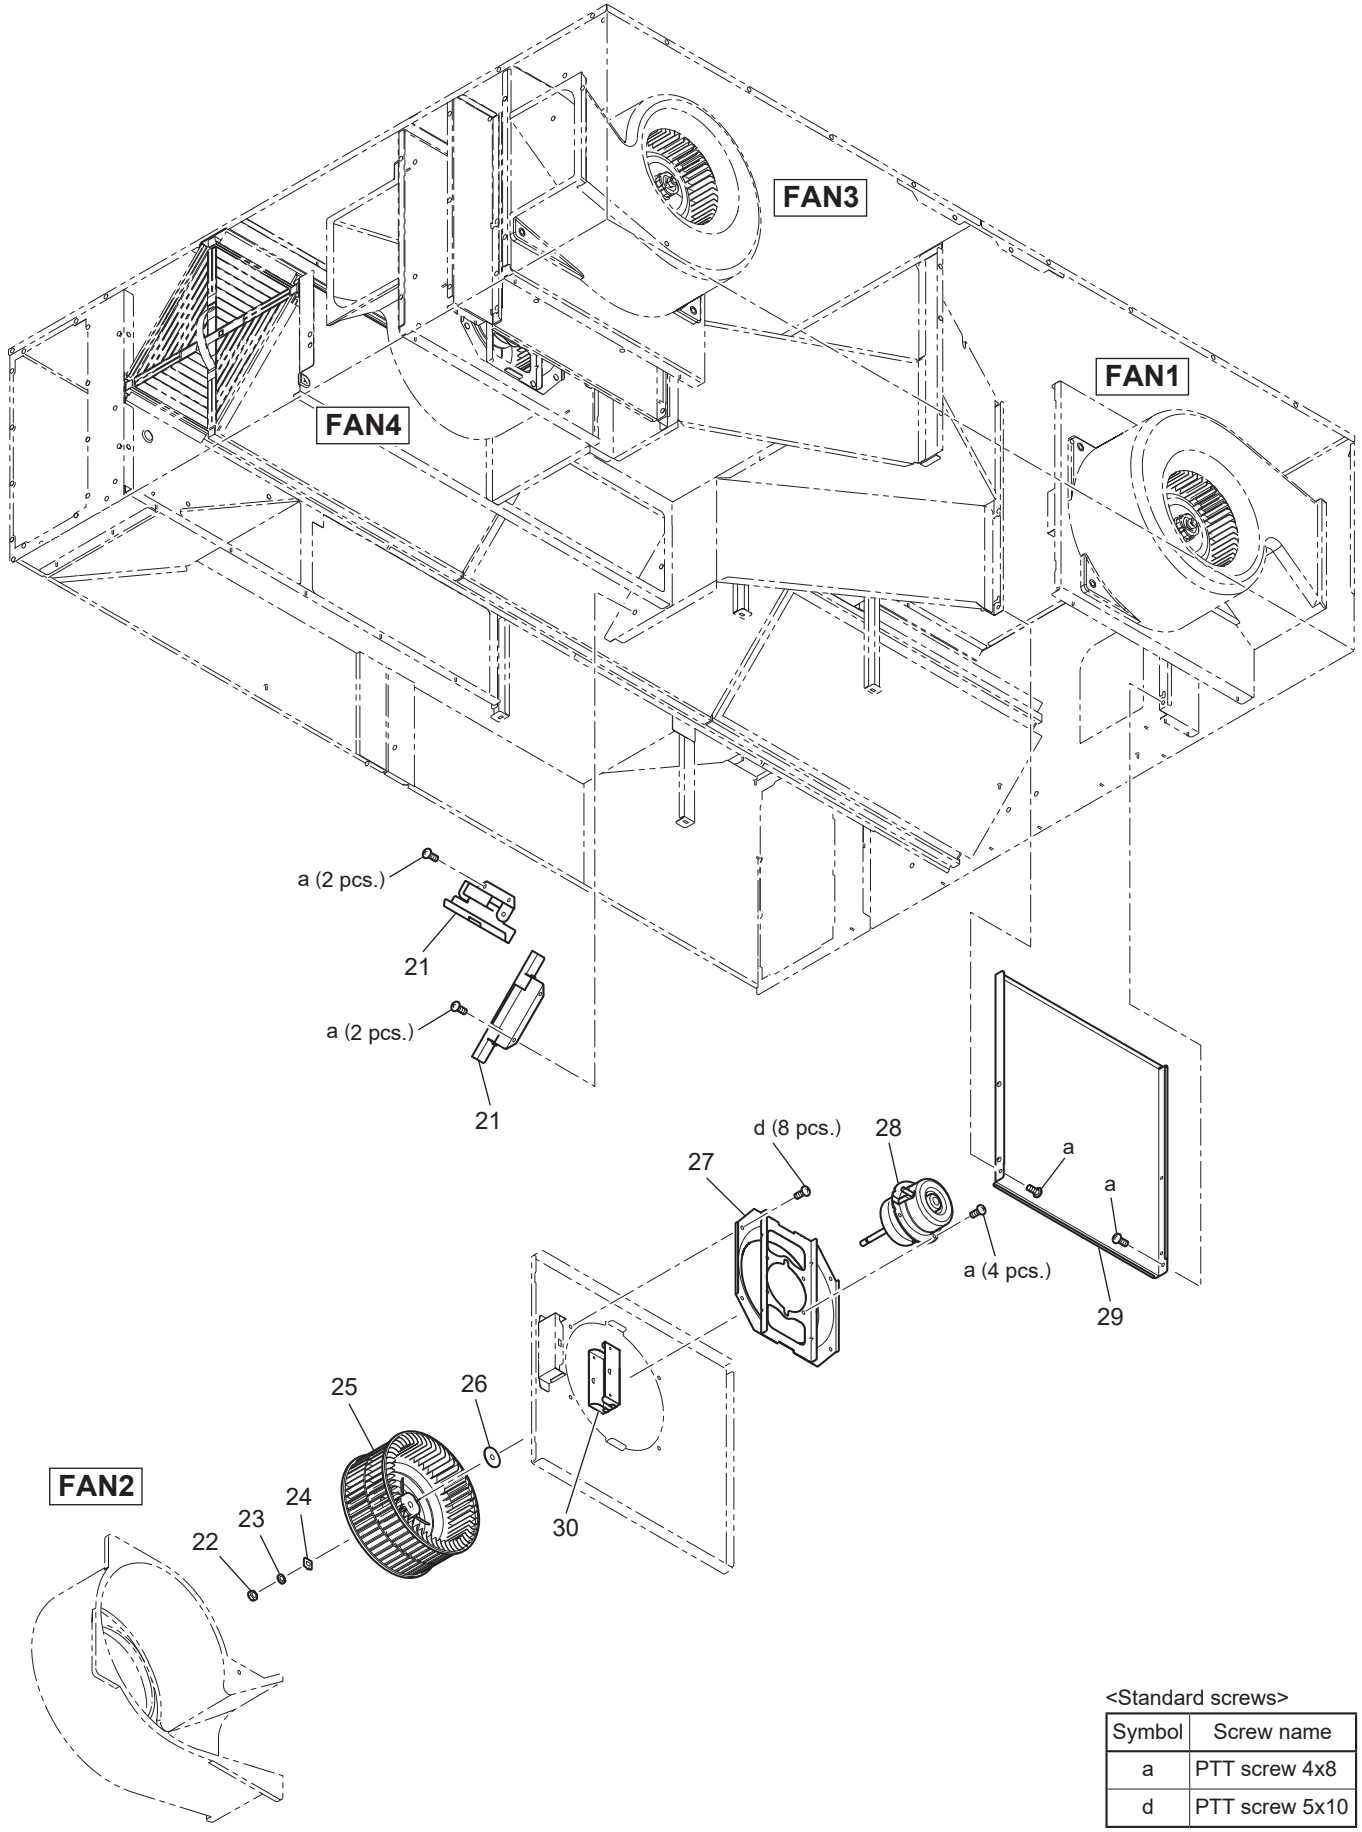

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
d	PTT screw 5x10

Fan parts

LGH-F1200RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Filter curtain	W50 025 715	2		
22	Special nut (M10)	W00 000 195	4		Left-handed
23	Spring washer (10)	W00 000 301	4		
24	Tab washer	W50 013 712	4		
25	Centrifugal fan	W50 025 480	4	⚠	Dia. 245mm
26	Special washer (10)	W50 003 478	4		Outer dia. 40mm
27	Motor fix plate	W50 025 712	4		
28	DC motor	W50 027 454	4	⚠	With the ferrite core
29	Separator	W50 025 711	2		
30	Connector cover (B)	W50 024 708	4		

Control parts

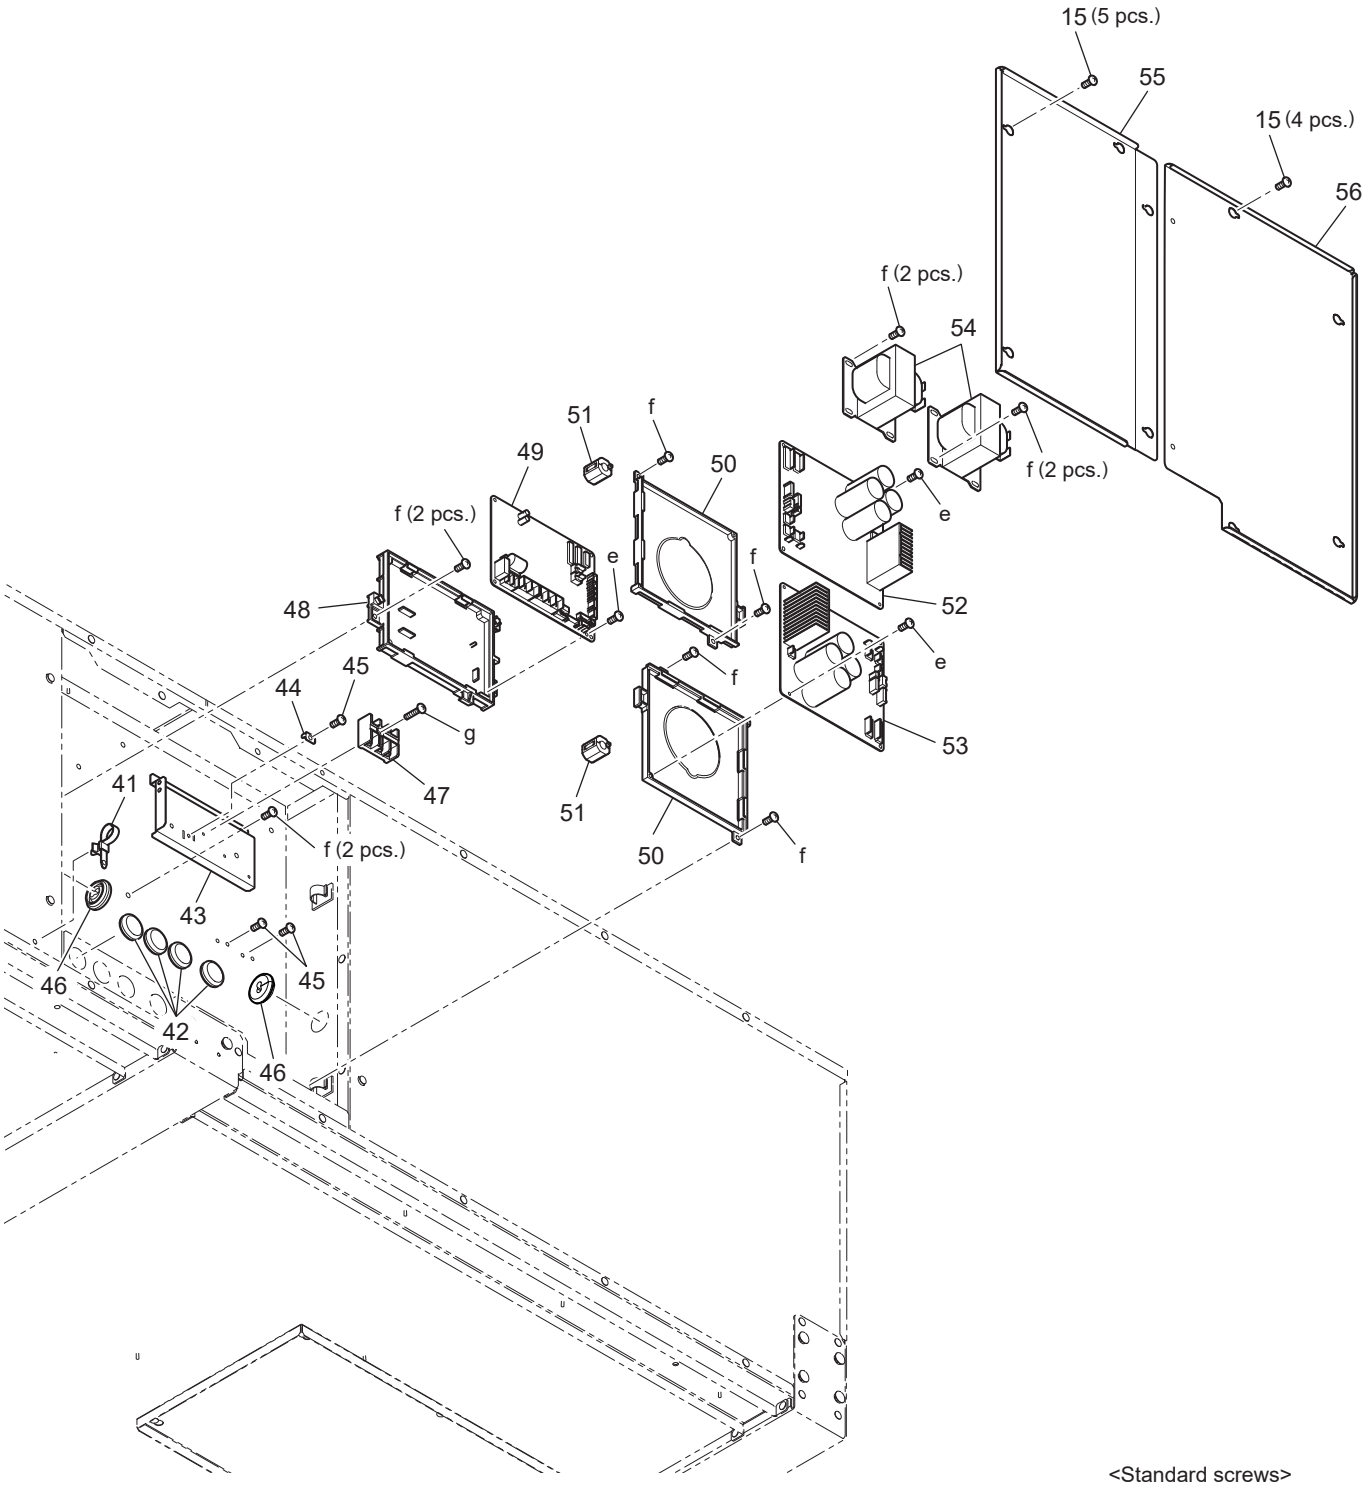

<Standard screws>


Symbol	Screw name
g	PPT screw 4x20
e	PPT screw 3x8
f	PT screw 4x8

Control parts

LGH-F1200RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cord band	W00 000 258	1		
42	Bush	W00 000 289	4		
43	Fix plate	W50 025 704	1		
44	Earth fix plate	W82 001 706	1		
45	PT screw 4x8 BS	W00 000 011	3		
46	Cord bush	W50 024 225	2		
47	Terminal block	W50 027 213	1	⚠	With the lead
48	PCB fix plate	W50 021 706	1		
49	Circuit board	W50 025 171	1	⚠	LG-X08DC-C2
50	PCB fix plate	W50 025 380	2		
51	Ferrite core	W50 024 180	2	⚠	MRFC-13
52	Circuit board	W50 024 171	1	⚠	LG-X08DC-P7
53	Circuit board	W50 024 174	1	⚠	LG-X08DC-P8
54	Reactor	W50 028 180	2	⚠	White・AC10A
55	Control cover A	W50 025 705	1		
56	Control cover B	W50 025 706	1		

Wiring parts

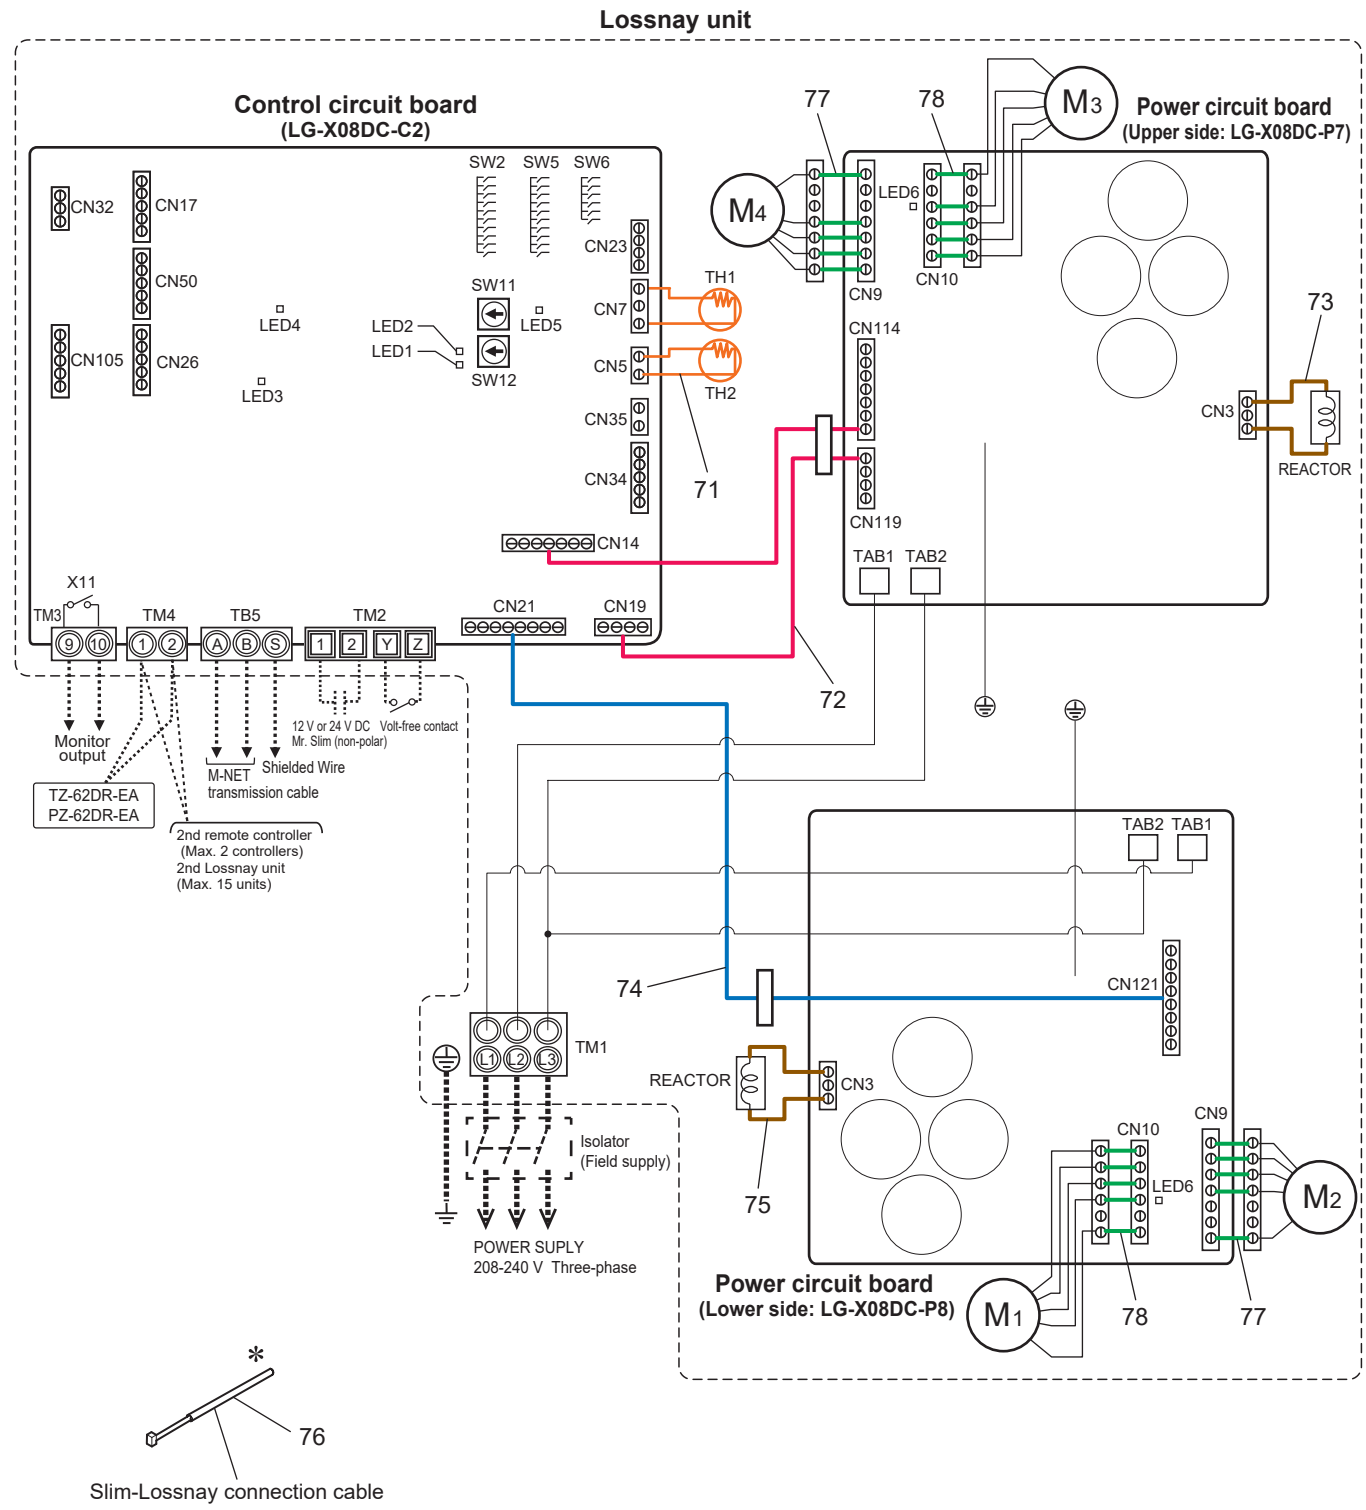


* shows accessory parts.

Wiring parts

LGH-F1200RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
71	Thermistor	W50 025 217	1	⚠	
72	Lead wire	W50 025 213	1	⚠	CN14-114, CN19-119
73	Lead wire	W50 027 215	1	⚠	Reactor 1
74	Lead wire	W50 025 214	1	⚠	CN21-121
75	Lead wire	W50 027 214	1	⚠	Reactor 2
76	Lead wire	W50 004 231	1	⚠	100mm
77	Lead wire	W50 030 226	1	⚠	CN9, motor
78	Lead wire	W50 030 225	1	⚠	CN10, motor

Structural parts

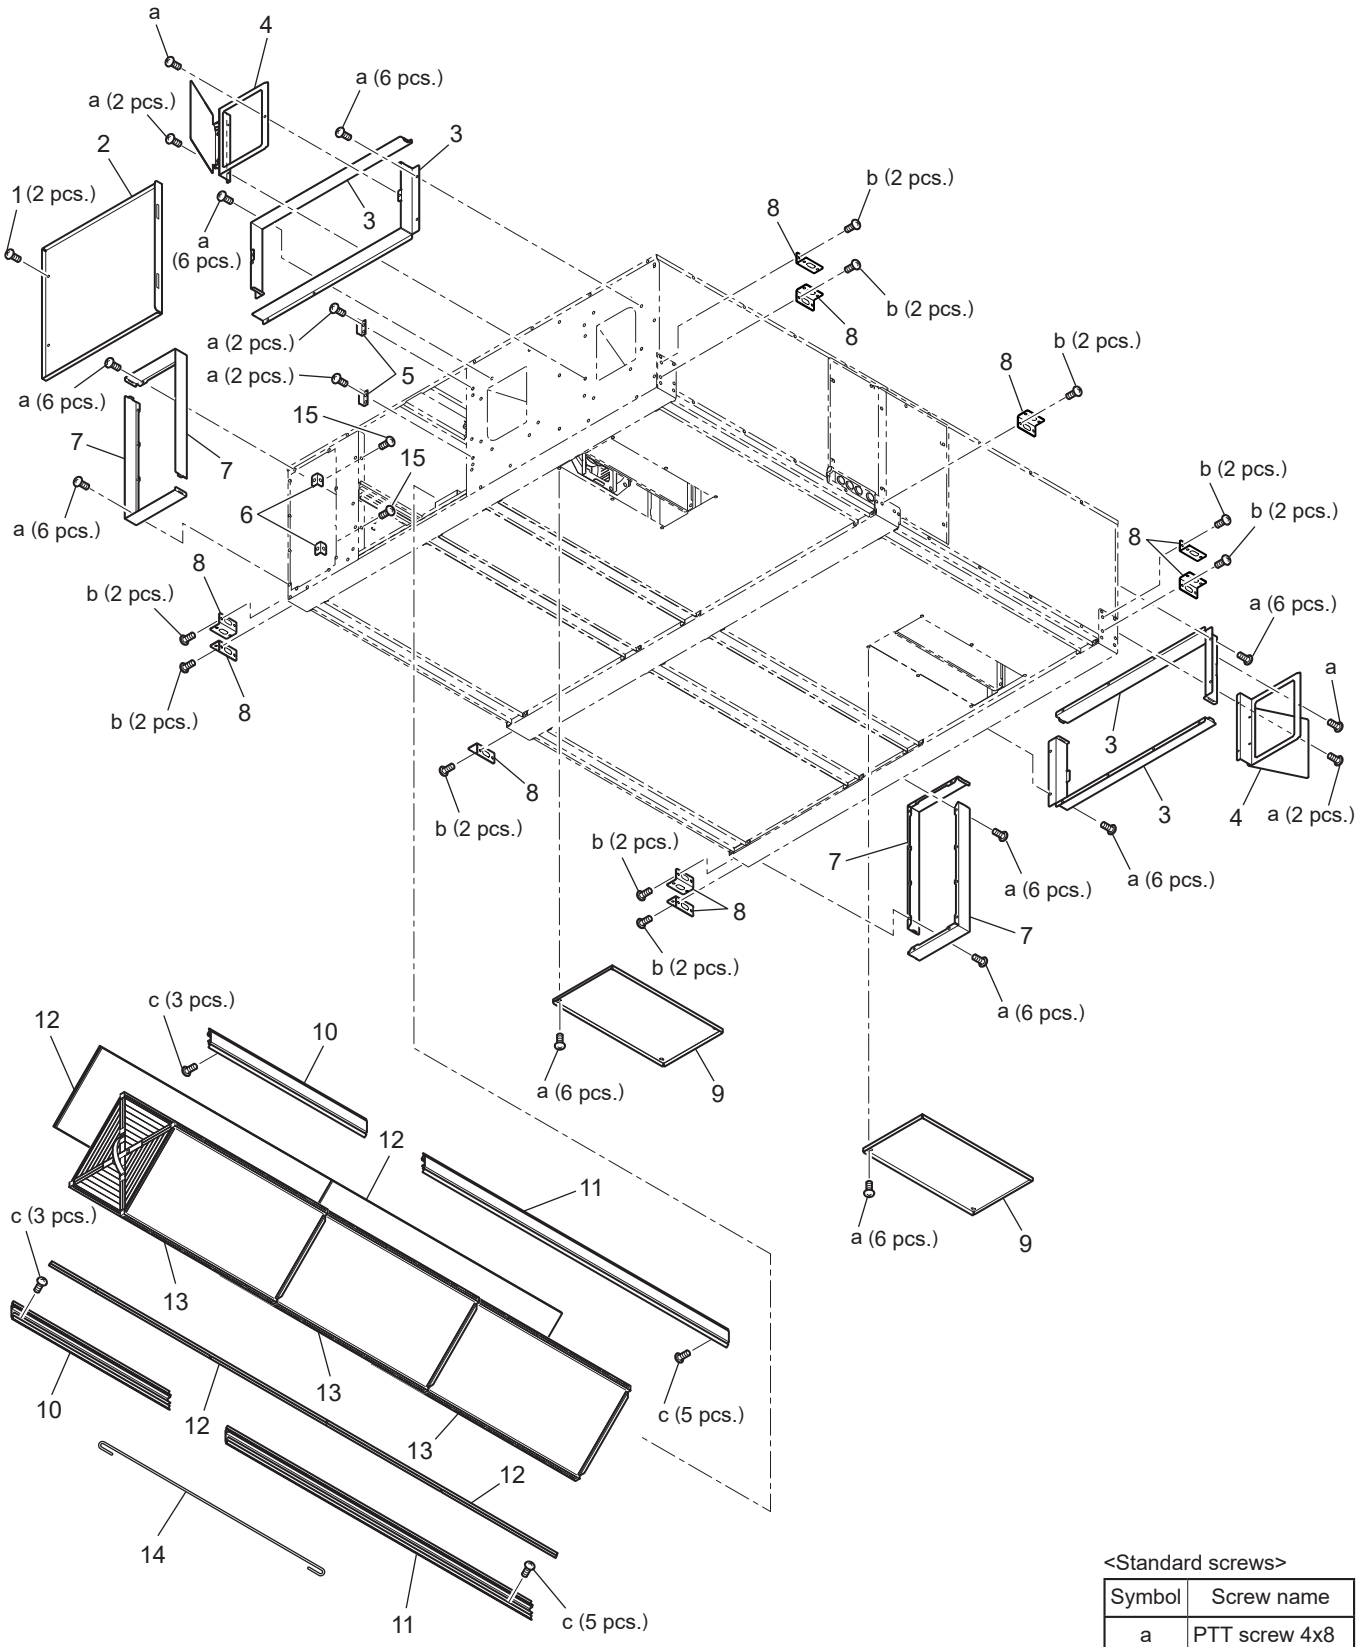

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
b	PT screw 6x12
c	PPT screw 4x8

Structural parts

LGH-F1500RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Special screw 4x12	W00 000 249	2		
2	Maintenance cover	W50 025 833	1		
3	Flange SA/EA	W50 025 709	4		
4	Shutter	W50 025 834	2		
5	Fix piece	W50 013 722	2		
6	Lock piece	W50 025 713	2		
7	Flange OA/RA	W50 025 708	4		
8	Hanger	W50 004 382	10		
9	Maintenance cover	W50 025 710	2		For the fans
10	Lossnay core holder	W50 025 381	2		675mm
11	Lossnay core holder	W50 025 382	2		1315mm
12	Filter	W50 027 717	4	⚠	
13	Lossnay core	W50 027 832	3	⚠	
14	Maintenance rod	W50 025 707	1		
15	Special screw 4x8	W00 000 089	11		

Fan parts

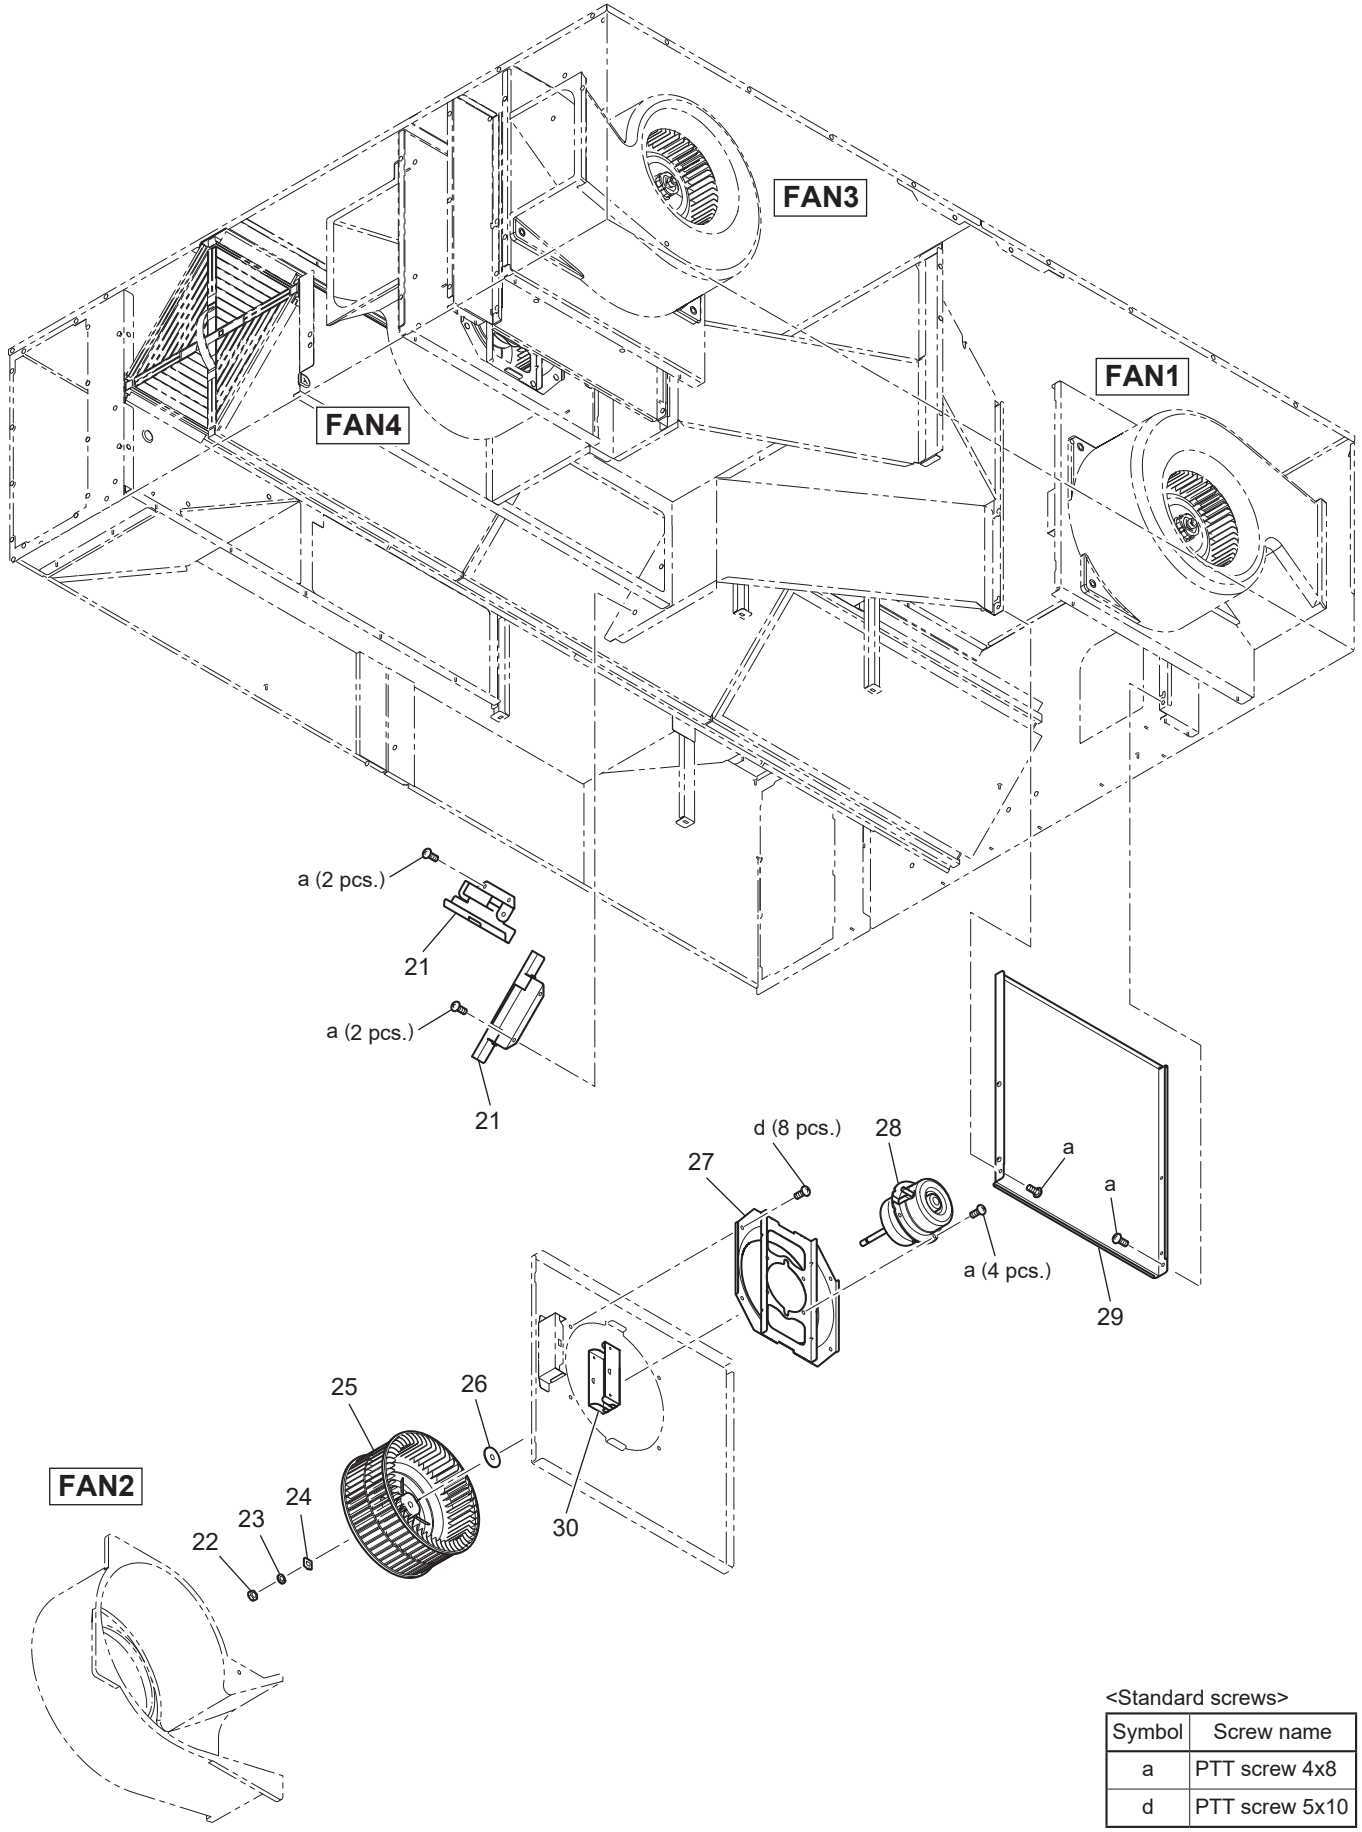

<Standard screws>


Symbol	Screw name
a	PTT screw 4x8
d	PTT screw 5x10

Fan parts

LGH-F1500RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Filter curtain	W50 025 715	2		
22	Special nut (M10)	W00 000 195	4		Left-handed
23	Spring washer (10)	W00 000 301	4		
24	Tab washer	W50 013 712	4		
25	Centrifugal fan	W50 025 480	4	⚠	Dia. 245mm
26	Special washer (10)	W50 003 478	4		Outer dia. 40mm
27	Motor fix plate	W50 025 712	4		
28	DC motor	W50 027 455	4	⚠	With the ferrite core
29	Separator	W50 025 711	2		
30	Connector cover (B)	W50 024 708	4		

Control parts

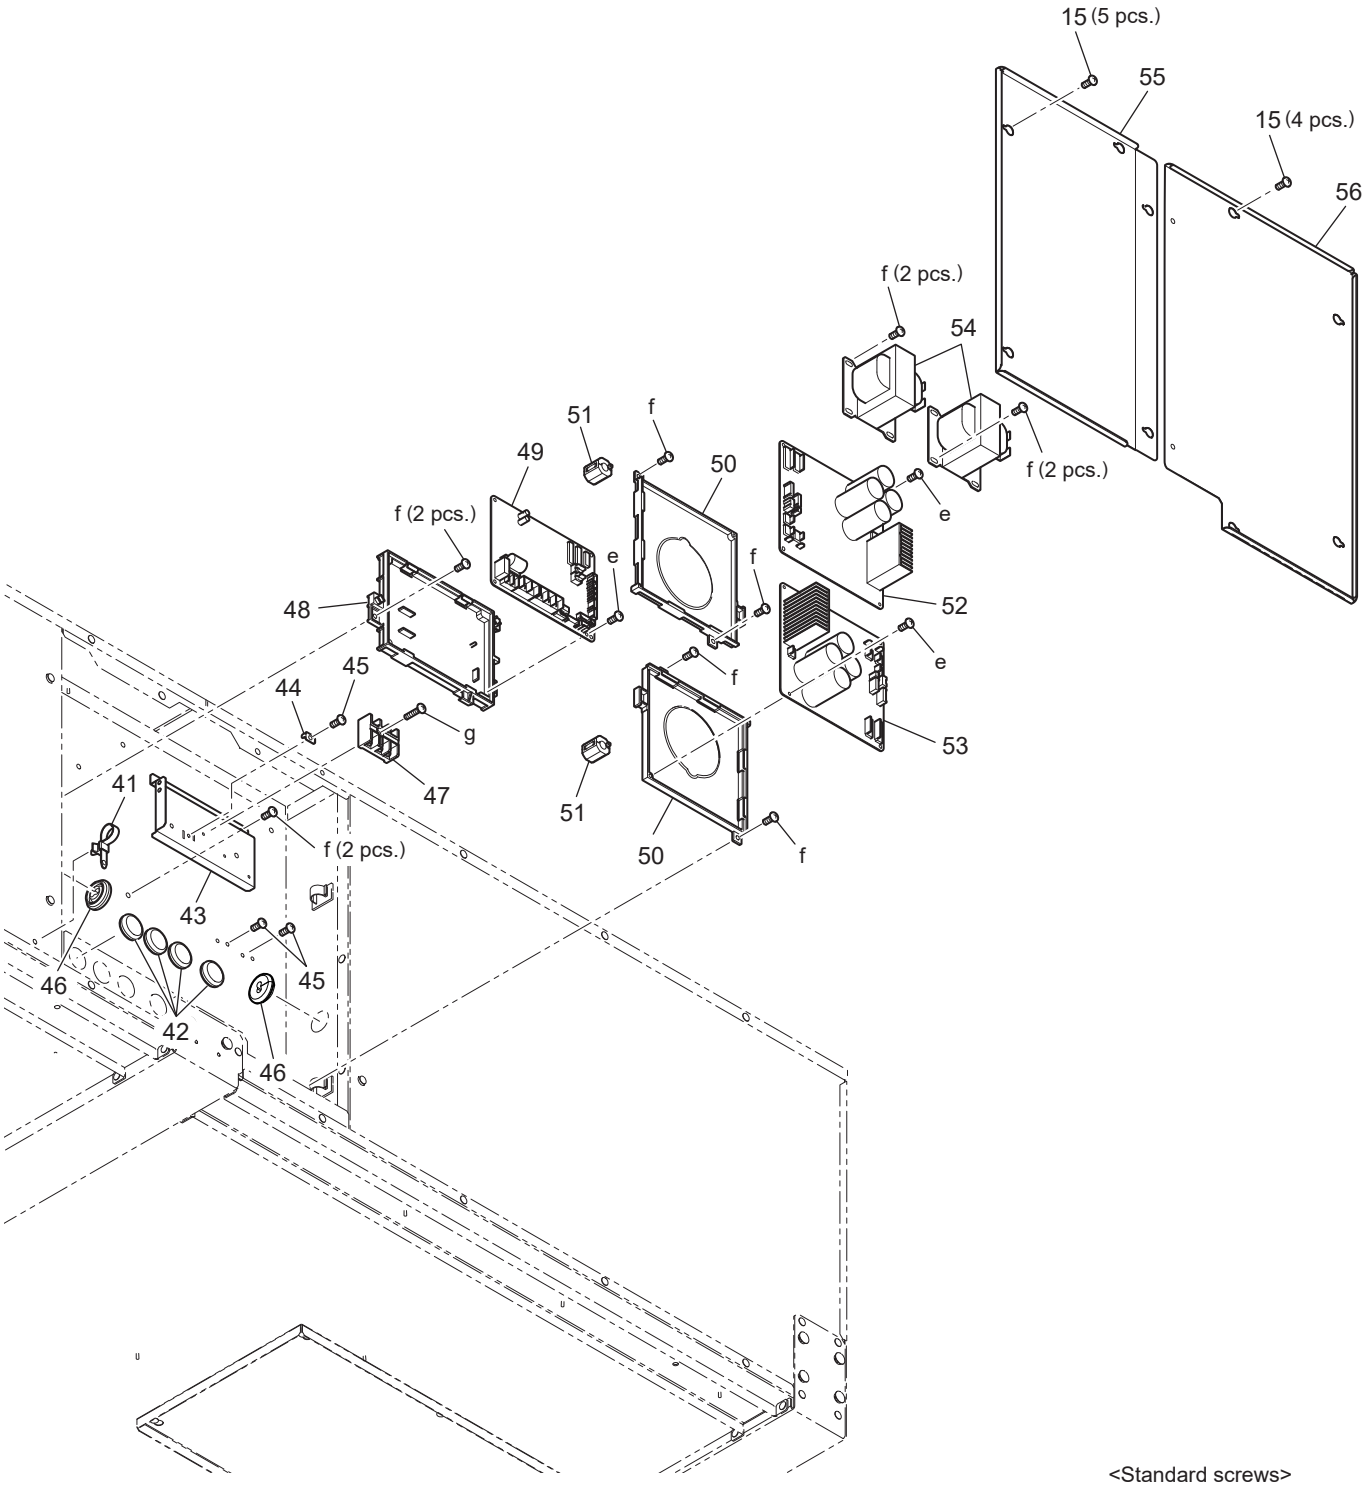

<Standard screws>


Symbol	Screw name
g	PPT screw 4x20
e	PPT screw 3x8
f	PT screw 4x8

Control parts

LGH-F1500RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cord band	W00 000 258	1		
42	Bush	W00 000 289	4		
43	Fix plate	W50 025 704	1		
44	Earth fix plate	W82 001 706	1		
45	PT screw 4x8 BS	W00 000 011	3		
46	Cord bush	W50 024 225	2		
47	Terminal block	W50 027 213	1	⚠	With the lead
48	PCB fix plate	W50 021 706	1		
49	Circuit board	W50 025 171	1	⚠	LG-X08DC-C2
50	PCB fix plate	W50 025 380	2		
51	Ferrite core	W50 024 180	2	⚠	MRFC-13
52	Circuit board	W50 024 171	1	⚠	LG-X08DC-P7
53	Circuit board	W50 024 174	1	⚠	LG-X08DC-P8
54	Reactor	W50 028 180	2	⚠	White・AC10A
55	Control cover A	W50 025 705	1		
56	Control cover B	W50 025 706	1		

Wiring parts

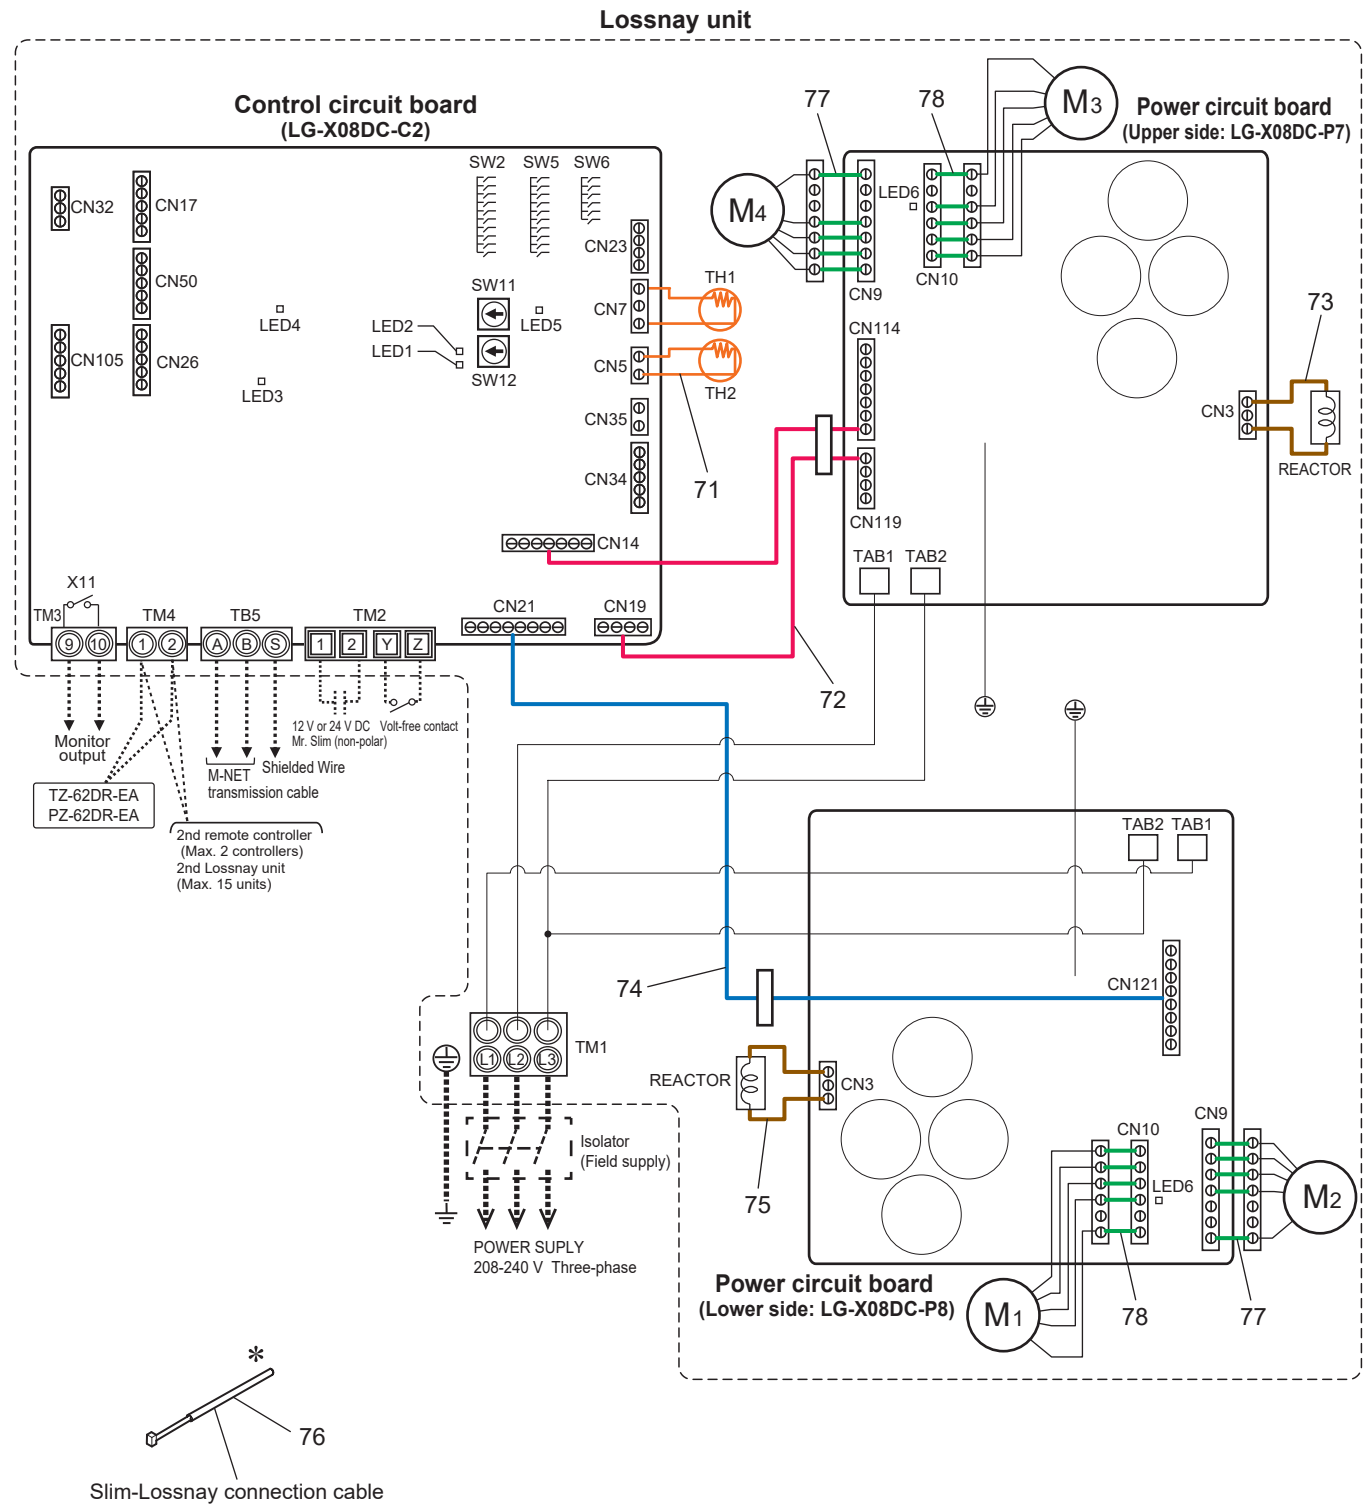

* shows accessory parts.

Wiring parts

LGH-F1500RVXT2-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
71	Thermistor	W50 025 217	1	⚠	
72	Lead wire	W50 025 213	1	⚠	CN14-114, CN19-119
73	Lead wire	W50 027 215	1	⚠	Reactor 1
74	Lead wire	W50 025 214	1	⚠	CN21-121
75	Lead wire	W50 027 214	1	⚠	Reactor 2
76	Lead wire	W50 004 231	1	⚠	100mm
77	Lead wire	W50 030 226	1	⚠	CN9, motor
78	Lead wire	W50 030 225	1	⚠	CN10, motor