


LGH-F470RVX-E

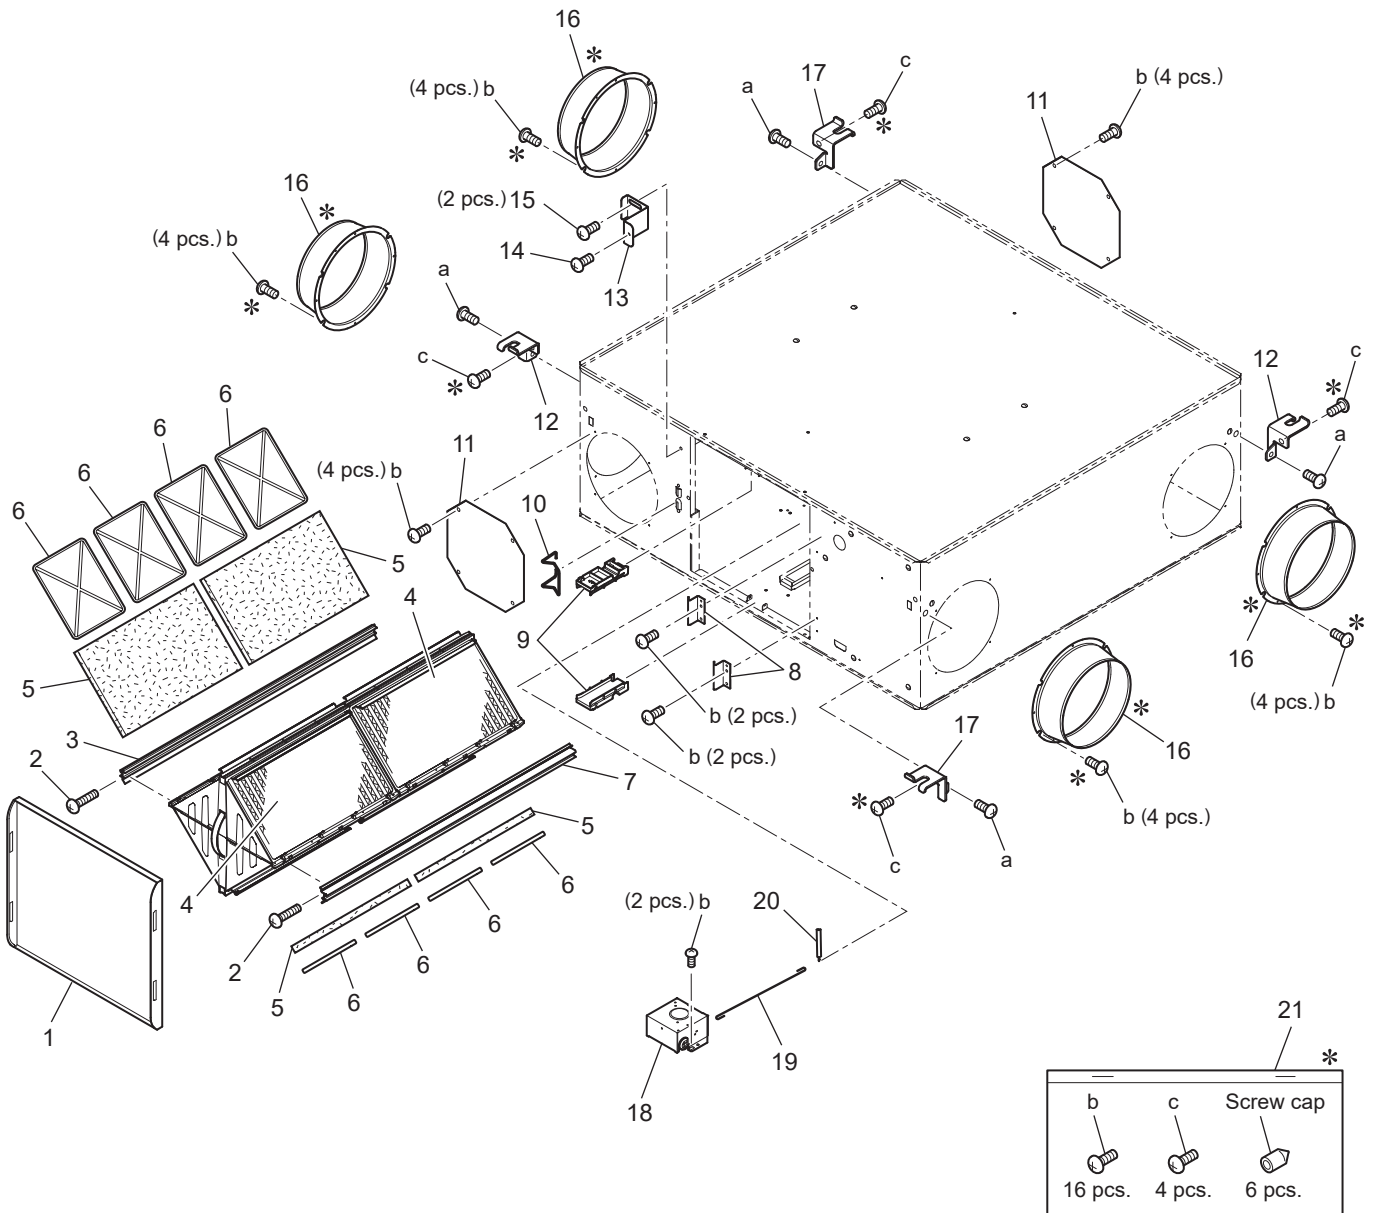

<Standard screws>


Symbol	Screw name
a	PT screw 6x12
b	PTT screw 4x8
c	PT screw 5x10

* shows accessory parts.

LGH-F470RVX-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	W50 013 711	1		
2	Special screw M4	W00 000 101	2		
3	Core guide L	W50 013 384	1		
4	Lossnay core	W50 004 720	2	⚠	With the filter stoppers
5	Filter	W50 003 738	4	⚠	
6	Filter stopper	W50 016 711	8		
7	Core guide R	W50 013 391	1		
8	Fix piece	W50 013 722	2		
9	Lead support	W50 013 706	2		
10	Hinge	W50 004 344	1		
11	Cover	W50 003 708	2		
12	Hanger L	W36 002 380	2		
13	Fix piece	W50 004 731	1		
14	Special screw 4x8	W00 000 089	4		
15	Special screw 4x8	W00 000 098	2		
16	Flange	W50 003 610	4		
17	Hanger R	W50 004 380	2		
18	GM assembly	W50 019 261	1	⚠	AC220・240V
19	Rod	W50 004 150	1		
20	Pull spring	W50 013 157	1		
21	Screws in bag	W50 013 051	1		

Air exhaust fan assembly

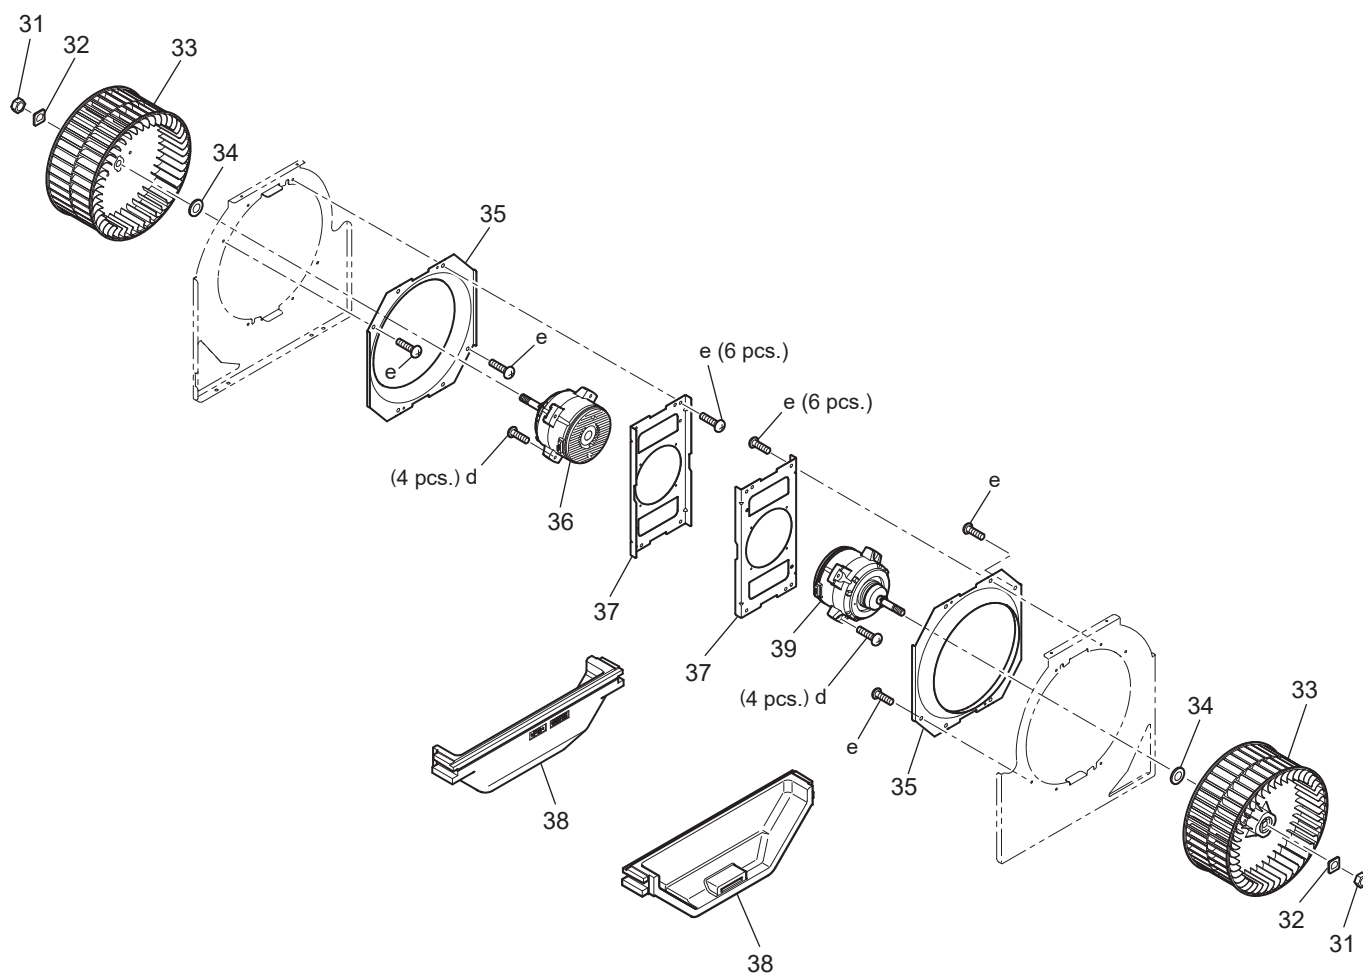

Air supply fan assembly

<Standard screws>


Symbol	Screw name
d	PTT screw 4x25
e	PTT screw 5x10

LGH-F470RVX-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
31	Special nut (M12)	W00 000 117	2		Left-handed
32	Tab washer	W50 004 730	2		
33	Centrifugal fan	W50 004 482	2	⚠	φ 245
34	Washer (12)	W00 000 123	2		
35	Inlet ring	W50 004 725	2		
36	DC motor (EA)	W50 019 456	1	⚠	
37	Motor fix plate	W50 004 736	2		
38	Separator	W50 013 487	2		
39	DC motor (SA)	W50 019 455	1	⚠	







<Standard screws>

Symbol	Screw name
b	PTT screw 4x8
f	PPT screw 3x8
g	PT screw 4x8
h	PPT screw 4x20

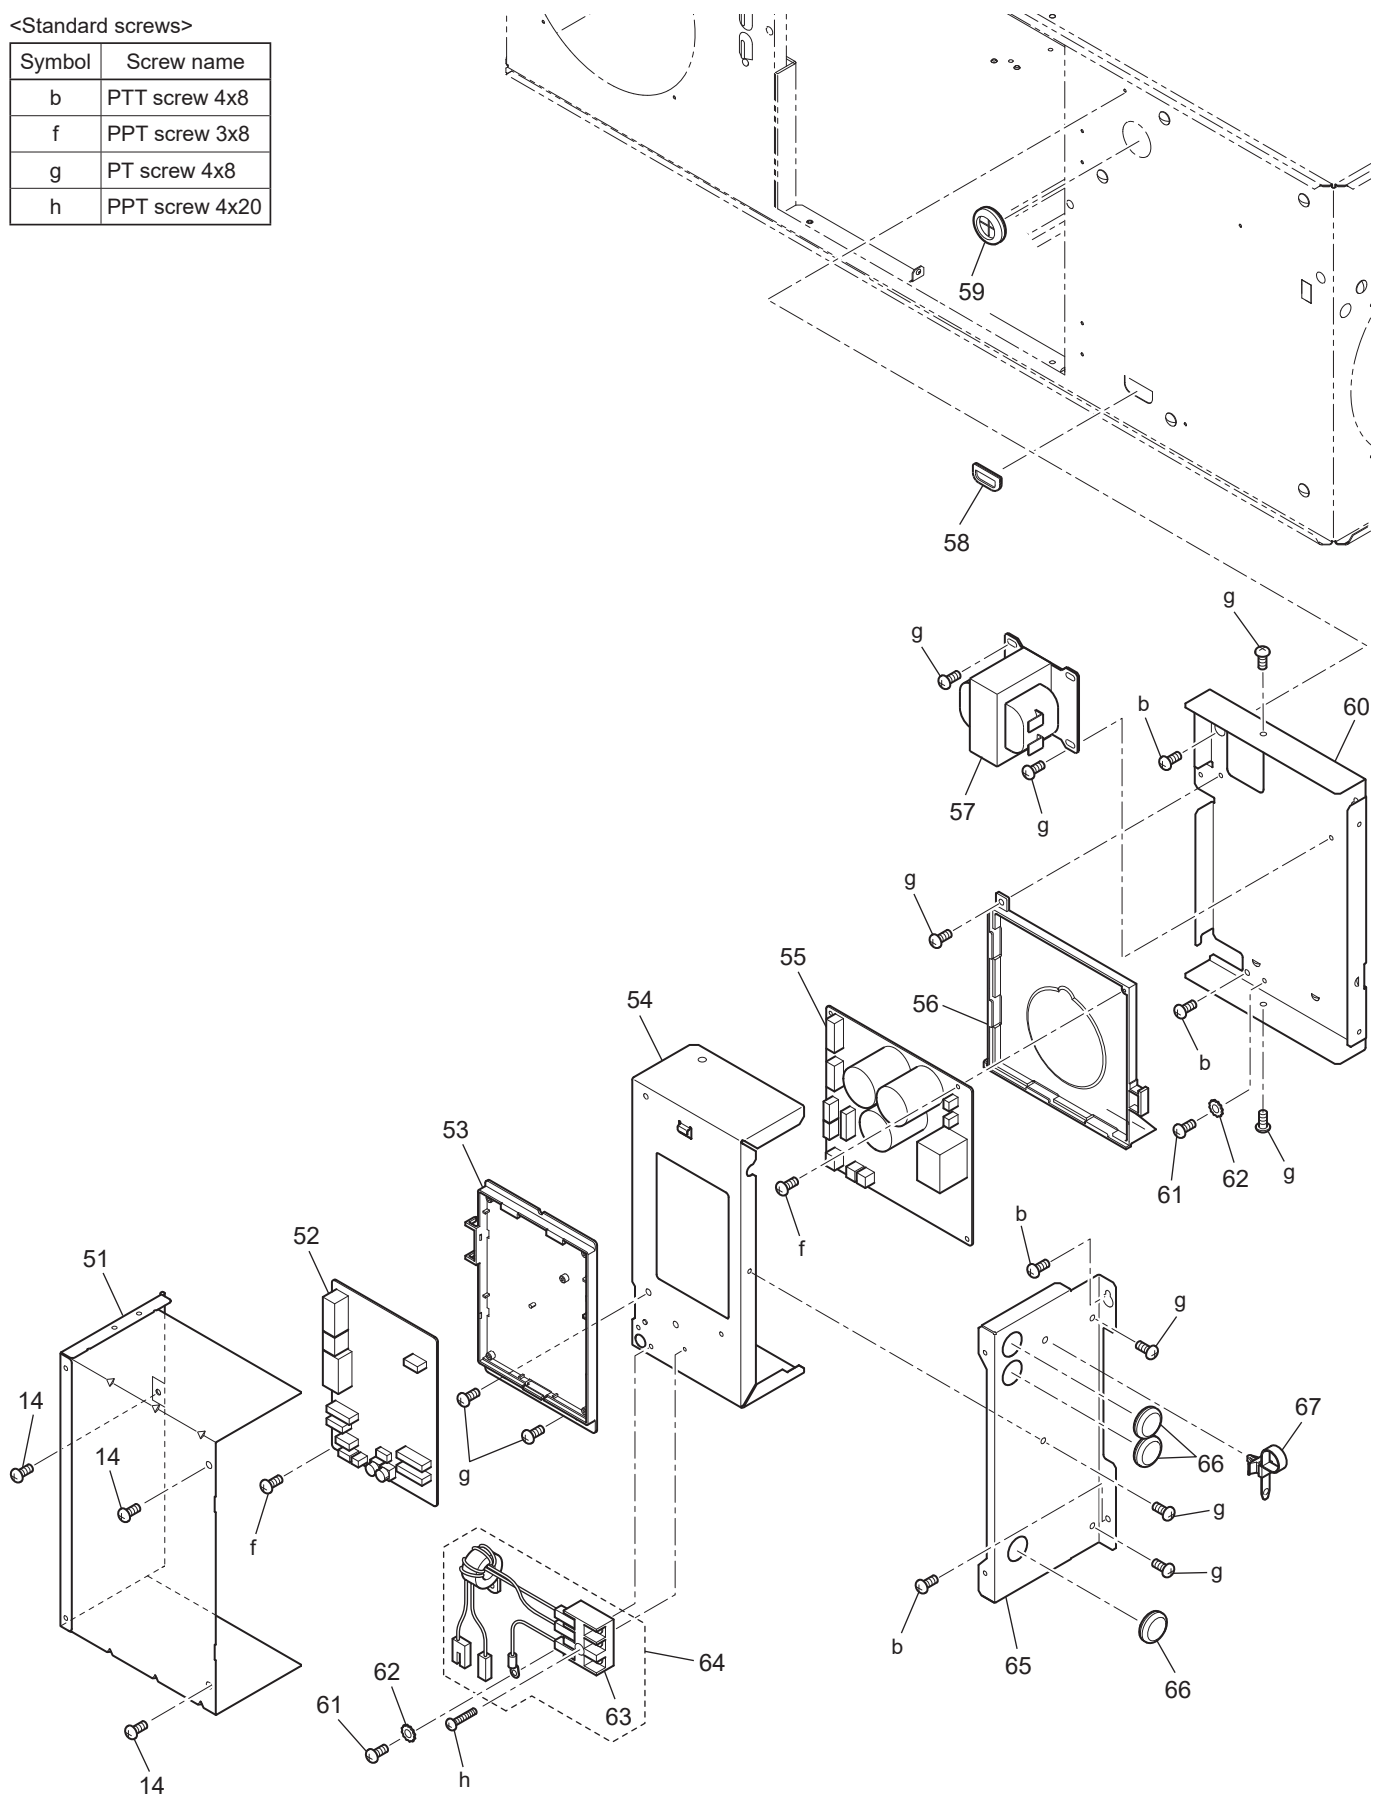

LGH-F470RVX-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
51	Control box cover	W50 019 707	1		
52	Circuit board	W50 004 174	1	⚠	LG-X07DC-E・C
53	PCB fix plate	W50 004 381	1		
54	Sub control base	W50 019 705	1		
55	Circuit board	W50 004 173	1	⚠	LG-X07DC-E・P
56	PCB case	W50 004 383	1		
57	Reactor	W50 004 180	1		AC6.5A
58	Bush	W00 000 278	1		
59	Cord bush	W00 000 277	1		
60	Control base	W50 019 704	1		
61	PT screw 4x8 BS	W00 000 011	2		
62	Lock washer (4)	W00 000 082	2		
63	Terminal block	W45 602 242	1	⚠	3P
64	Terminal block	W50 019 213	1	⚠	With the lead wires
65	Side plate	W50 019 706	1		
66	Cord bush	W00 000 270	3		
67	Cord band	W00 000 258	1		

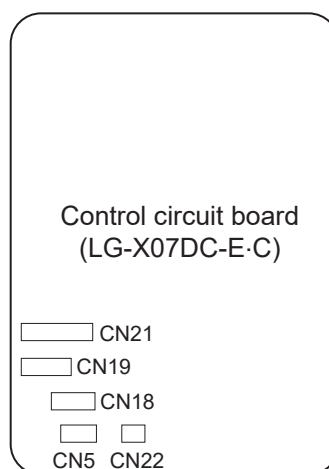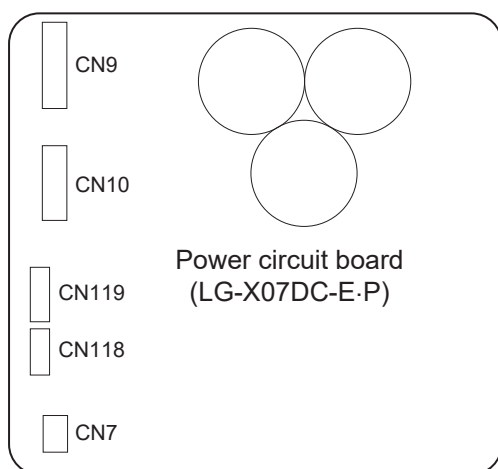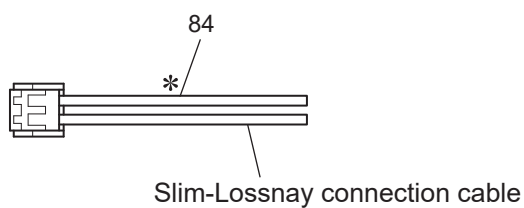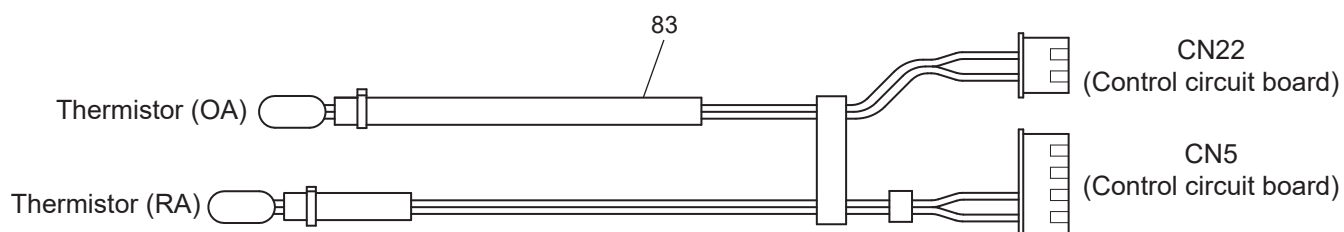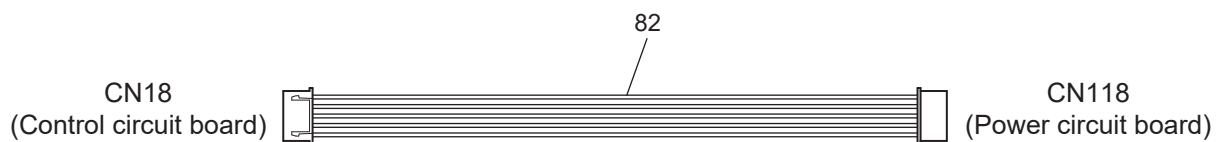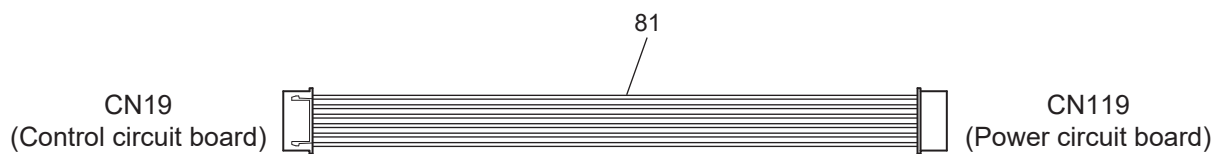

* shows accessory parts.

LGH-F470RVX-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Lead wire	W36 002 214	1	⚠	CN19-CN119
82	Lead wire	W36 002 215	1	⚠	CN18-CN118
83	Thermistor	W50 013 170	1	⚠	OA・RA set
84	Lead wire	W50 004 231	1	⚠	100mm